

# ALPHABETICAL INDEX

SECTION **IDX**

GI

MA

EM

LC

EC

FE

CL

MT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

**IDX**

## ALPHABETICAL INDEX

---

### A

AAC/V - Wiring diagram.....	EC-130
A/C air flow.....	HA-15
A/C component layout.....	HA-14
A/C compressor clutch removal and installation .....	HA-69, 73
A/C compressor precaution .....	HA-7
A/C compressor special service tool .....	HA-7
A/C control linkage adjustment (manual A/C) .....	HA-52
A/C control operation (manual A/C).....	HA-17
A/C diagnostic work flow (manual A/C) .....	HA-18
A/C harness layout (manual A/C) .....	HA-32
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure .....	HA-55
A/C HFC134a (R134a) system service tools .....	HA-9
A/C HFC134a system service equip- ment precaution.....	HA-11
A/C lubricant (R134a) .....	HA-57
A/C operational check.....	HA-19
A/C performance chart.....	HA-27
A/C performance test diagnoses .....	HA-25
A/C relay .....	HA-51
A/C switch .....	HA-17, 50
A/C symptom chart (manual A/C) .....	HA-21
A/C trouble diagnoses (manual A/C) .....	HA-18
A/C, M - Wiring diagram .....	HA-36
Accelerator control system .....	FE-2
Accelerator wire adjustment.....	FE-3
Air bag.....	RS-6
Air bag disposal .....	RS-14
Air bag precautions .....	GI-2
Air bleeding (hydraulic clutch) .....	CL-6
Air bleeding for brake system .....	BR-5
Air cleaner filter replacement (KA engine) .....	MA-17
Air cleaner filter replacement (NA engine) .....	MA-26
Air cleaner filter replacement (QD & TD engine).....	MA-47
Air cleaner filter replacement (Z engine).....	MA-36
Air conditioner cut control .....	EC-19
Air flow meter - See Mass air flow sensor.....	EC-88
Alternator .....	EL-48
Angular tightening application .....	EM-2
Antenna.....	EL-134
Audio.....	EL-128
AUDIO - Wiring diagram.....	EL-128
Audio and A/C control removal and installation - See Instrument panel .....	BT-12
Auto lock free running hub .....	FA-16
Automatic choke .....	EC-186, 231
Auxiliary air control (AAC) valve .....	EC-130

Axle housing (rear)..... RA-6

### B

Back window .....	BT-23
Back-up lamp .....	EL-62
Back-up lamp switch (M/T) .....	MT-9, 10, 14
BACK/L - Wiring diagram .....	EL-62
Ball joint front axle .....	FA-39
Battery.....	EL-20
Baulk ring (M/T) .....	MT-15, 16, 35
Blower motor .....	HA-50
Blower resistor .....	HA-50
Body alignment .....	BT-38
Body mounting .....	BT-37
Boring/horning cylinder block (KA engine) .....	EM-43
Boring/horning cylinder block (NA engine) .....	EM-82
Boring/horning cylinder block (Z engine).....	EM-129
Brake booster.....	BR-16
Brake fluid change .....	BR-4
Brake fluid level .....	MA-54
Brake fluid level and line check .....	BR-4
Brake hydraulic line.....	BR-6
Brake inspection .....	MA-55
Brake lines and cables inspection.....	MA-54
Brake lining wear temporary checking .....	MA-56
Brake master cylinder .....	BR-13
Brake pedal .....	BR-11
Bumper, front .....	BT-5
Bumper, rear .....	BT-8
BUZZER - Wiring diagram.....	EL-108

### C

Cab body .....	BT-36
Camshaft inspection (KA engine) .....	EM-30
Camshaft inspection (NA engine).....	EM-69
Camshaft inspection (QD & TD engine)....	EM-171
Camshaft inspection (Z engine).....	EM-113
Camshaft position sensor (CMPS) .....	EC-81
Canister-See EVAP canister .....	EC-20
Carburetor construction .....	EC-177, 222
Center bearing assembly (propeller shaft).....	PD-11
Center bearing disassembly (propeller shaft).....	PD-10
Center case transfer .....	TF-9
CHARGE - Wiring diagram.....	EL-38
Charging system .....	EL-38
Chassis and body maintenance .....	MA-51
CHOKE - Wiring diagram .....	EC-186, 231
Cigarette lighter .....	EL-123
Circuit breaker .....	EL-15
Closed loop control .....	EC-16
Clutch cover.....	CL-14

# ALPHABETICAL INDEX

---

Clutch disc .....	CL-13		Cooling fan (QD & TD engine).....	LC-40, 45
Clutch fluid level .....	MA-51		Cooling fan control system (QD & TD engine).....	LC-44
Clutch master cylinder.....	CL-7	<b>GI</b>	Counter gear (M/T).....	MT-15, 16, 35
Clutch operating cylinder.....	CL-9		Counter gear transfer .....	TF-10
Clutch pedal.....	CL-5	<b>MA</b>	Coupling sleeve (M/T).....	MT-15, 16, 35
Clutch release bearing .....	CL-10		Crank angle sensor built into distributor - See Camshaft position sensor.....	EC-81
Clutch withdrawal lever .....	CL-10		Crankcase emission control system - See positive crankcase ventilation .....	EC-22, 217, 252
CMPS - Wiring diagram.....	EC-81	<b>EM</b>	Crankcase ventilation system - See Positive crankcase ventilation .....	EC-22
Collision diagnosis .....	RS-21, 42		Crankshaft (KA engine) .....	EM-44
Combination lamp, front, removal and installation .....	BT-5	<b>EC</b>	Crankshaft (NA engine) .....	EM-83
Combination lamp, rear, removal and installation .....	BT-23		Crankshaft (QD & TD engine) .....	EM-165
Combination meter .....	EL-76	<b>FE</b>	Crankshaft (Z engine) .....	EM-131
Combination meter removal and instal- lation - See Instrument panel .....	BT-12		Crankshaft position sensor (POS) .....	EC-81
Combination switch.....	EL-49	<b>CL</b>	Crankshaft position sensor (REF).....	EC-81
Combustion chamber replacement (NA engine) .....	EM-52		Cylinder block (KA engine) .....	EM-40
Combustion chamber replacement (QD & TD engine) .....	EM-144	<b>MT</b>	Cylinder block (NA engine) .....	EM-79
Compression pressure (KA engine) .....	EM-12		Cylinder block (QD & TD engine) .....	EM-160
Compression pressure (NA engine) .....	EM-53	<b>TF</b>	Cylinder block (Z engine) .....	EM-124
Compression pressure (QD & TD engine) .....	EM-136		Cylinder block boring (KA engine) .....	EM-43
Compression pressure (Z engine).....	EM-92	<b>PD</b>	Cylinder block boring (NA engine) .....	EM-82
Compressor clutch removal and installation .....	HA-69, 73		Cylinder block boring (QD & TD engine) .....	EM-160
Compressor precaution.....	HA-7	<b>FA</b>	Cylinder block boring (Z engine) .....	EM-129
Compressor special service tool.....	HA-7		Cylinder head (KA engine) .....	EM-26
Connecting rod (KA engine) .....	EM-42	<b>RA</b>	Cylinder head (NA engine) .....	EM-67
Connecting rod (NA engine) .....	EM-81		Cylinder head (QD & TD engine) .....	EM-138
Connecting rod (QD & TD engine).....	EM-163	<b>BR</b>	Cylinder head (Z engine).....	EM-107, 121
Connecting rod bearing clearance (KA engine) .....	EM-46		Cylinder head bolt tightening (NA engine) .....	EM-61
Connecting rod bearing clearance (NA engine) .....	EM-84	<b>ST</b>	Cylinder head bolt tightening (QD & TD engine) .....	EM-149
Connecting rod bearing clearance (QD & TD engine) .....	EM-163		Cylinder head bolt tightening (Z engine).....	EM-102, 117
Connecting rod bearing clearance (Z engine).....	EM-126	<b>RS</b>	Cylinder head gasket selection (QD & TD engine) .....	EM-148
Connecting rod bushing clearance (KA engine) .....	EM-47		Cylinder liner (TD engine) .....	EM-161
Connecting rod bushing clearance (QD & TD engine) .....	EM-164	<b>BT</b>		
CONSULT for ECCS .....	EC-45		Data link connector for Consult .....	EC-45
CONSULT general information.....	GI-33	<b>HA</b>	DEF - Wiring diagram.....	EL-125
Control lever (M/T).....	MT-17, 18, 37		Defroster door control rod adjustment.....	HA-52
Control lever transfer.....	TF-8	<b>EL</b>	Diagnosis sensor unit.....	RS-10
Control units (terminal arrangement) .....	Foldout		Diagnostic trouble code (DTC) for ECCS OBD system .....	EC-37
Coolant mixture ratio .....	MA-13	<b>IDX</b>	Differential carrier assembly (C200) .....	PD-52
Coolant replacement (KA engine) .....	MA-15		Differential carrier assembly (H233B).....	PD-73
Coolant replacement (NA engine) .....	MA-24		Differential carrier assembly (R180A) .....	PD-28
Coolant replacement (QD & TD engine) .....	MA-43		Differential carrier disassembly (C200).....	PD-35
Coolant replacement (Z engine).....	MA-33		Differential carrier disassembly (H233B) .....	PD-57
Cooling circuit (KA engine) .....	LC-7		Differential gear oil replacement.....	MA-53
Cooling circuit (NA engine).....	LC-17		Dimensions.....	GI-40
Cooling circuit (QD & TD engine) .....	LC-38		Distributor.....	EC-212, 248
Cooling circuit (Z engine) .....	LC-27			
Cooling fan (KA engine) .....	LC-11			

# ALPHABETICAL INDEX

Distributor ignition (DI) system.....	EC-18
D/LOCK - Wiring diagram.....	EL-153
Door glass.....	BT-10
Door lock.....	BT-10
Door mirror.....	BT-35
Door trim .....	BT-18
Door, front.....	BT-10
Door, rear .....	BT-11
Drive belt inspection (KA engine).....	MA-14
Drive belt inspection (NA engine).....	MA-23
Drive belt inspection (QD & TD engine).....	MA-41
Drive belt inspection (Z engine) .....	MA-33
Drive chain transfer .....	TF-10
Drive pinion diff. inspection (C200).....	PD-39
Drive pinion diff. inspection (H233B) .....	PD-61
Drive pinion height (C200) .....	PD-48
Drive pinion height (H233B).....	PD-68
Drive pinion height (R180A).....	PD-25
Drive shaft (front).....	FA-26

## E

ECCS basic inspection .....	EC-58
ECCS circuit diagram.....	EC-9
ECCS component parts location .....	EC-11
ECCS fail-safe system .....	EC-61
ECCS on board diagnostic system.....	EC-37
ECCS relay .....	EC-74
ECCS symptom matrix chart .....	EC-62
ECCS system diagram and chart .....	EC-10
ECM input/output signal.....	EC-68
ECTS - Wiring diagram.....	EC-94
EGRC/V - Wiring diagram.....	EC-139
Electrical diagnoses .....	GI-19
Electrical ignition system.....	EC-18
Engine compartment.....	BT-39
Engine control module (ECM).....	EC-6
Engine coolant temperature sensor (ECTS) .....	EC-94, 296
Engine oil filter replacement (KA engine) .....	MA-18
Engine oil filter replacement (NA engine) .....	MA-28
Engine oil filter replacement (QD & TD engine) .....	MA-42
Engine oil filter replacement (Z engine).....	MA-38
Engine oil precautions .....	GI-5
Engine oil replacement (KA engine).....	MA-18
Engine oil replacement (NA engine).....	MA-28
Engine oil replacement (QD & TD engine) .....	MA-42
Engine oil replacement (Z engine) .....	MA-37
Engine outer component parts (KA engine) .....	EM-11
Engine outer component parts (NA engine) .....	EM-50
Engine outer component parts (QD & TD engine).....	EM-134

Engine outer component parts (Z engine).....	EM-90
Engine removal (KA engine).....	EM-38
Engine removal (NA engine) .....	EM-77
Engine removal (QD & TD engine) .....	EM-154
Engine room - See Engine compartment .....	BT-39
Engine serial number .....	GI-39
EVAP canister .....	EC-20, 215, 250
EVAP canister purge control solenoid valve .....	EC-139
EVAP canister purge control valve .....	EC-20
EVAP vapor lines inspection (KA engine) .....	MA-20
EVAP vapor lines inspection (NA engine) .....	MA-31
EVAP vapor lines inspection (Z engine).....	MA-40
Evaporative emission (EVAP) system .....	EC-20, 215, 250
Exhaust system .....	FE-6
Exhaust system inspection .....	MA-51
Exterior.....	BT-23
Exterior lamp.....	EL-59

## F

Fan switch .....	HA-50
Fast idle .....	EC-188, 233
Fast idle cam (FIC) inspection and adjustment .....	EC-25
FICD - Wiring diagram .....	EC-167
Final drive disassembly (C200) .....	PD-35
Final drive disassembly (H233B) .....	PD-57
Final drive pre-inspection (C200).....	PD-35
Final drive pre-inspection (H233B) .....	PD-57
Final drive removal and installation .....	PD-16
Floor trim.....	BT-15
Flow charts .....	GI-30
Fluids.....	MA-11
Flywheel (clutch).....	CL-13
Flywheel runout (KA engine) .....	EM-47
Flywheel runout (NA engine) .....	EM-86
Flywheel runout (QD & TD engine) .....	EM-166
Flywheel runout (Z engine).....	EM-130
Fork rod (M/T).....	MT-17, 18, 37
FPCM - Wiring diagram .....	EC-202, 240
F/PUMP - Wiring diagram .....	EC-150
Front axle .....	FA-13
Front bumper .....	BT-5
Front case transfer .....	TF-9
Front combination lamp removal and installation .....	BT-5
Front door .....	BT-10
Front drive shaft transfer .....	TF-10
Front final drive disassembly (4WD) (R180A) .....	PD-18
Front final drive pre-inspection (4WD) (R180A) .....	PD-18

# ALPHABETICAL INDEX

---

Front final drive removal and installation (4WD) .....	PD-15
Front seat.....	BT-28
Front seat belt.....	RS-4
Front suspension .....	FA-31
Front washer .....	EL-110
Front wiper .....	EL-110
Fuel check valve.....	EC-21, 215, 251
Fuel cut control (at no load & high engine speed) .....	EC-19, 303
Fuel cut solenoid valve .....	EC-193, 235
Fuel filter replacement (KA engine).....	MA-17
Fuel filter replacement (NA engine).....	MA-26
Fuel filter replacement (QD & TD engine) .....	MA-45
Fuel filter replacement (Z engine).....	MA-36
Fuel gauge.....	EL-76
Fuel injector.....	EC-143
Fuel level - inspection & adjustment ..	EC-184, 229
Fuel line inspection (KA engine).....	MA-17
Fuel line inspection (NA engine) .....	MA-26
Fuel line inspection (QD & TD engine) .....	MA-46
Fuel line inspection (Z engine) .....	MA-36
Fuel precautions.....	GI-6
Fuel pressure check .....	EC-23, 201, 205, 243
Fuel pressure regulator.....	EC-23
Fuel pressure release .....	EC-23
Fuel pump .....	EC-150
Fuel pump (mechanical) .....	EC-201
Fuel pump control module.....	EC-202, 240
Fuel pump relay .....	E-150, EC-155
Fuel system .....	FE-4
Fuel tank vacuum relief valve .....	EC-21
Fuse .....	EL-15
Fuse block .....	Foldout
Fusible link.....	EL-15

## G

Garage jack and safety stand.....	GI-44
Gauges .....	EL-76
Gear components (M/T) .....	MT-15, 16, 35
Glass.....	BT-10
Glow plug .....	EC-295
Glow relay .....	EC-295
Grease .....	MA-11
Ground clearance .....	GI-40
Ground distribution .....	EL-16

## H

Harness connector.....	EL-3
Harness layout.....	EL-162
Hazard warning lamp.....	EL-63
Headlamp.....	EL-52
Heated oxygen sensor (HO2S).....	EC-122
Heated oxygen sensor (HO2S) monitor .....	EC-39
Heated oxygen sensor heater.....	EC-126

Heated oxygen sensor inspection .....	MA-21
(KA engine) .....	GI
Heated seat .....	BT-30
HEATER - Wiring diagram .....	HA-33
Height (Dimensions).....	GI-40
HFC134a (R134a) system precaution .....	HA-3
HFC134a (R134a) system service procedure .....	MA
procedure .....	HA-55
HFC134a (R134a) system service tools.....	EM
HFC134a system service equipment .....	LC
precaution .....	HA-11
H/LAMP - Wiring diagram.....	EL-52
HO2S - Wiring diagram.....	EC-122
Hood .....	BT-5
Horn .....	EL-123
HORN - Wiring diagram .....	EC
How to erase DTC for ECCS OBD system .....	EL-123
Hydraulic lash adjuster inspection .....	FE
(KA engine) .....	EM-37
CL	
MT	

## I

IACV - FICD solenoid valve.....	EC-167
IACV - idle up control.....	TF
IACV-AAC valve.....	EC-190
IATS - Wiring diagram.....	EC-130, 134
Identification plate .....	EC-108
Idle compensator .....	PD
IDLE - Wiring diagram .....	EC-214, 249
Idle mixture ratio .....	FA
Idle speed .....	EC-26, 180, 225
Idle speed .....	RA
Idle speed inspection .....	EC-26, 180, 225
(QD & TD engine) .....	RA
Ignition coil .....	BR
Ignition control system .....	EC-104, 211, 247
Ignition timing.....	EC-209, 246
Ignition wire inspection (KA engine) .....	EC-26, 180, 225
Ignition wire inspection (NA engine) .....	ST
Ignition wire inspection (Z engine) .....	MA-20
ILL - Wiring diagram .....	EC-39
Illumination .....	RS
INJECT - Wiring diagram.....	EL-69
Injection nozzle .....	EC-143
Injection nozzle .....	BT
Injection nozzle inspection .....	EC-263
(QD & TD engine) .....	HA

Injector .....	EC-48
Injector removal and installation .....	EC-143, 147
Instrument panel .....	EC-24
INT/L - Wiring diagram .....	BT-12
Intake air temperature sensor .....	EL-73
Intake door control linkage adjustment.....	EC-108
Intake manifold (KA engine) .....	HA-54
Interior .....	EM-11
Interior .....	BT-15
Interior lamp .....	EL-69
ISC - FI pot .....	EL
ISC - FI pot .....	EC-198, 237
ISC - FI pot control solenoid valve .....	IDX
ISC - FI pot control solenoid valve .....	EC-200, 239

# ALPHABETICAL INDEX

---

J

- Jacking points ..... GI-43
- Journal bearing assembly (propeller shaft) ..... PD-12
- Journal bearing disassembly (propeller shaft) ..... PD-11

K

- Knuckle spindle ..... FA-24

L

- Leaf spring (rear) ..... RA-14
- Length (Dimensions) ..... GI-40
- License lamp ..... EL-59
- Lifting points ..... GI-43
- Limited slip diff. adjustment (C200) ..... PD-42
- Limited slip diff. adjustment (H233B) ..... PD-64
- Limited slip diff. assembly (C200) ..... PD-44
- Limited slip diff. assembly (H233B) ..... PD-65
- Limited slip diff. disassembly (C200) ..... PD-40
- Limited slip diff. disassembly (H233B) ..... PD-62
- Limited slip diff. inspection (C200) ..... PD-41
- Limited slip diff. inspection (H233B) ..... PD-63
- Liquid gasket application ..... EM-2
- Location of electrical units ..... EL-159
- Lock, door ..... BT-10
- LSV (Load sensing valve) ..... BR-8
- Lubricant (R134a) A/C ..... HA-57
- Lubricants ..... MA-11
- Lubrication circuit (KA engine) ..... LC-4
- Lubrication circuit (NA engine) ..... LC-13
- Lubrication circuit (QD & TD engine) ..... LC-31
- Lubrication circuit (Z engine) ..... LC-23
- Lubrication-locks, hinges and hood latches ..... MA-57

M

- MAFS - Wiring diagram ..... EC-88
- MAIN - Wiring diagram ..... EC-74
- Main drive gear (M/T) ..... MT-15, 16, 35
- Main gear transfer ..... TF-10
- Mainshaft (M/T) ..... MT-35
- Mainshaft transfer ..... TF-10
- Maintenance (KA engine) ..... MA-14
- Maintenance (NA engine) ..... MA-22
- Maintenance (QD & TD engine) ..... MA-41
- Maintenance (Z engine) ..... MA-32
- Malfunction indicator lamp (MIL) ..... EC-39
- Manifold tightening torque (intake exhaust) (NA engine) ..... MA-22

- Manifold tightening torque (intake exhaust) (QD & TD engine) ..... MA-41
- Manifold tightening torque (intake exhaust) (Z engine) ..... MA-32
- Manual lock free running hub ..... FA-15
- Manual steering gear ..... ST-14
- Manual transmission number ..... GI-39
- Manual transmission oil replacement ..... MA-51
- Mass air flow sensor (MAFS) ..... EC-88
- Master cylinder (brake) ..... BR-13
- Master cylinder (clutch) ..... CL-7
- Meter ..... EL-76
- METER - Wiring diagram ..... EL-81
- MIL & Data link connectors circuit ..... EC-171
- MIRROR - Wiring diagram ..... EL-138
- Mirror, door ..... BT-35
- Mirror, out side ..... BT-35
- Mode door control linkage adjustment ..... HA-53
- Model variation ..... GI-34
- Molding - See Exterior ..... BT-23
- M/T major overhaul ..... MT-14, 34
- M/T removal and installation ..... MT-11
- Multiport fuel injection (MFI) system ..... EC-15
- Multiport fuel injection precautions ..... GI-4

N

- Neutral position switch ..... EC-135
- Neutral position switch (M/T) ..... MT-14

O

- Oil change (capacity) ..... MA-11
- Oil change (interval) ..... MA-6
- Oil cooler (QD & TD engine) ..... LC-36
- Oil jet (NA engine) ..... LC-16
- Oil jet (QD & TD engine) ..... LC-37
- Oil pan (KA engine) ..... EM-13
- Oil pan (NA engine) ..... EM-54
- Oil pan (QD & TD engine) ..... EM-137
- Oil pan (Z engine) ..... EM-93
- Oil pressure (KA engine) ..... LC-5
- Oil pressure (NA engine) ..... LC-14
- Oil pressure (QD & TD engine) ..... LC-32
- Oil pressure (Z engine) ..... LC-24
- Oil pressure relief valve (KA engine) ..... LC-6
- Oil pressure relief valve (NA engine) ..... LC-16
- Oil pressure relief valve (QD & TD engine) ..... LC-35
- Oil pressure relief valve (Z engine) ..... LC-26
- Oil pump (KA engine) ..... LC-5
- Oil pump (NA engine) ..... LC-15
- Oil pump (QD & TD engine) ..... LC-33
- Oil pump (Z engine) ..... LC-25
- Oil pump regulator valve (KA engine) ..... LC-6
- Oil pump regulator valve (NA engine) ..... LC-16
- Oil pump regulator valve (QD & TD engine) ..... LC-36

# ALPHABETICAL INDEX

Oil pump regulator valve (Z engine) .....	LC-25
Oil seal replacement (front final drive 4WD) .....	PD-13
Oil seal replacement (front of final drive).....	PD-13
Oil seal replacement (KA engine).....	EM-24
Oil seal replacement (NA engine) .....	EM-65
Oil seal replacement (QD & TD engine) ....	EM-152
Oil seal replacement (Z engine) .....	EM-105
Operating cylinder (clutch) .....	CL-9
Out side mirror.....	BT-35
Oversize piston (KA engine).....	EM-181
Oversize piston (NA engine).....	EM-187
Oversize piston (Z engine) .....	EM-194

**P**

P/ANT - Wiring diagram .....	EL-135
Pantograph jack .....	GI-43
Parking brake control .....	BR-31
Parking lamp.....	EL-59
PCV (positive crankcase ventilation) .....	EC-217, 252, 270
PCV filter replacement (KA engine) .....	MA-20
PCV system inspection (KA engine) .....	MA-20
PCV system inspection (NA engine) .....	MA-30
PCV system inspection (Z engine).....	MA-40
Periodic maintenance (except for Europe) .....	MA-6
PGC/V - Wiring diagram .....	EC-139
Pilot bushing replacement (KA engine) .....	EM-49
Pilot bushing replacement (NA engine).....	EM-88
Pilot bushing replacement (QD & TD engine) .....	EM-166
Pilot bushing replacement (Z engine) .....	EM-132
Piston assembly (KA engine) .....	EM-47
Piston assembly (NA engine) .....	EM-86
Piston assembly (QD & TD engine) .....	EM-172
Piston assembly (Z engine).....	EM-130
Piston pin inspection (KA engine) .....	EM-41
Piston pin inspection (NA engine) .....	EM-80
Piston pin inspection (QD & TD engine) .....	EM-162
Piston pin inspection (Z engine).....	EM-125
Piston ring inspection (KA engine) .....	EM-36, 42
Piston ring inspection (NA engine) .....	EM-81
Piston ring inspection (QD & TD engine).....	EM-162
Piston ring inspection (Z engine).....	EM-125
Piston to bore clearance (KA engine) .....	EM-43
Piston to bore clearance (NA engine) .....	EM-82
Piston to bore clearance (QD & TD engine) .....	EM-162
Piston to bore clearance (Z engine).....	EM-130
PNP/SW - Wiring diagram .....	EC-135
POWER - Wiring diagram .....	EL-7
Power door lock.....	EL-152
Power door mirror.....	EL-138
Power steering fluid level.....	MA-56, ST-5

Power steering gear .....	ST-20, 28
Power steering hydraulic pressure .....	ST-8
Power steering oil pressure switch .....	EC-156
Power steering oil pump .....	ST-35
Power steering system bleeding .....	ST-6
Power supply routing .....	EL-6
Power transistor .....	EC-104
Power transistor & ignition coil .....	EC-104
Power window.....	EL-140
Pre-delivery inspection .....	MA-4
Precautions (General) .....	GI-3
Pressure plate - See Clutch cover .....	CL-14
Priming pump .....	EC-269
Propeller shaft .....	PD-7
Propeller shaft greasing.....	MA-52
Propeller shaft inspection .....	MA-52
Propeller shaft on vehicle service.....	PD-9
Propeller shaft vibration .....	PD-9
PST/SW - Wiring diagram.....	EC-156
Push rod (QD & TD engine) .....	EM-145

**Q**

Quick-glow system check .....	EC-288
-------------------------------	--------

**R**

Radiator (KA engine).....	LC-10
Radiator (NA engine).....	LC-21
Radiator (QD & TD engine).....	LC-43
Rear axle.....	RA-6
Rear body .....	BT-36
Rear case transfer .....	TF-9
Rear combination lamp removal and installation .....	BT-23
Rear cover packing replacement diff. ....	PD-14
Rear door .....	BT-11
Rear seat .....	BT-31
Rear seat belt.....	RS-5
Rear suspension .....	RA-13
Rear window defogger.....	EL-125
Refrigerant connection precaution .....	HA-3
Refrigerant discharging evacuating charging .....	HA-56
Refrigerant general precaution .....	HA-3
Refrigerant lines .....	HA-59
Refrigeration cycle .....	HA-13
Release bearing (clutch) .....	CL-10
Resistor .....	EC-104, 296
Reverse idler shaft (M/T) .....	MT-15, 16, 35
Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) .....	MT-9, 10

Reverse main gear (M/T) .....	MT-15, 16, 35
Ring gear diff. inspection (C200) .....	PD-39
Ring gear diff. inspection (H233B).....	PD-61
Road wheel size .....	GI-42
Roof trim .....	BT-21

GI

MA

EM

EC

FE

CL

MT

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

## ALPHABETICAL INDEX

---

Rotor disc (front)..... FA-22

### S

SAE J1930 terminology list..... GI-50  
 Seal - See Exterior ..... BT-23  
 Seat belt inspection ..... MA-58  
 Seat belt, front..... RS-4  
 Seat belt, rear ..... RS-5  
 Seat, front ..... BT-28  
 Seat, rear ..... BT-31  
 Self-diagnostic results ..... EC-39  
 Shift control components (M/T) ..... MT-17, 18, 37  
 Shift control transfer..... TF-11, 24  
 Shift fork (M/T)..... MT-17, 18, 37  
 Shock absorber (front)..... FA-33  
 Shock absorber (rear) ..... RA-14  
 Side bearing preload (front final drive  
     4WD) (R180A)..... PD-24  
 Side bearing preload diff. (C200)..... PD-46  
 Side trim..... BT-15  
 SMJ (super multiple junction)..... Foldout  
 Solenoid timer ..... EC-297  
 Spark plug replacement (KA engine) ..... MA-19  
 Spark plug replacement (NA engine) ..... MA-29  
 Spark plug replacement (Z engine)..... MA-39  
 Speedometer ..... EL-76  
 Spiral cable..... RS-11  
 Spot lamp..... EL-73  
 SRS - See Supplemental Restraint  
     System..... RS-6  
 SRS - Wiring diagram..... RS-18, 26  
 SRS Trouble diagnoses ..... RS-17, 22  
 S/SIG - Wiring diagram..... EC-148  
 Stabilizer bar (front) ..... FA-36  
 Standardized relay..... EL-4  
 START - Wiring diagram ..... EL-28  
 Start signal ..... EC-148  
 Starter ..... EL-37  
 Starting system ..... EL-28  
 Steering gear and linkage inspection ..... MA-56  
 Steering gear oil level..... MA-56  
 Steering knuckle ..... FA-24  
 Steering linkage ..... ST-38  
 Steering wheel and column ..... ST-10  
 Steering wheel play ..... ST-7  
 Steering wheel turning force..... ST-7  
 Stop lamp..... EL-61  
 STOP/L - Wiring diagram ..... EL-61  
 Striking rod (M/T)..... MT-17, 18, 37  
 Sunroof ..... BT-32  
 Supplemental Restraint System..... RS-6  
 Supplemental restraint system - Wiring  
     diagram ..... RS-18, 26  
 Swirl control valve control solenoid  
     valve ..... EC-160  
 SWL/V - Wiring diagram ..... EC-160  
 Symbols and abbreviations ..... GI-8

Synchronizer (M/T) ..... MT-15, 16, 35

### T

Tachometer ..... EL-76  
 Tail lamp..... EL-59  
 TAIL/L - Wiring diagram ..... EL-59  
 Temperature control cable and linkage  
     adjustment ..... HA-54  
 Tension rod (front) ..... FA-38  
 Thermal protector..... HA-52  
 Thermo control amp..... HA-51  
 Thermostat (KA engine) ..... LC-9  
 Thermostat (NA engine) ..... LC-20  
 Thermostat (QD & TD engine) ..... LC-42  
 Thermostat (Z engine) ..... LC-30  
 Three way catalyst precautions ..... GI-5  
 Throttle bodies (KA engine) ..... EM-11  
 Throttle position sensor (TPS) ..... EC-112  
 Throttle position sensor adjustment ..... EC-58  
 Throwout bearing - See Clutch release  
     bearing ..... CL-10  
 Tie-rod..... ST-38  
 Tie-rod ball joints ..... ST-38  
 Tightening torque of standard bolts ..... GI-49  
 Timing chain (KA engine) ..... EM-15  
 Timing chain (NA engine) ..... EM-56  
 Timing chain (Z engine)..... EM-97  
 Timing gear (QD & TD engine) ..... EM-167, 175  
 Tire rotation..... MA-53  
 Tire size ..... GI-42  
 Tooth contact (front final drive 4WD)  
     (R180A) ..... PD-27  
 Tooth contact diff. (C200)..... PD-50  
 Tooth contact diff. (H233B) ..... PD-71  
 Torsion bar spring ..... FA-33  
 Tow truck towing..... GI-46  
 Towing point ..... GI-48  
 TPS - Wiring diagram..... EC-112  
 Transfer case ..... TF-9  
 Transfer oil replacement ..... MA-52  
 Transfer overhaul..... TF-9  
 Transfer removal and installation ..... TF-7  
 Transfer serial number ..... GI-39  
 Transmission case (M/T)..... MT-14  
 Transmission serial number ..... GI-39  
 Tread-FR&RR (Dimensions) ..... GI-40  
 Trim ..... BT-15  
 Triple pressure switch..... HA-13, 51  
 Turbocharger (QD & TD engine) ..... EM-155  
 TURN - Wiring diagram ..... EL-64  
 Turn signal lamp ..... EL-63  
 Two-pole lift ..... GI-45

### U

Under body ..... BT-41

# ALPHABETICAL INDEX

---

Upper link (front susp.) ..... FA-37

V

Vacuum break ..... EC-189, 234  
 Vacuum delay valve (VDV) ..... EC-210  
 Vacuum hose (brake system) ..... BR-18  
 Vacuum hose drawing (ECCS) ..... EC-13  
 Valve clearance (KA engine) ..... EM-33  
 Valve clearance (NA engine) ..... EM-76  
 Valve clearance (Z engine) ..... EM-119  
 Valve clearance adjustment  
     (NA engine) ..... MA-22  
 Valve clearance adjustment  
     (QD & TD engine) ..... MA-41  
 Valve clearance adjustment (Z engine) ..... MA-32  
 Valve guide (KA engine) ..... EM-31  
 Valve guide (NA engine) ..... EM-71  
 Valve guide (QD & TD engine) ..... EM-141  
 Valve guide (Z engine) ..... EM-110  
 Valve lifter (QD & TD engine) ..... EM-145  
 Valve seat (KA engine) ..... EM-33  
 Valve seat (NA engine) ..... EM-72  
 Valve seat (QD & TD engine) ..... EM-142  
 Valve seat (Z engine) ..... EM-112  
 Valve spring (KA engine) ..... EM-34  
 Valve spring (NA engine) ..... EM-73  
 Valve spring (QD & TD engine) ..... EM-145  
 Valve spring (Z engine) ..... EM-114  
 Vehicle identification number ..... GI-37  
 Vehicle recovery (freeing a stuck  
     vehicle) ..... GI-48  
 Vehicle speed sensor (VSS) ..... EC-117  
 Ventilator door control rod adjustment ..... HA-52  
 Viscosity number (SAE) ..... MA-12  
 VSS - Wiring diagram ..... EC-117

W

WARN - Wiring diagram ..... EL-97  
 Warning buzzer ..... EL-108  
 Warning lamps ..... EL-96  
 Washer, front ..... EL-110  
 Water cock control rod adjustment ..... HA-53  
 Water pump (KA engine) ..... LC-8  
 Water pump (QD & TD engine) ..... LC-40  
 Water pump (Z engine) ..... LC-29  
 Water temperature gauge ..... EL-76  
 Weatherstrip - See Exterior ..... BT-23  
 Wheel alignment (front) ..... FA-8  
 Wheel balance ..... MA-53  
 Wheel bearing (front axle) ..... FA-6  
 Wheel bearing (rear) ..... RA-5  
 Wheel hub (front) ..... FA-22  
 Wheel size ..... GI-42  
 Wheelbase (Dimensions) ..... GI-40  
 Width (Dimensions) ..... GI-40  
 WINDOW - Wiring diagram ..... EL-143  
 Window, back ..... BT-23  
 Window, door ..... BT-10  
 Windshield ..... BT-33  
 Windshield washer - See Front washer ..... EL-110  
 Windshield wiper - See Front wiper ..... EL-110  
 WIPER - Wiring diagram ..... EL-112  
 Wiper, front ..... EL-110  
 Wiring diagrams ..... GI-9  
 Withdrawal lever (clutch) ..... CL-10  
 Wrist pin - See Piston pin inspection  
     (KA engine) ..... EM-41

GI

MA

EM

LC

EC

FE

CL

MT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX