

**MS2690A/MS2691A/MS2692A  
and MS2830A  
Signal Analyzer  
Operation Manual  
Noise Figure Measurement Function  
Operation**

**Third Edition**

- For safety and warning information, please read this manual before attempting to use the equipment.
- Additional safety and warning information is provided within the MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation) or MS2830A Signal Analyzer Operation Manual (Mainframe Operation). Please also refer to this document before using the equipment.
- Keep this manual with the equipment.

**ANRITSU CORPORATION**

# Safety Symbols

To prevent the risk of personal injury or loss related to equipment malfunction, Anritsu Corporation uses the following safety symbols to indicate safety-related information. Ensure that you clearly understand the meanings of the symbols BEFORE using the equipment. Some or all of the following symbols may be used on all Anritsu equipment. In addition, there may be other labels attached to products that are not shown in the diagrams in this manual.

## Symbols used in manual



### **DANGER**

This indicates a very dangerous procedure that could result in serious injury or death if not performed properly.



### **WARNING**

This indicates a hazardous procedure that could result in serious injury or death if not performed properly.



### **CAUTION**

This indicates a hazardous procedure or danger that could result in light-to-severe injury, or loss related to equipment malfunction, if proper precautions are not taken.

## Safety Symbols Used on Equipment and in Manual

The following safety symbols are used inside or on the equipment near operation locations to provide information about safety items and operation precautions. Ensure that you clearly understand the meanings of the symbols and take the necessary precautions BEFORE using the equipment.



This indicates a prohibited operation. The prohibited operation is indicated symbolically in or near the barred circle.



This indicates an obligatory safety precaution. The obligatory operation is indicated symbolically in or near the circle.



This indicates a warning or caution. The contents are indicated symbolically in or near the triangle.



This indicates a note. The contents are described in the box.



These indicate that the marked part should be recycled.

MS2690A/MS2691A/MS2692A and MS2830A

Signal Analyzer

Operation Manual Noise Figure Measurement Function Operation

23 October 2012 (First Edition)

24 September 2014 (Third Edition)

Copyright © 2012-2014, ANRITSU CORPORATION.

All rights reserved. No part of this manual may be reproduced without the prior written permission of the publisher.

The contents of this manual may be changed without prior notice.

Printed in Japan

## **Equipment Certificate**

Anritsu Corporation guarantees that this equipment was inspected at shipment and meets the published specifications.

## **Anritsu Warranty**

- During the warranty period, Anritsu Corporation will repair or exchange this software free-of-charge if it proves defective when used as described in the operation manual.
- The warranty period is 6 months from the purchase date.
- The warranty period after repair or exchange will remain 6 months from the original purchase date, or 30 days from the date of repair or exchange, depending on whichever is longer.
- This warranty does not cover damage to this software caused by Acts of God, natural disasters, and misuse or mishandling by the customer.

In addition, this warranty is valid only for the original equipment purchaser. It is not transferable if the equipment is resold.

Anritsu Corporation shall assume no liability for injury or financial loss of the customer due to the use of or a failure to be able to use this equipment.

## **Anritsu Corporation Contact**

In the event that this equipment malfunctions, contact an Anritsu Service and Sales office. Contact information can be found on the last page of the printed version of this manual, and is available in a separate file on the CD version.

## Notes On Export Management

---

This product and its manuals may require an Export License/Approval by the Government of the product's country of origin for re-export from your country.

Before re-exporting the product or manuals, please contact us to confirm whether they are export-controlled items or not.

When you dispose of export-controlled items, the products/manuals need to be broken/shredded so as not to be unlawfully used for military purpose.

## Cautions against computer virus infection

---

- Copying files and data

Only files that have been provided directly from Anritsu or generated using Anritsu equipment should be copied to the instrument.

All other required files should be transferred by means of USB or CompactFlash media after undergoing a thorough virus check.

- Adding software

Do not download or install software that has not been specifically recommended or licensed by Anritsu.

- Network connections

Ensure that the network has sufficient anti-virus security protection in place.

# Software End-User License Agreement (EULA)

Please read this Software End-User License Agreement (hereafter this EULA) carefully before using (includes executing, copying, registering, etc.) this software (includes programs, databases, scenarios, etc., used to operate, set, etc., Anritsu electronic equipment). By reading this EULA and using this software, you are agreeing to be bound by the terms of its contents and Anritsu Corporation (hereafter Anritsu) hereby grants you the right to use this Software with the Anritsu-specified equipment (hereafter Equipment) for the purposes set out in this EULA.

## 1. Grant of License and Limitations

1. Regardless of whether this Software was purchased from or provided free-of-charge by Anritsu, you agree not to rent, lease, lend, or otherwise distribute this Software to third parties and further agree not to disassemble, recompile, reverse engineer, modify, or create derivative works of this Software.
2. You may make one copy of this Software for backup purposes only.
3. You are not permitted to reverse engineer this software.
4. This EULA allows you to install one copy of this Software on one piece of Equipment.

## 2. Disclaimers

To the extent not prohibited by law, in no event shall Anritsu be liable for personal injury, or any incidental, special, indirect or consequential damages whatsoever, including, without limitation, damages for loss of profits, loss of data, business interruption or any other commercial damages or losses, arising out of or related to your use or inability to use this Software.

## 3. Limitation of Liability

- a. If a fault (bug) is discovered in this Software, preventing operation as described in the operation manual or specifications whether or not the customer uses this software as described in the manual, Anritsu shall at its own discretion, fix the bug, or exchange the software, or suggest a workaround, free-of-charge. However, notwithstanding the above, the following items shall be excluded from repair and warranty.
  - i) If this Software is deemed to be used for purposes not described in the operation manual or specifications.
  - ii) If this Software is used in conjunction with other non-Anritsu-approved software.
  - iii) Recovery of lost or damaged data.
  - iv) If this Software or the Equipment has been modified, repaired, or otherwise altered without Anritsu's prior approval.
  - v) For any other reasons out of Anritsu's direct control and responsibility, such as but not limited to, natural disasters, software virus infections, etc.
- b. Expenses incurred for transport, hotel, daily allowance, etc., for on-site repairs by Anritsu engineers necessitated by the above faults shall be borne by you.
- c. The warranty period for faults listed in article 3a above covered by this EULA shall be either 6 months from the date of purchase of this Software or 30 days after the date of repair, whichever is longer.

#### 4. Export Restrictions

You may not use or otherwise export or re-export directly or indirectly this Software except as authorized by Japanese and United States law. In particular, this software may not be exported or re-exported (a) into any Japanese or US embargoed countries or (b) to anyone on the Japanese or US Treasury Department's list of Specially Designated Nationals or the US Department of Commerce Denied Persons List or Entity List. By using this Software, you warrant that you are not located in any such country or on any such list. You also agree that you will not use this Software for any purposes prohibited by Japanese and US law, including, without limitation, the development, design and manufacture or production of missiles or nuclear, chemical or biological weapons of mass destruction.

#### 5. Termination

Anritsu shall deem this EULA terminated if you violate any conditions described herein. This EULA shall also be terminated if the conditions herein cannot be continued for any good reason, such as violation of copyrights, patents, or other laws and ordinances.

#### 6. Reparations

If Anritsu suffers any loss, financial or otherwise, due to your violation of the terms of this EULA, Anritsu shall have the right to seek proportional damages from you.

#### 7. Responsibility after Termination

Upon termination of this EULA in accordance with item 5, you shall cease all use of this Software immediately and shall as directed by Anritsu either destroy or return this Software and any backup copies, full or partial, to Anritsu.

#### 8. Dispute Resolution

If matters of dispute or items not covered by this EULA arise, they shall be resolved by negotiations in good faith between you and Anritsu.


#### 9. Court of Jurisdiction

This EULA shall be interpreted in accordance with Japanese law and any disputes that cannot be resolved by negotiation described in Article 8 shall be settled by the Japanese courts.

# About This Manual

## ■ Associated Documents

The operation manual configuration of the MS2690A/MS2691A/MS2692A and MS2830A Signal Analyzer is shown below.

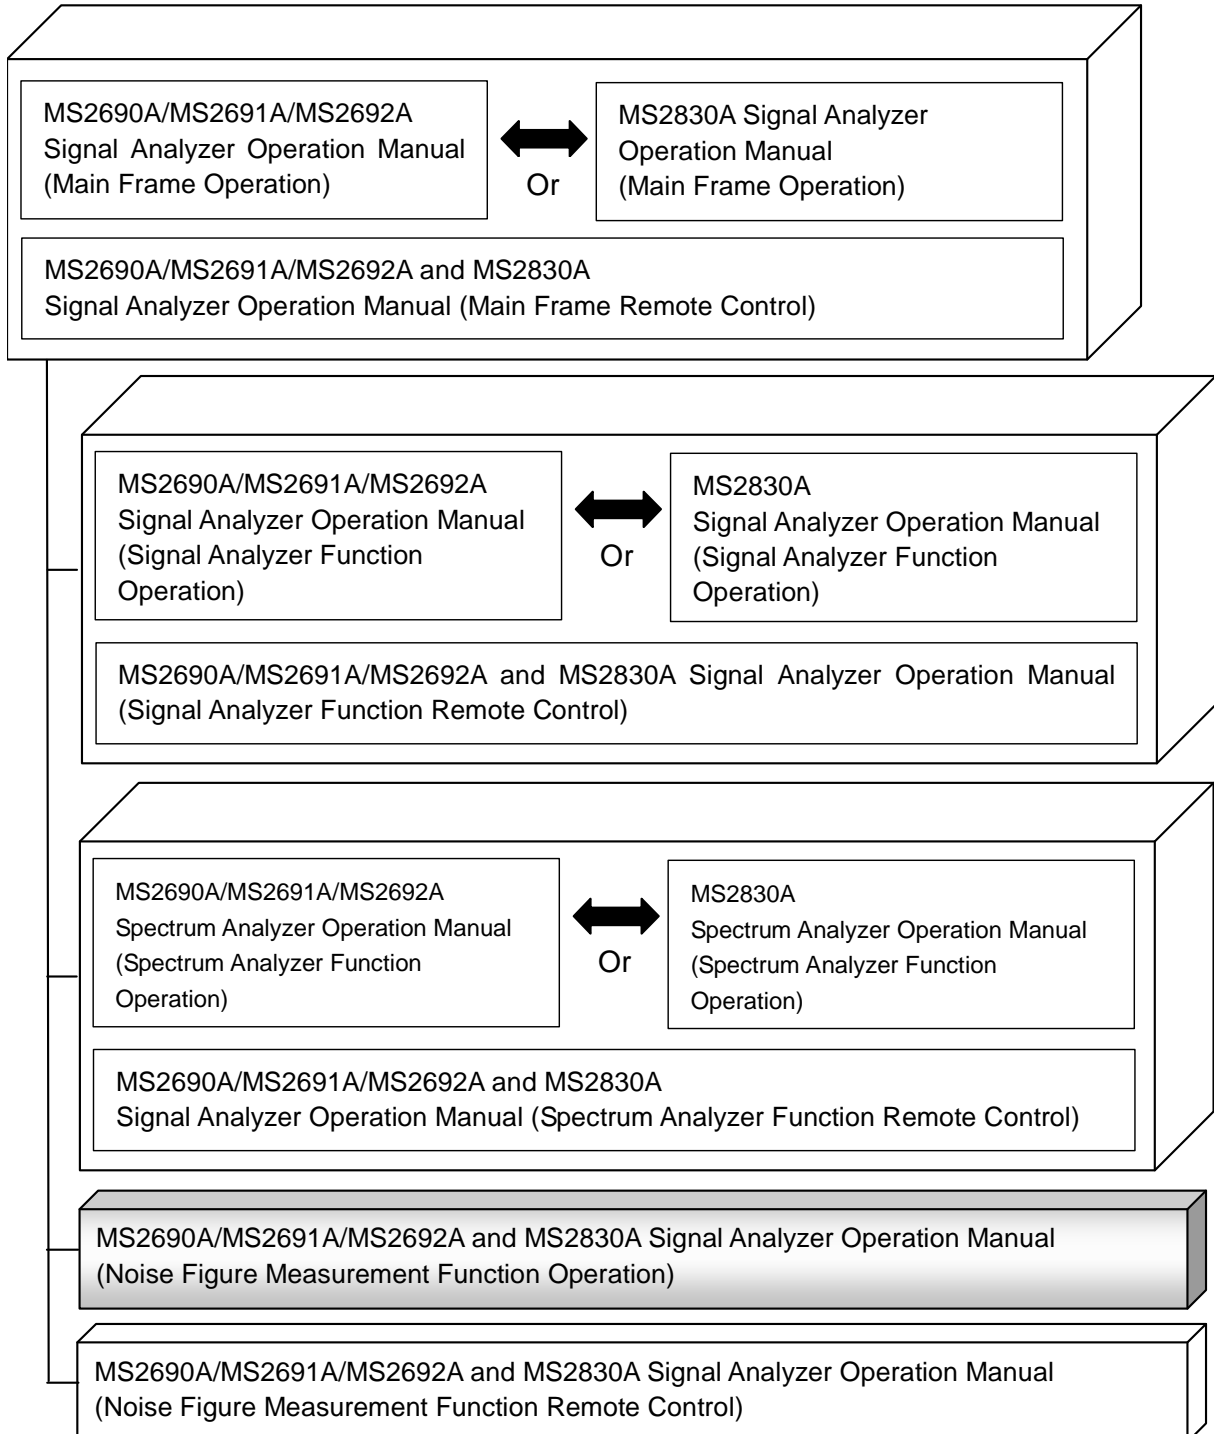

- Signal Analyzer Operation Manual (Mainframe)
- Signal Analyzer Operation Manual (Mainframe Remote Control)  
Description of basic operations, maintenance procedures, common functions and common remote functions of the mainframe
- Signal Analyzer Operation Manual (Signal Analyzer Function)
- Signal Analyzer Operation Manual (Signal Analyzer Function Remote Control)  
Description of basic operations, common functions and common remote functions of the signal analyzer
- Signal Analyzer Operation Manual (Spectrum Analyzer Function)
- Signal Analyzer Operation Manual (Spectrum Analyzer Function Remote Control)  
Description of basic operations, common functions and common remote functions of the spectrum analyzer
- Signal Analyzer Operation Manual (Noise Figure Measurement Function)  
<This document>
- Signal Analyzer Operation Manual (Noise Figure Measurement Function Remote Control)  
Description of basic operations, common functions and common remote functions of the Phase Noise Measurement function

## **Convention Used in This Manual**

Throughout this document, the use of MS269x Series is assumed unless otherwise specified.

If using MS2830A, change MS269xA to read MS2830A.

In this document,  indicates a panel key.



# Table of Contents

**About This Manual..... I**

**Chapter 1 Overview ..... 1-1**

- 1.1 Product Overview ..... 1-2
- 1.2 Product Composition ..... 1-3
- 1.3 Specifications..... 1-5

**Chapter 2 Preparation ..... 2-1**

- 2.1 Part Names ..... 2-2
- 2.2 Signal Path Setup ..... 2-13
- 2.3 Application Startup and Selection..... 2-14
- 2.4 Initialization and Calibration..... 2-15

**Chapter 3 Measurement..... 3-1**

- 3.1 Basic Operation..... 3-2
- 3.2 Setting Frequency..... 3-5
- 3.3 Setting Level ..... 3-11
- 3.4 Setting Common Items ..... 3-13
- 3.5 Setting the Measure Function..... 3-32
- 3.6 Setting the Marker Function..... 3-36
- 3.7 Setting the Peak Search Function ..... 3-37
- 3.8 Measurement Results ..... 3-39

**Chapter 4 Other Functions ..... 4-1**

- 4.1 Selecting Other Functions ..... 4-2
- 4.2 Setting Title ..... 4-2
- 4.3 Erasing Warmup Message ..... 4-2

**Chapter 5 Performance Test..... 5-1**

- 5.1 Overview of Performance Test ..... 5-2
- 5.2 Power Port Operation Check..... 5-4

1
2
3
4
5
Appendix
Index

<b>Appendix A Error Message.....</b>	<b>A-1</b>
<b>Appendix B Default Value List.....</b>	<b>B-1</b>
<b>Index .....</b>	<b>Index-1</b>

# Chapter 1 Overview

---

This chapter provides an overview of the Noise Figure Measurement Function.

1.1	Product Overview .....	1-2
1.2	Product Composition .....	1-3
	1.2.1 Option / Software .....	1-3
	1.2.2 Noise Source .....	1-3
1.3	Specifications .....	1-5

## **1.1 Product Overview**

The MS2690/MS2691/MS2692A or MS2830A Signal Analyzer enables high-speed, high-accuracy, and simple measurements of transmission characteristics of base stations and mobile stations for various types of mobile communications.

The Noise Figure Measurement Function (hereinafter, this application) is to measure Noise Figure (hereinafter, NF) which has a huge effect on noise in systems that handle minute signals such as satellite communications and radars. It can be used in various fields such as evaluations of transceivers and devices and troubleshooting.

NF is measured with the measurement method of Y-factor method which uses a Noise Source.

The NC346 Series noise sources by Noisecom company are supported.

## 1.2 Product Composition

### 1.2.1 Option / Software

Table 1.2-1 list the Options and Software's.

**Table1.2.1-1 Configuration of Application**

Model/Symbol	Product name	Remarks
MS2690A-017 MS2691A-017 MS2692A-017	Noise Figure Measurement Function	
MS2690A-117 MS2691A-117 MS2692A-117	Noise Figure Measurement Function Retrofit	
MS2830A-017	Noise Figure Measurement Function	
MS2830A-117	Noise Figure Measurement Function Retrofit	

The MS269xA-017/117 and MS269xA-030 W-CDMA RNC simulator are exclusive options.

### 1.2.2 Noise Source

The NC346 Series noise sources by Noisecom company are supported. The models and specifications outlines of NC346 Series are as follows. For detailed specifications, refer to the catalog and data sheet for the NC346 Series.

**Table1.2.2-1 Specifications of NC346 Series**

Model	DC Offset	Frequency [GHz]	Output ENR [dB]
NC346A	–	0.01-18.0	5-7
NC346B	–	0.01-18.0	14-16
NC346D	–	0.01-18.0	19-25
NC346C	✓	0.01-26.5	13-17
NC346E	✓	0.01-26.5	19-25
NC346Ka	✓	0.10-40.0	10-17

 **CAUTION**

---

Some noise sources output DC power. Therefore, when selecting a model from the following models of the RF input specification “0V\_DC\_max”, install a DC block:

- MS2690A-017/-117
  - MS2691A-017/-117
  - MS2692A-017/-117
  - MS2830A-044, -017/-117
  - MS2830A-045, -017/-117
-

## 1.3 Specifications

Table 1.3-1 show the specifications.

**Table 1.3-1 Specifications for this Application**

Item		Specification	
		MS269xA	MS2830A
Frequency	Frequency range	MS2690A: 30 MHz to 6 GHz MS2691A: 30 MHz to 6 GHz MS2692A: 30 MHz to 6 GHz	MS2830A-040: 30 MHz to 3.6 GHz MS2830A-041: 30 MHz to 6 GHz MS2830A-043: 30 MHz to 6 GHz MS2830A-044: (MS2830A-068/168 is not installed) 30 MHz to 6 GHz MS2830A-044: (MS2830A-068/168 is installed) 30 MHz to 26.5 GHz MS2830A-045: (MS2830A-068/168 is not installed) 30 MHz to 6 GHz MS2830A-045: (MS2830A-068/168 is installed) 30 MHz to 40 GHz
	Frequency Setting range	MS2690A: 10 MHz to 6 GHz MS2691A: 10 MHz to 13.5 GHz MS2692A: 10 MHz to 26.5 GHz	MS2830A-040: 10 MHz to 3.6 GHz MS2830A-041: 10 MHz to 6 GHz MS2830A-043: 10 MHz to 13.5 GHz MS2830A-044: 10 MHz to 26.5 GHz MS2830A-045: 10 MHz to 43 GHz
NF Measurement	Measurement range	Within the frequency range (Attenuator = 0 dB, Pre-Amp = On) – 20 to 40 dB	
	Instrument Uncertainty	Within the measurement range ENR: 4-7 dB ±0.02 dB ENR: 12-17 dB ±0.025 dB ENR: 20-22 dB ±0.03 dB	

**Table 1.3-1 Specifications for this Application (Cont'd)**

Item		Specification
GAIN Measure ment	Measurement range	Within the frequency range -20 to +40 dB
	Instrument Uncertainty	Within the measurement range $\leq 0.07$
Resolution Bandwidth	Setting Range	100 kHz to 8 MHz
Noise Source	—	Recommending the NC346 Series noise sources by Noisecom company
Connector	Noise Source	Connector: Rear Panel, BNC-J • Output Voltage: $28 \pm 0.5$ V, Pulsed



## Chapter 2 Preparation

---

This chapter describes the preparations required for using the application you are using. Refer to the *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2830A Signal Analyzer Operation Manual (Mainframe Operation)* for common features not included in this manual.

2.1	Part Names .....	2-2
2.1.1	Front panel .....	2-2
2.1.2	Rear panel .....	2-8
2.2	Signal Path Setup .....	2-13
2.3	Application Startup and Selection.....	2-14
2.3.1	Launching application.....	2-14
2.3.2	Selecting application.....	2-14
2.4	Initialization and Calibration.....	2-15
2.4.1	Initialization .....	2-15
2.4.2	Calibration .....	2-15

## 2.1 Part Names

This section describes the panel keys for operating the instrument and connectors used to connect external devices. For general points of caution, refer to the *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2830A Signal Analyzer Operation Manual (Mainframe Operation)*.

### 2.1.1 Front panel

This section describes the front-panel keys and connectors.

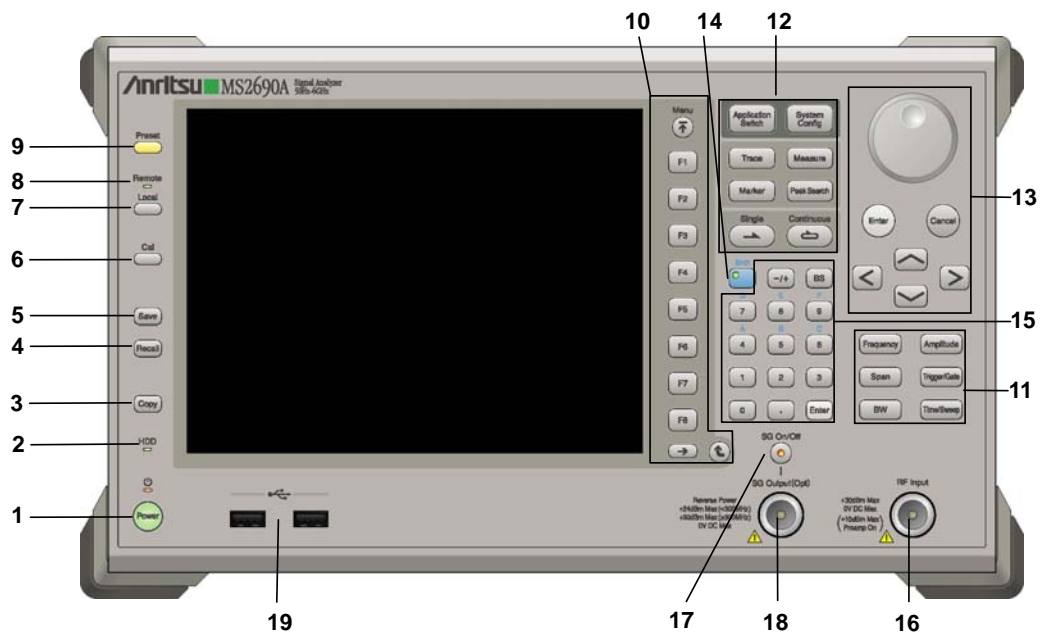


Figure 2.1.1-1 MS269x series front panel

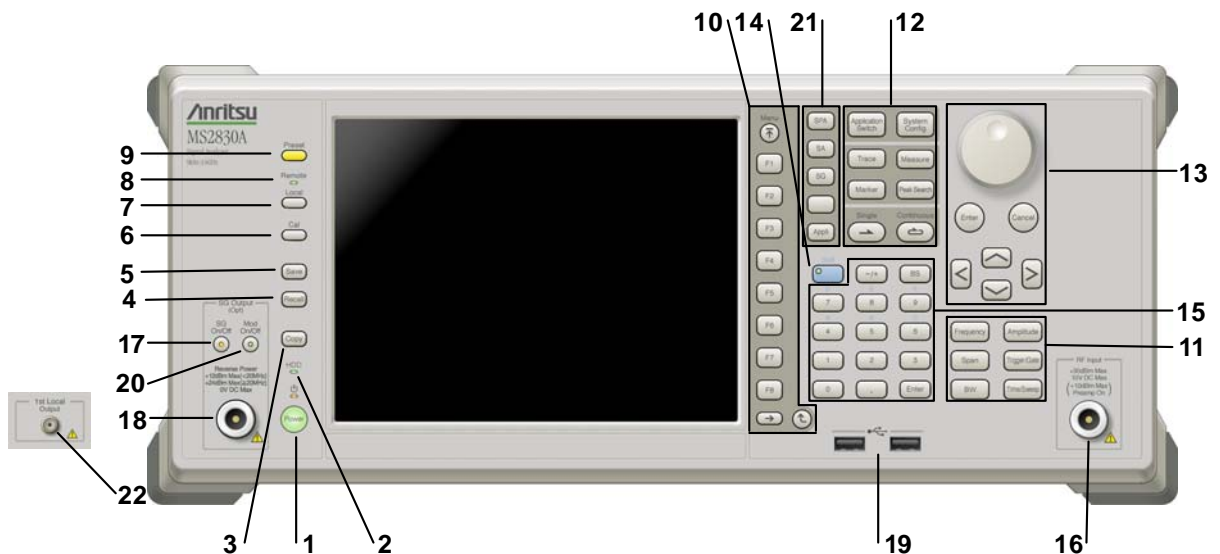









Figure 2.1.1-2 MS2830A front panel

- 
- 1  **Power Switch**  
Press to switch between the standby state (AC power supplied) and power-on state. The Power lamp  lights orange at Standby and green at Power On. Press the power switch for about 2 seconds.
  - 2  **Hard disk access lamp**  
Lights when accessing the internal hard disk
  - 3  **Copy key**  
Press to capture display screen and save to file.
  - 4  **Recall key**  
Press to recall parameter file.
  - 5  **Save key**  
Press to save parameter file.
  - 6  **Cal key**  
Press to display the Calibration menu.



Local key

Press to return to local operation from remote control via GPIB, Ethernet, or USB (B), and enable panel settings.



Remote lamp

Lights when in remote-control state.



Preset key


Resets parameters to initial settings.

10



Function keys

Selects or configures function menu displayed on the right of the screen. The function menu is provided in multiple pages and layers.

Press  to fetch next function menu page. The current page number is displayed at the bottom of the function menu, as in “1 of 2”.

Sub-menus may be displayed when a function menu is pressed. Press  to go back to the previous menu. Press  to go back to the top menu.


11




## Main function keys 1


Press to set or execute main functions.

**Executable functions vary with the current application. When nothing happens with the press, it indicates that the application in use does not support the key.**


 Press to set frequency parameters.

 Press to set level parameters.

 Press to set span parameters.

 No function is assigned to this key.

 Press to set BW parameters.

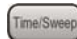 Press to set measurement item parameters.


12




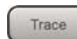
## Main function keys 2


Press to set or execute main functions.


**Executable functions vary with the current application. When nothing happens with the press, it indicates that the application in use does not support the key.**

 Press to switch application.


 Press to display Configuration screen.


 Press to set the trace items or to switch the operation window.

 Press to set measurement item parameters.

 Use when switching graph marker operation.

 Press to set parameters related to the peak search function.

 Press to start single measurement.

 Press to start continuous measurements.


13



Rotary knob/Cursor key/Enter key/Cancel key

The rotary knob and cursor keys select display items or change settings.

Press  to set the entered or selected data.

Press  to cancel input or selected data.


14



Shift key


Operates keys with functions in blue characters on panel. Press the Shift key so the key lamp is green and then press the target key.

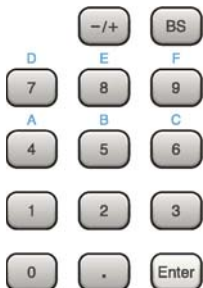


15




Numeric keypad

Enters numbers on parameter setup screens.

Press  to delete the last entered digit or character.

[A] to [F] can be entered by pressing keys  to  while the Shift key lamp  is green.

16

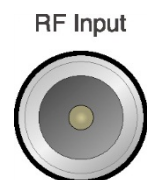

RF Input connector

Inputs RF signal. This is an N type input connector.

17



RF Output Control key

When the Vector Signal Generator option is installed, the RF output control key lamp lights orange in the RF signal output On state.


This is not available when the Option 044/045 is installed. (Only for MS2830A)

18 SG Output(Opt)



RF Output connector (when Option 020 installed)  
Outputs RF signal, when the Vector Signal Generator option is installed. This is an N type output connector.  
This is not available when the Option 044/045 is installed. (Only for MS2830A)


19



USB connector (type A)  
Connect the accessory USB keyboard, mouse or USB memory.

20



Modulation control key (MS2830A only)  
When the Vector Signal Generator option is installed, the lamp  on the key lights up in green in the modulation On state.  
This is not available when the Option 044/045 is installed.

21



Application key (MS2830A only)  
Press to switch between applications.



Press to display the Spectrum Analyzer main screen.



Press to display the Signal Analyzer main screen, when Option 005/105 and 006/106 are installed.



Press to display the Signal Analyzer main screen, when Vector Signal Generator option is installed.



This is a blank key. Not used.



Displays the main screen of the application that is selected using the Application Switch (Auto), or displays that of the pre-selected application (Manual).  
For details, refer to 3.5.4 Changing application layout in *MS2830A Signal Analyzer Operation Manual (Mainframe Operation)*.

22



1st Local Output connector (Only for MS2830A)  
This is available when the Option 044/045 is installed.  
Supplies local signal and bias current to the external mixer, and receives the IF signal with its frequency converted.

## 2.1.2 Rear panel

This section describes the rear-panel connectors.

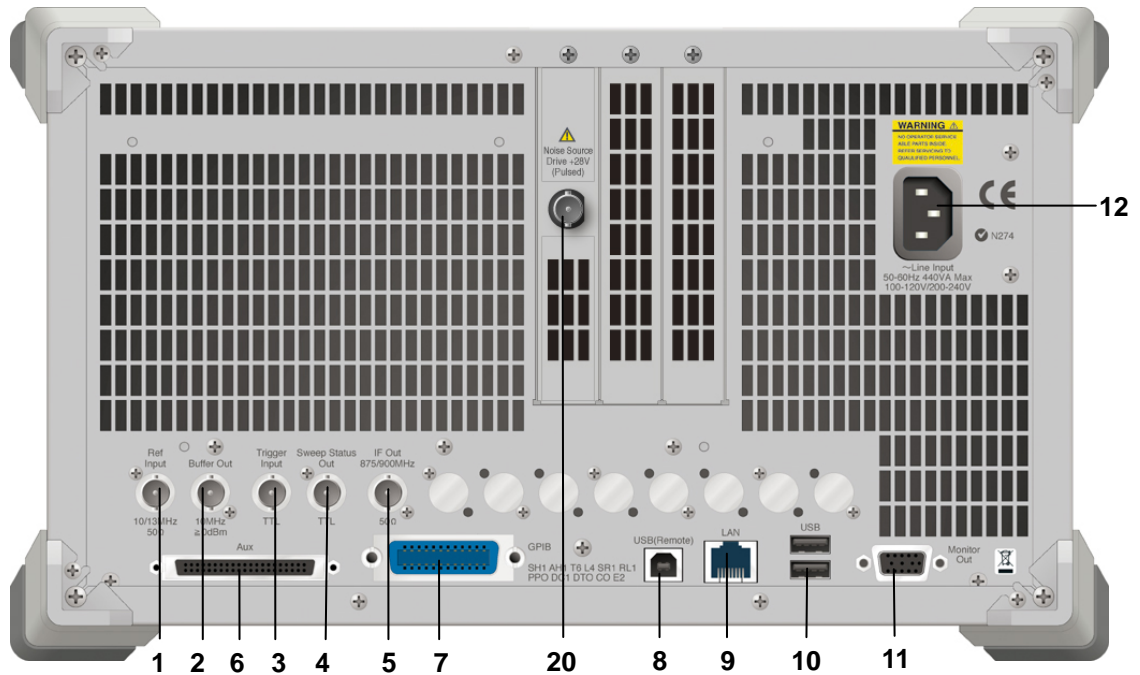


Figure 2.1.2-1 MS269x series rear panel

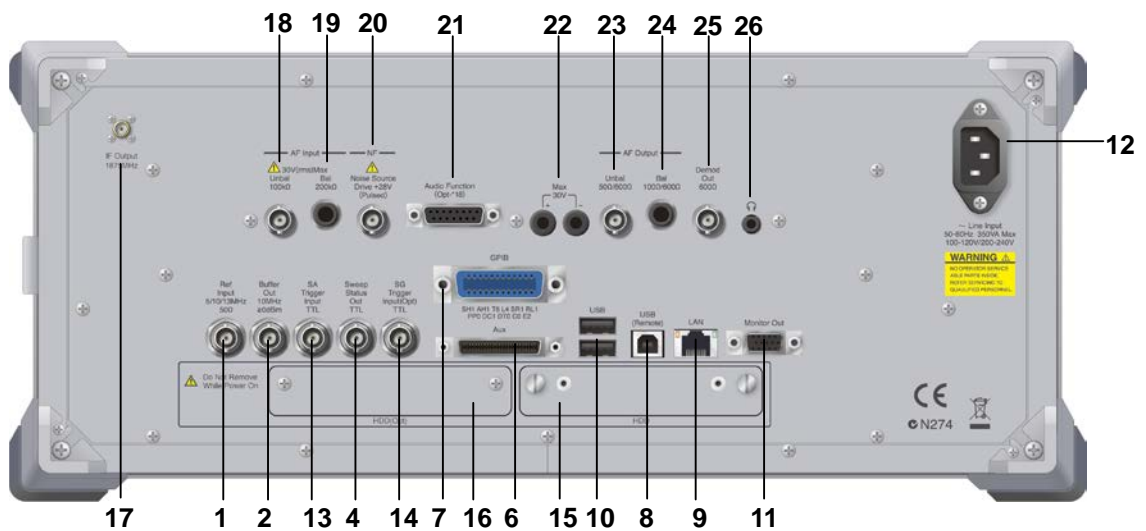









Figure 2.1.2-2 MS2830A rear panel



- |   |  |   |
|---|--|---|
| 1 |  <p style="text-align: center;">Ref<br/>Input</p>           | <p>Ref Input connector (reference frequency signal input connector)</p> <p>Inputs external reference frequency signal. It is for inputting reference frequency signals with higher accuracy than the instrument's internal reference signal, or for synchronizing the frequency of the MS2690A/MS2691A/MS2692A or MS2830A to that of other equipment. The following frequencies are supported:</p> <p>MS269x series: 10 MHz/13 MHz<br/>MS2830A: 5 MHz/10 MHz/13 MHz</p> |
| 2 |  <p style="text-align: center;">Buffer Out</p>              | <p>Buffer Out connector (reference frequency signal output connector)</p> <p>Outputs the internal reference frequency signal (10 MHz). It is for synchronizing frequencies between other equipment and the MS2690A/MS2691A/MS2692A or MS2830A.</p>  |
| 3 |  <p style="text-align: center;">Trigger<br/>Input</p>     | <p>Trigger Input connector (MS269x series only)</p> <p>Inputs trigger signal from external device.</p>  |
| 4 |  <p style="text-align: center;">Sweep Status<br/>Out</p>  | <p>Sweep Status Out connector</p> <p>Outputs signal when internal measurement is performed or measurement data is obtained.</p>   |
| 5 |  <p style="text-align: center;">IF Out<br/>875/900MHz</p> | <p>IF Out connector (MS269x series only)</p> <p>Not used.</p>   |
| 6 |  <p style="text-align: center;">Aux</p>                   | <p>AUX connector</p> <p>Not used.</p>   |
| 7 |  <p style="text-align: center;">GP-IB</p>                 | <p>GP-IB connector</p> <p>Used to remote-control this unit via GPIB from external controller. For external control via GPIB.</p>  |


8 USB(Remote)



USB connector (type B)

Used to remote-control this unit via USB from external controller. For external control via USB.

9 LAN



Ethernet connector

Connects PC or Ethernet network.

10 USB



USB connector (type A)

Used to connect a USB keyboard or mouse or the USB memory supplied.

11 Monitor Out



Monitor Out connector

Connects external display.

12



~Line Input  
50-60Hz 440VA Max  
100-120V/200-240V

AC inlet

Supplies power.

13

SA  
Trigger  
Input  
TTL



SA Trigger Input connector (MS2830A only)

This is a BNC connector for inputting external trigger signal (TTL) for SPA and SA applications.

14

SG  
Trigger  
Input(Opt)  
TTL



SG Trigger Input connector (MS2830A only)

This is a BNC connector for inputting external trigger signal (TTL) for Vector Signal Generator option.

- 15 HDD** HDD slot (MS2830A only)  
This is a standard hard disk slot.
- 16 HDD(Opt)** HDD slot for Option (MS2830A only)  
This is a hard disk slot for the options.
- 17**  IF output connector (Only for MS2830A)  
Monitor output of the internal IF signal.  
This is available when the Option 044/045 is installed.
- 18**  Unbal  
100kΩ  
AF Input connector (unbalanced)  
BNC connector to input unbalanced AF signal from external device.  
This is available when the Option 018/118 is installed.
- 19**  Bal  
200kΩ  
AF Input connector (balanced)  
Standard phone jack (3 poles,  $\phi 6.3$  mm) connector to input balanced AF signal from external device.  
This is available when the Option 018/118 is installed.
- 20**    
Noise Source  
Drive +28V  
(Pulsed)  
Noise Source connector  
Supply (+28V) of the Noise Source Drive.  
This is available when the Option 017/117 is installed.
- 21**  Audio Function  
(Opt-\*18)  
General Input/Output (Audio Function) connector  
D-Sub 15 connector for audio function input/output from/to the external device.  
This is available when the Option 018/118 is installed.
- 22**  Max  
30V  
PTT Control connector  
Banana plug jack connector to control PTT (Push to Talk).  
This is available when the Option 018/118 is installed.

23



AF Output connector (unbalanced)

BNC connector to output unbalanced AF signal to external device.  
This is available when the Option 018/118 is installed.

24



AF Output connector (balanced)

Standard phone jack (3 poles,  $\phi 6.3$  mm) connector to output balanced AF signal to external device.  
This is available when the Option 018/118 is installed.

25



Demodulation Output connector

BNC connector to output demodulated AF signal to external device.  
This is available when the Option 018/118 is installed.

26



Headphone Output connector

Mini jack connector to output demodulated AF audio signal to external device.  
This is available when the Option 018/118 is installed.

## 2.2 Signal Path Setup

As shown in Figure 2.2-1, connect the instrument and the DUT using an RF cable, so that the signal to be tested is input to the RF Input connector. To prevent an excessive level signal from being input, do not input the signal before setting the input level using this application.

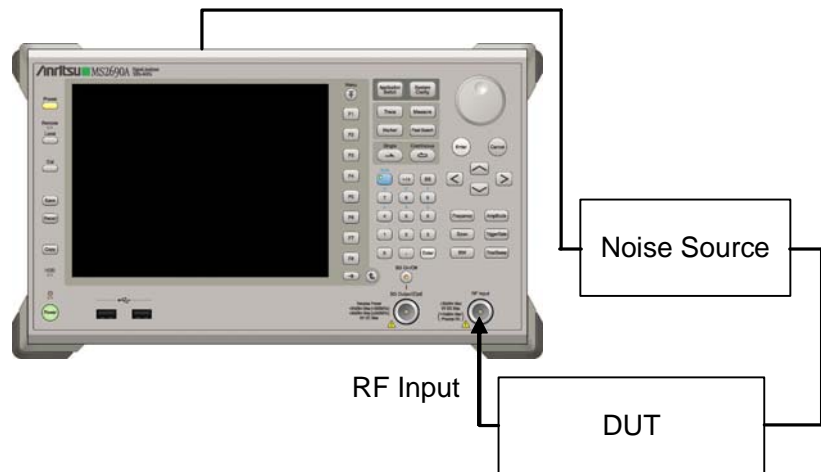


Figure 2.2-1 Signal path setup example

Connect the Noise Source to the Noise Source connector. Set the reference signal paths from external sources, as required.

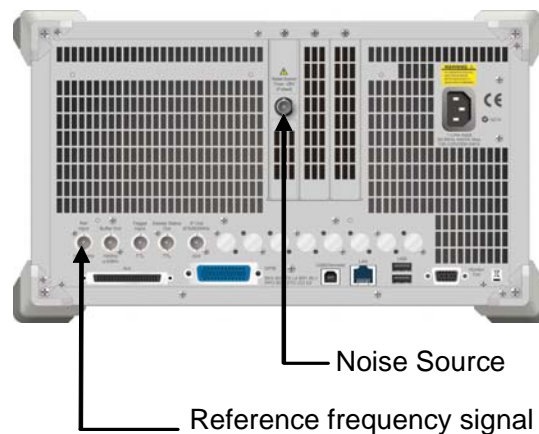


Figure 2.2-2 External signal input

## 2.3 Application Startup and Selection

To use this application, it is necessary to load (start up) and select the application.





### 2.3.1 Launching application

The application startup procedure is described below.

**Note:**

The XXX indicates the application name currently in use.


<Procedure>

1. Press  to display the Configuration screen.
2. Press  (Application Switch Settings) to display the Application Switch Registration screen.
3. Press  (Load Application Select), and move the cursor to “XXX” in the Unloaded Applications list.  
If “XXX” is displayed in the **Loaded Applications** list, this means that the application is already loaded.  
If “XXX” appears in neither the **Loaded Applications** nor **Unloaded Applications** list, this means that the application has not been installed.
4. Press  (Set) to load the application. If “XXX” is displayed in the **Loaded Applications list**, this means that the application is already loaded.

### 2.3.2 Selecting application

The selection procedure is described below.

<Procedure>

1. Press  to display the Application Switch menu.
2. Press the menu function key displaying “XXX”.

The application can also be selected with mouse, by clicking “XXX” on the task bar.

## 2.4 Initialization and Calibration

This section describes the parameter settings and the preparations required before starting measurement.

### 2.4.1 Initialization



After selecting this application, first perform initialization. Initialization returns the settable parameters to their default value in order to clear the measurement status and measurement results.

**Note:**

When another software application is switched to or this application is unloaded (ended), the application keeps the parameter settings at that time. The parameter values that were last set will be applied when this application is selected next time.

The initialization procedure is as follows.



<Procedure>

1. Press  to display the Preset function menu.
2. Press  (Preset).

### 2.4.2 Calibration

Perform calibration before performing measurement. Calibration sets the level accuracy frequency characteristics for the input level to flat, and adjusts level accuracy deviation caused by internal temperature fluctuations. Calibration should be performed when first performing measurement after turning on power, or if beginning measurement when there is a difference in ambient temperature from the last time calibration was performed.

<Procedure>

1. Press  to display the Application Cal function menu.
2. Press  (SIGANA All).

For details on calibration functionality only executable with this instrument, refer to the *MS2690A/MS2691A/MS2692A Signal Analyzer Operation Manual (Mainframe Operation)* or *MS2830A Signal Analyzer Operation Manual (Mainframe Operation)*.

After the calibration is complete, execute NF Calibration.  
For details on NF Calibration, refer to 3.4.6 “Cal Setup”.





## Chapter 3 Measurement

---

This chapter describes the measurement function, the parameter contents and the setting methods

3.1	Basic Operation .....	3-2
3.1.1	Screen layout.....	3-2
3.1.2	Main function menu .....	3-3
3.1.3	Performing measurement.....	3-4
3.1.4	Restrictions on File Input/Output .....	3-4
3.2	Setting Frequency.....	3-5
3.2.1	Frequency Mode.....	3-6
3.2.2	Fixed Setting.....	3-6
3.2.3	List Setting .....	3-7
3.2.4	Sweep Setting .....	3-10
3.3	Setting Level .....	3-11
3.3.1	Attenuator .....	3-12
3.3.2	Pre-Amp .....	3-12
3.4	Setting Common Items .....	3-13
3.4.1	DUT Mode .....	3-14
3.4.2	Convert Setup.....	3-15
3.4.3	External Lo Setup .....	3-16
3.4.4	Loss Comp .....	3-18
3.4.5	ENR .....	3-24
3.4.6	Cal Setup.....	3-30
3.5	Setting the Measure Function.....	3-32
3.5.1	Trace .....	3-33
3.5.2	Storage .....	3-35
3.6	Setting the Marker Function.....	3-36
3.7	Setting the Peak Search Function .....	3-37
3.8	Measurement Results .....	3-39
3.8.1	List display.....	3-39
3.8.2	Graph Display .....	3-44
3.8.3	Spot Display .....	3-47
3.8.4	Saving Measurement Results .....	3-49

## 3.1 Basic Operation

### 3.1.1 Screen layout

This section describes the screen layout of the Noise Figure measurement function.



Figure 3.1.1-1 Screen layout

- [1] Measurement parameter  
Displays the specified parameter. For details about measurement results, see 3.8 “Measurement Result.”
- [2] Measurement Status Area  
Displays alarms which indicate measurement errors. For details, refer to Section 3.8 “Measurement Result.”
- [3] Measurement Result Window  
Displays the measurement results. One of List display, Graph display, and Spot display is displayed depending on the setting of Frequency Mode and Layout. For details, refer to Section 3.8 “Measurement Result.”
- [4] Status Area  
Displays the Measurement Status.
- [5] Function menu  
Displays the functions executable with function keys.

### 3.1.2 Main function menu

This section describes the main function menu on the main screen.

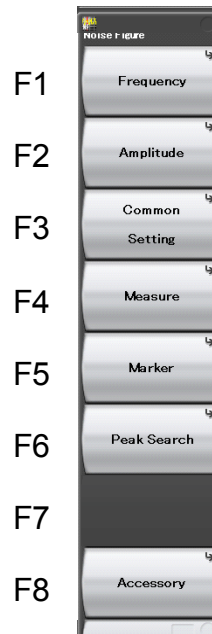









Figure 3.1.2-1 Main Function Menu

Table 3.1.2-1 Main Function Menu

Function Key	Menu Display	Function
F1	Frequency	Sets the frequency.  3.2 Setting Frequency
F2	Amplitude	Sets the level.  3.3 Setting the level
F3	Common Setting	Sets the common items.  3.4 Setting Common Items
F4	Measure	Opens the Measure function.  3.5 Setting the Measure Function
F5	Marker	Opens the Marker function.  3.6 Setting the Marker Function
F6	Peak Search	Opens the Peak Search function.  3.7 Setting the Peak Search Function
F8	Accessory	Performs settings for other functions.  4 Other Functions

### 3.1.3 Performing measurement

There are two measurement modes: single and continuous. Measurement is performed once in the single measurement mode, and continuously in the continuous measurement mode.

#### Single

Items are measured only for the measurement count (Storage Count) before measurement is stopped.

<Procedure>

Press .

#### Continuous

Measurement will continue even if parameters are changed or the window display is changed. Measurement will be stopped if another application is selected, or DUT Mode is changed.

<Procedure>

Press .


### 3.1.4 Restrictions on File Input/Output

This application can save the measurement results and the loss compensation tables, etc. in a file or load them from a file.





The files are input/output in csv format, and saved in different folders by item. One folder can store up to 100 files.

For saving destination and format by item, refer to the description of each item.

## 3.2 Setting Frequency

This section describes the frequency-related settings. Press  (Frequency) on the main function menu to display the Frequency function menu.

**Table 3.2-1 Frequency Function Menu**

Function Key	Menu Display	Function
F1	Frequency Mode	Opens the Frequency Mode Function Menu.  3.2.1 Frequency Mode
F2	Fixed Setting	Opens the Fixed Setting Function Menu.  3.2.2 Fixed Setting
F3	List Setting	Opens the List Setting Function Menu.  3.2.3 List Setting
F4	Sweep Setting	Opens the Sweep Setting Function Menu.  3.2.4 Sweep Setting


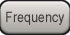
**Note:**

When DUT Mode is not Amplifier, the setting frequency changes according to LO Mode as in Table 3.2-2.

**Table 3.2-2 Setting Frequency when DUT is other than Amplifier**




LO Mode	Setting Frequency
Fixed	IF (Output from DUT)Frequency
Variable	RF (Input to DUT)Frequency

### 3.2.1 Frequency Mode

Press  (Frequency Mode) on the Frequency function menu or  to display the Frequency Mode Function menu.

After each mode is set, the setting screen is displayed.


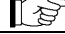

**Table 3.2.1-1 Frequency Mode Function Menu**

Function Key	Menu Display	Function
—	Frequency	Pressing [Frequency] Displays this function.
F1	Fixed	Sets the Frequency Mode to Fixed. Setting Fixed opens the Fixed Setting Function menu.  3.2.2 Fixed Setting
F2	List	Sets the Frequency Mode to List. Setting Fixed opens the List Setting Function menu.  3.2.3 List Setting
F3	Sweep	Sets the Frequency Mode to Sweep. Setting Fixed opens the Sweep Setting Function menu.  3.2.4 Sweep Setting

### 3.2.2 Fixed Setting

This section describes the setup to be performed when the Frequency Mode is set to Fixed.


**Table 3.2.2-1 Fixed Setting Function Menu**

Function Key	Menu Display	Function
F1	Position	Same as the Frequency List Edit function menu “Position”.  3.2.3.1 Frequency List Edit
F7	Storage Mode	Same as the Storage function menu “Mode”.  3.5.2 Storage Menu
F8	Storage Count	Same as the Storage function menu “Count”.  3.5.2 Storage Menu

### 3.2.3 List Setting

This section describes the setup to be performed when the Frequency Mode is set to List.

**Table 3.2.3-1 List Setting Function Menu**

Function Key	Menu Display	Function
F1	Device	Specifies the Table file storage destination drive.
F2	Save Frequency List	Saves Frequency List Table in a file.
F3	Recall Frequency List	Recalls Frequency List Table from a file.
F6	Edit	Opens the Frequency List Edit Function Menu.  3.2.3.1 Frequency List Edit

3

Measurement

The file format for Frequency List Table is as follows:

Output/input file path: Anritsu Corporation\Signal Analyzer\User Data\NF Data\FreqList\


Default file name for saving: FrequencyListYYYYMMDD\_n.csv

File extension: csv format


```
[Filetype: FreqList] [1]
[Version: 1.0.0.0] [2]
1000000 [3]
100000000
1000000000
```

- [1] File Type: Describe the file type.  
Describe FreqList for Frequency List Table.
- [2] Describe the version of the file format.
- [3] Describe the Frequency member line by line.

### 3.2.3.1 Frequency List Edit

Press  (Edit) on the List Setting function menu to display the Frequency List Edit Function menu.

This section describes the Frequency List Edit Function Menu that is used to edit a Frequency List Table.

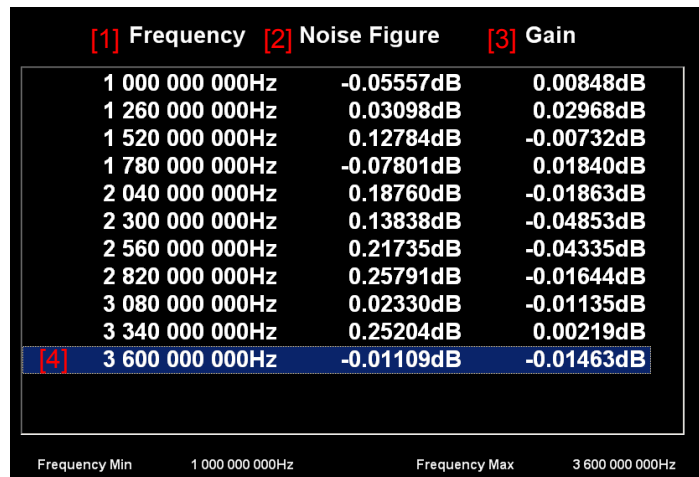

[1] Frequency	[2] Noise Figure	[3] Gain
1 000 000 000Hz	-0.05557dB	0.00848dB
1 260 000 000Hz	0.03098dB	0.02968dB
1 520 000 000Hz	0.12784dB	-0.00732dB
1 780 000 000Hz	-0.07801dB	0.01840dB
2 040 000 000Hz	0.18760dB	-0.01863dB
2 300 000 000Hz	0.13838dB	-0.04853dB
2 560 000 000Hz	0.21735dB	-0.04335dB
2 820 000 000Hz	0.25791dB	-0.01644dB
3 080 000 000Hz	0.02330dB	-0.01135dB
3 340 000 000Hz	0.25204dB	0.00219dB
[4] 3 600 000 000Hz	-0.01109dB	-0.01463dB

Frequency Min 1 000 000 000Hz Frequency Max 3 600 000 000Hz

Figure 3.2.3.1-1 Frequency List Table



- [1] Frequency: Setting Frequency
- [2] Noise Figure: Displays Result Type set to Trace1.
- [3] Gain: Displays Result Type set to Trace2.
- [4] Cursor: Selects a line in the list, and can be moved by operating the cursor keys  .



Table 3.2.3.1-1 Frequency List Edit Function Menu

Function Key	Menu Display	Function
F1	Position	Selects Position from List on the Table screen. Various settings can be performed for items of the selected Position (number). Setting Range: 1 to (Total Point +1) Default: 1 Maximum: 501
F2	Frequency	Sets the frequency for the selected Position Default: Refer to Table 3.2.3.1-2 Unit: GHz/MHz/kHz/Hz Resolution: 1 Hz
F5	Insert Point Blow	Adds Point next to the selected Position. The added Point reflects the current Position value as it is.
F6	Delete Point	Deletes Point of the selected Position.
F7	Sort Table	Sorts Table in ascending order of frequency.
F8	Clear Table	A confirmation message is displayed before clearing and pressing Enter executes the clearing.

Table 3.2.3.1-2 Setting Range of Frequency

DUT Mode	LO Mode	Setting Range
Amplifier	—	Max.: The maximum frequency of the main unit or of Noise Source* <sup>3</sup> , whichever smaller. Min.: The minimum frequency of the main unit or of Noise Source* <sup>3</sup> , whichever bigger.
Other than Amplifier	Fixed* <sup>1</sup>	
	Variable* <sup>2</sup>	Max.: The maximum frequency of Noise Source* <sup>3</sup> Min.: The minimum frequency of Noise Source* <sup>3</sup>

\*1: When LO Mode is Fixed, set as IF frequency (output from DUT).

\*2: When LO Mode is Variable, set as RF frequency (input from DUT).

\*3: For frequency range, refer to Section 3.4.5.1 “Noise Source Select”.

**Note:**

When DUT Mode is Down Converter or Up Converter, the frequency input range is limited according to the fixed frequency (Local Freq or IF Freq) and Sideband Mode setting.

### 3.2.4 Sweep Setting

This section describes the setup to be performed when the Frequency Mode is set to Sweep.



**Note:**

Frequency List Table is edited by setting in Sweep Mode.






**Table 3.2.4-1 Sweep Mode Function Menu**

Function Key	Menu Display	Function
F1	Center	Sets the center frequency of the frequency range for sweep. Setting Range: Refer to Table 3.2.3.1-2 Unit: GHz/MHz/kHz/Hz Resolution: 1 Hz Default: 1.805 GHz
F2	Start	Sets the Start frequency of the frequency range for sweep. Setting Range: Refer to Table 3.2.3.1-2 Unit: GHz/MHz/kHz/Hz Resolution: 2 Hz Default: 10 MHz
F3	Stop	Sets the Stop frequency of the frequency range for sweep. Setting Range: Refer to Table 3.2.3.1-2 Unit: GHz/MHz/kHz/Hz Resolution: 2 Hz Default: 3.6 GHz
F4	Span	Sets the frequency span range for sweep. Setting Range: Maximum Stop Frequency – Minimum start frequency Minimum value: 2 Hz Unit: GHz/MHz/kHz/Hz Resolution: 2 Hz Default: 3.59 GHz
F5	Full Span	Sets the frequency span for sweep to maximum.
F8	Sweep Point	Sets the number of points for sweep. The same item with Total Point. Setting range: 3 to 501* Default: 11 *: When the span is 500 Hz or less, the Sweep Point maximum value is span+1

## 3.3 Setting Level

This section describes the level-related settings. Press  (Amplitude) on the main function menu or  to display the Amplitude function menu.

**Table 3.3-1 Amplitude Function Menu**

Function Key	Menu Display	Function
—	Amplitude	Pressing [Amplitude] displays this function.
F1	Attenuator	Sets the Input Attenuator.  3.3.1 Attenuator
F2	Pre-Amp	Sets Pre-Amp On/Off.  3.3.2 Pre-Amp
F5	Trace Select	Same as the Trace function menu “Trace Select”.  3.5.1 Trace
F7	Reference	Same as the Trace function menu “Reference Value”.  3.5.1 Trace
F8	Scale/Div	Same as the Trace function menu “Scale/Div Value”.  3.5.1 Trace

### 3.3.1 Attenuator

This configures the input attenuator settings. The setting range and resolution are as follows:

**Table 3.3.1-1 Setting Parameter of Input Attenuator**

Item	Setting Parameter
Maximum	60 dB
Minimum	0 dB
Unit	dB
Resolution	MS2830A-045 Installed: 10 dB Others: 2 dB
Default	0 dB

### 3.3.2 Pre-Amp


This configures the Pre-Amp On/Off.

(The function is available only when MS269xA-008/MS2830A-008/MS2830A-068 is installed. This function is fixed to Off if not installed.)







■ Options

- On Enables the Pre-Amp function. (Default)
- Off Disables the Pre-Amp function.

## 3.4 Setting Common Items

This section describes the settings for the common items. Press  (Common Setting) on the main function menu to display the Common Setting function menu.

**Table 3.4-1 Common Setting Function Menu**

Function Key	Menu Display	Function
F1	DUT Mode	Opens the DUT Mode Function menu.  3.4.1 DUT Mode
F2	Convert Setup	Opens the Convert Setup Function Menu. Enable when DUT Mode is not Amplifier.  3.4.2 Convert Setup
F3	External LO Setup	Opens the External LO Setup Function Menu. Enable when DUT Mode is not Amplifier.  3.4.3 External Lo Setup
F4	Loss Comp	Opens the Loss Comp Menu.  3.4.4 Loss Comp
F5	ENR	Opens the ENR Function Menu.  3.4.5 ENR
F8	Cal Setup	Opens the Cal Setup Function Menu.  3.4.6 Cal Setup

### 3.4.1 DUT Mode

This section describes the DUT Mode function menu.

**Table 3.4.1-1 DUT Mode Function Menu**

<b>Function Key</b>	<b>Menu Display</b>	<b>Function</b>
F1	Amplifier	Sets the DUT Mode to the Amplifier.
F2	Down Converter	Sets the DUT Mode to Down Converter.
F3	Up Converter	Sets the DUT Mode to Up Converter.

### 3.4.2 Convert Setup

This section describes how to configure Convert Setup.


**Table 3.4.2-1 Convert Setup Function**

Function Key	Menu Display	Function
F2	LO Mode	Sets local frequency mode at measurement. Fixed: Fixes local frequency and performs measurement sweeping measurement frequency. (Default) Variable: Performs measurement with variable local frequency and fixed IF frequency.
F3	Local Freq	Sets the local frequency to fix when LO Mode is Fixed. Enable when LO Mode is Fixed. Setting Range: 3 Hz to 325 GHz (When Sideband Mode = LSB) 2 Hz to 325 GHz (When Sideband Mode = USB, DSB) (The external mixer M03HW limits the upper limit frequency.) Resolution: 1 Hz Default: 10000000000 Hz (10 GHz)
F4	IF Freq	Sets IF frequency to fix when LO Mode is variable. Enable when LO Mode is Variable. Setting Range: 1 Hz to the maximum frequency of the main unit Resolution: 1 Hz Default: 30000000 Hz (30 MHz)
F5	LO Power	Sets the output level of Local signal. Enable when LO Control is On. Setting Range: -100 to 100 dBm Resolution: 0.01 dB Default: 0.00 dBm
F8	Sideband Mode	Sets sideband to measure. When DUT Mode is Up Converter, DSB is unavailable. LSB: Lower Sideband (Default) USB: Upper Sideband DSB: Double Sideband

### 3.4.3 External Lo Setup

This section describes how to configure External LO Setup.

**Table 3.4.3-1 External Lo Setup Function**

Function Key	Menu Display	Function
F1	LO Control	Sets whether to control inputting external local signal from external device. On: Controls Off: Does not control (Default)
F2	GPIB Address	Sets GPIB address of signal source externally connected. Setting Range: 0 to 30 Default: 18
F3	LO Select	Sets signal source of control target. Setting Range: Actual machines list of VISA Remote Vector SG (built-in SG option installed)
F4	Command Select	Sets control command type of external local signal. Enable when LO Select is not Vector SG. SCPI: SCPI command (Default) Custom: Arbitrary setting command
F5	Command	Opens Command Function Menu. Enable when LO Select is not Vector SG.  3.4.3.1 Command
F6	Settling Time	Sets waiting time for completing external local signal setting. Setting Range: 0 to 5 s Resolution: 1 ms Default: 0 ms
F7	LO MIN Frequency	Sets minimum frequency of external local signal.
F8	LO MAX Frequency	Sets maximum frequency of external local signal.

**Note:**

The Function F2 to F8 on the menu are unavailable when LO Control is OFF.



## 3.4.3.1 Command

This section describes how to configure command settings.



Table 3.4.3.1-1 Command Function

Function Key	Menu Display	Function
F1	LO Auxiliary	Sets SG RF Output remote command character string to control external SG. Setting Range: Supports ASCII. Maximum character number: 79 Default: "OUTP:STAT ON"
F2	LO Freq Prefix	Sets SG Frequency remote command character string to control external SG. Setting Range: Supports ASCII. Maximum character number: 79 Default: "FREQ"
F3	LO Freq Suffix	Sets SG Frequency remote command unit character string to control external SG. Setting Range: Supports ASCII. Maximum character number: 79 Default: "HZ"
F4	LO Power Prefix	Sets SG Output Level remote command character string to control external SG. Setting Range: Supports ASCII. Maximum character number: 79 Default: "POW"
F5	LO Power Suffix	Sets SG Output Level remote command unit character string to control external SG. Setting Range: Supports ASCII. Maximum character number: 79 Default: "DBM"

### 3.4.4 Loss Comp

This section describes how to configure the loss compensation settings.

**Table 3.4.4-1 Loss Comp Function Menu**

Function Key	Menu Display	Function
F1	Before DUT	Sets the loss compensation before the DUT input port. Select from the following three options. Off: Does not compensate the loss before the DUT input port. Fixed: Compensates the loss with the value of Before DUT Fixed. Table: Compensates the loss with the value of Before DUT Table.*
F2	Before DUT Fixed	Sets the compensation value of Before DUT Fixed. Enable when Before DUT is Fixed. Setting Range: -99.999999 to 99.999999 dB Resolution: 0.000001 dB Default: 0 dB
F3	Before DUT Table	Opens the Before DUT Table Function Menu. Enable when Before DUT is Table.  3.4.4.1 Before DUT Table
F5	After DUT	Sets the loss compensation after the DUT output port. Select from the following three options. Off: Does not compensate the loss after the DUT input port. Fixed: Compensates the loss with the value of After DUT Fixed. Table: Compensates the loss with the value of After DUT Table.
F6	After DUT Fixed	Sets the compensation value of After DUT Fixed. Enable when After DUT is Fixed. Setting Range: -99.999999 to 99.999999 dB Resolution: 0.000001 dB Default: 0 dB
F7	After DUT Table	Opens the After DUT Table Function Menu. Enable when After DUT is Table.  3.4.4.2 After DUT Table

- \*: When considering the frequency range to which the corrected value is input is from  $F_a$  to  $F_b$ , a corrected value is applied instead if the displayed frequency is out of the frequency range from  $F_a$  to  $F_b$ :
- If the displayed frequency range is lower than  $F_a$ , then the corrected value  $L_a$  is applied.
  - If the displayed frequency range is higher than  $F_b$ , then the corrected value  $L_b$  is applied.

The value between corrected values is log-interpolated.

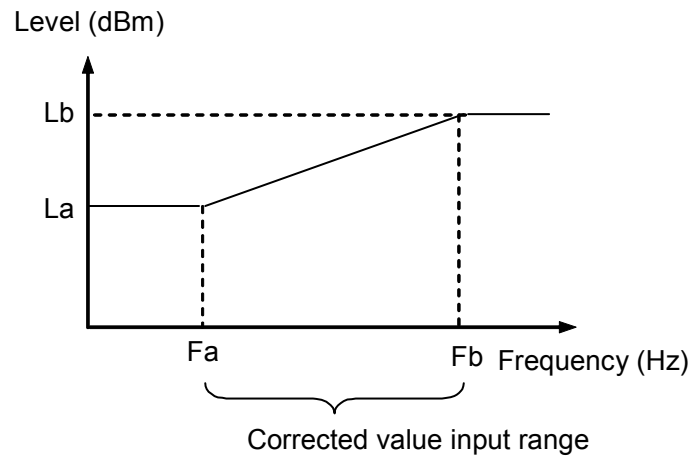



Figure 3.4.4-1 Operation When Correction Values Are Entered

### 3.4.4.1 Before DUT Table

This menu is used to configure settings for the loss compensation before the DUT input port.

**Table 3.4.4.1-1 Before DUT Table Function Menu**

Function Key	Menu Display	Function
F1	Device	Specifies the Table file storage destination drive.
F2	Save Loss Comp Before DUT Table	Before DUT Table in a file.
F3	Recall Loss Comp Before DUT Table	Recalls Before DUT Table from a file.
F6	Edit	Opens Loss Comp Before DUT Table dialog box and Before DUT Edit function menu.  3.4.4.1.1 Before DUT Edit

The file format for Before DUT Table is as follows:

Directory to output files to: Anritsu Corporation\Signal Analyzer\User Data\NF Data\LossCompTable\

Default file name for saving: LossCompBeforeDUTYYYYMMDD\_n.csv

File extension: csv format

```
[Filetype: LossComp]      [1]
[Version: 1.0.0.0]        [2]
1000000,2                 [3]
100000000,2.000001
1000000000,2.111111
```

- [1] File Type: Describe the file type.  
Describe LossComp for Loss Comp Table.
- [2] Describe the version of the file format.
- [3] Describe Frequency and Loss Value in each single line, separating with a comma.

Setting Range of Before DUT Table is as follows:

Frequency: 0 to 100 GHz  
Loss Value: -99.999999 to 99.999999 dB

## 3.4.4.1.1 Before DUT Edit

Edits the Before DUT Table.

Press **F8** (Edit) on the Before DUT Table function menu to display the Loss Comp Before DUT Table dialog box and Before DUT Edit function menu.

Loss Comp Before Position	Loss Comp Before Frequency[Hz]	Loss Comp Before Value[dB]
[1] 1	[2] 10 000 000	[3] 0
2	100 000 000	0
3	1 000 000 000	0
4	2 000 000 000	0
5	3 000 000 000	0
6	4 000 000 000	0
7	5 000 000 000	0
8	6 000 000 000	0
9	7 000 000 000	0
10	8 000 000 000	0
11	9 000 000 000	0
12	10 000 000 000	0
13	11 000 000 000	0
14	12 000 000 000	0
15	13 000 000 000	0
16	14 000 000 000	0
17	15 000 000 000	0
18	16 000 000 000	0

Figure 3.4.4.1.1-1 Loss Comp Before DUT Table Dialog Box

[1] Loss Comp Before Position: Position (Point)

[2] Loss Comp Before Frequency: Frequency of Position (Point)

[3] Loss Comp Before Value: Compensation value of Position (Point)


**Table 3.4.4.1.1-1 Before DUT Edit Function Menu**

<b>Function Key</b>	<b>Menu Display</b>	<b>Function</b>
F1	Position	Selects Position from List on the Table screen. Various settings can be performed for items of the selected Position (number). Setting Range: 1 to (Total Point + 1) Default: 1 Maximum: 501
F2	Frequency	Sets the frequency for the selected Position.
F3	Level	Sets compensation value of the selected Position.
F5	Insert Point Blow	Adds Point next to the selected Position. The added Point reflects the current Position value as it is.
F6	Delete Point	Deletes Point of the selected Position.
F7	Sort Table	Sorts Table in ascending order of frequency.
F8	Clear Loss Comp Before DUT Table	A confirmation message is displayed before clearing and pressing Enter executes the clearing.

## 3.4.4.2 After DUT Table

This menu is used to configure settings for the loss compensation after the DUT output.

Table 3.4.4.2-1 Description of After DUT Table Functions

Function Key	Menu Display	Function
F1	Device	Specifies a drive for storing the Table file.
F2	Save Loss Comp After DUT Table	Saves the After DUT Table as a file.
F3	Recall Loss Comp After DUT Table	Reads out the After DUT Table from a file.
F6	Edit	Opens Loss Comp After DUT Table dialog box and After DUT Edit function menu. Setting Procedure is same as the Before DUT Edit.  3.4.4.1.1 Before DUT Edit

The file format for After DUT Table is as follows:

Directory to output files to: Anritsu Corporation\Signal Analyzer\User Data\NF Data\LossCompTable\

Default file name for saving: LossCompAfterDUTYYYYMMDD\_n.csv

File extension: csv format

```
[Filetype: LossComp]      [1]
[Version: 1.0.0.0]        [2]
1000000,2                 [3]
100000000,2.000001
1000000000,2.111111
```

- [1] File Type: Describe the file type.  
Describe LossComp for Loss Comp Table.
- [2] Describe the version of the file format.
- [3] Describe Frequency and Loss Value in each single line, separating with a comma.

Setting Range of After DUT Table is as follows:





Frequency: 0 to 100 GHz

Loss Value: -99.999999 to 99.999999 dB

### 3.4.5 ENR

This menu is used to configure the ENR (Excess Noise Ratio) function settings.

**Table 3.4.5-1 ENR Function Menu**

Function Key	Menu Display	Function
F1	Noise Source Select	Selects the Noise Source.  3.4.5.1 Noise Source
F2	Noise Source Settling Time	Sets the measurement waiting time when Noise Source On/Off is switched. Setting range: 0 to 5s Resolution: 1 ms Default: 0 ms
F3	ENR Mode	Selects the ENR Mode (Table or Spot). Default: Table
F4	Meas Table	Opens the Meas Table menu. This is available only when ENR Mode is Table.  3.4.5.2 Meas Table
F5	Use Table for Cal	Select the ENR Table for Cal from Meas Table /Cal Table. Default: Meas Table
F6	Cal Table	Opens Cal Table function menu. Enable when Use Table for Cal is Cal Table.  3.4.5.3 Cal Table
F7	Spot	Opens the Spot menu. This menu is available only when the ENR Mode is Spot.  3.4.5.4 Spot
F8	T cold	Sets the temperature when Noise Source is Cold. Setting range: 0 K to 29650000 K Setting unit: K, °C, °F Resolution: 0.01 Default: 296.50 K



## 3.4.5.1 Noise Source Select

The Noise Source Select function selects Noise Source to be used with the measurement. This software supports the NC346 Series noise sources by Noisecom. For detailed specifications, refer to the catalog and data sheet for the NC346 Series.


Table 3.4.5.1-1 Noise Source Select Function

Function Key	Menu Display	Function
F1	NC346A	NC346A (Option1) by Noisecom Frequency range: 0.01 to 18.0 GHz Output ENR 5 to 7 dB
F2	NC346B	NC346B (Option1) by Noisecom Frequency range: 0.01 to 18.0 GHz Output ENR 14 to 16 dB
F3	NC346C	NC346C by Noisecom Frequency range: 0.01 to 26.5 GHz Output ENR 13 to 17 dB
F4	NC346D	NC346D (Option1) by Noisecom Frequency range: 0.01 to 18.0 GHz Output ENR 19 to 25 dB
F5	NC346E	NC346E by Noisecom Frequency range: 0.01 to 26.5 GHz Output ENR 19 to 25 dB
F6	NC346Ka	NC346Ka by Noisecom Frequency range: 0.01 to 40.0 GHz Output ENR 10 to 17 dB
F8	User	Arbitrary noise source

3.4.5.2 Meas Table

This function is used to configure the Meas Table function settings. For description of function keys, refer to Table 3.4.5.2-1.

**Table 3.4.5.2-1 Meas Table Function Menu**

Function Key	Menu Display	Function
F1	Device	Specifies the Table file storage destination drive.
F2	Save Meas Table	Meas Table in a file.
F3	Recall Meas Table	Recalls Meas Table from a file.
F6	Edit	Opens the Meas Table dialog box and Meas Table Edit function menu.  3.4.5.2.1 Meas Table Edit

The file format for Meas Table is as follows:

Directory to output files to: Anritsu Corporation\Signal Analyzer\User Data\NF Data\ENR\MeasTable\

Default file name for saving: MeasYYYYMMDD\_n.csv

File extension: csv format

```
[Filetype: ENR]           [1]
[Version: 1.0.0.0]       [2]
1000000,15                [3]
100000000,15.0002
1000000000,15.0111
```

- [1] File Type: Describe the file type.  
Describe ENR for Meas Table.
- [2] Describe the version of the file format.
- [3] Describe Frequency and ENR Value in each single line, separating with a comma.


The setting range of Meas Table is as follows:

Frequency: 0 to 100 GHz  
Loss Value: -17 to 50 dB

3.4.5.2.1 Meas Table Edit

Edits the Meas Table.

Press **F8** (Edit) on the Meas Table function menu to display the Meas Table dialog box and Meas Table Edit function menu.

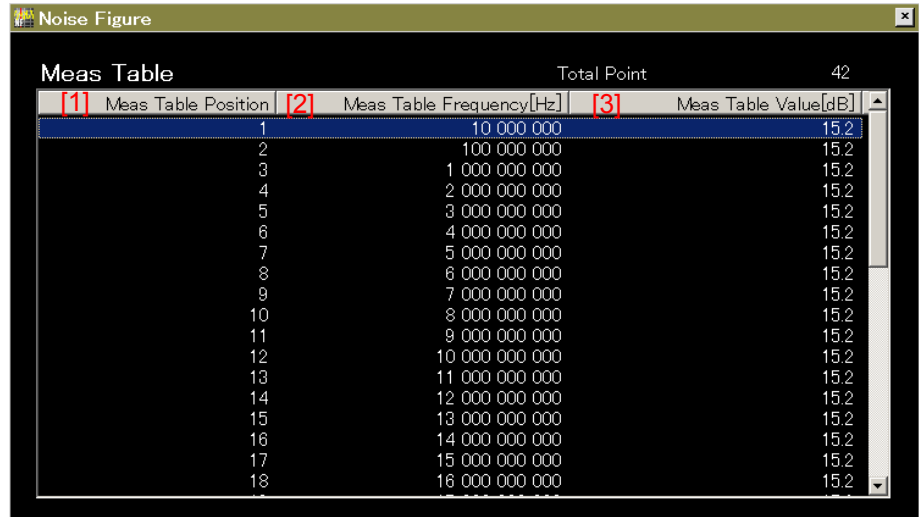

3  
Measurement

Figure 3.4.5.2.1-1 Meas Table Dialog Box

- [1] Meas Table Position: Position (Point)
- [2] Meas Table Frequency: Frequency of Position (Point)
- [3] Meas Table Value: ENR of Position (Point)


Table 3.4.5.2.1-1 Meas Table Edit Function Menu

Function Key	Menu Display	Function
F1	Position	Selects Position from List on the Table screen. Various settings can be performed for items of the selected Position (number). Setting Range: 1 to (Total Point + 1) Default: 1 Maximum: 501
F2	Frequency	Sets the frequency for the selected Position.
F3	ENR	Sets ENR of the selected Position.
F5	Insert Point Blow	Adds Point next to the selected Position. The added Point reflects the current Position value as it is.
F6	Delete Point	Deletes Point of the selected Position.
F7	Sort Table	Sorts Table in ascending order of frequency.
F8	Clear Meas Table	Clears the Table. A confirmation message is displayed before clearing and pressing Enter executes the clearing.

3.4.5.3 Cal Table

This function is used to configure the Meas Table function settings. For description of function keys, refer to Table 3.4.5.3-1.

**Table 3.4.5.3-1 Cal Table Function Menu**

Function Key	Menu Display	Function
F1	Device	Specifies the Table file storage destination drive.
F2	Save Cal Table	Cal Table in a file.
F3	Recall Cal Table	Recalls Cal Table from a file.
F6	Edit	Opens the Cal Table dialog box and Cal Table Edit function menu. Setting procedure is same as the Meas Table Edit.  3.4.5.2.1 Meas Table Edit

The file format for Cal Table is as follows:

Directory to output files to: Anritsu Corporation\Signal Analyzer\  
User Data\NF Data\ENR\CalTable\

Default file name for saving: CalYYYYMMDD\_n.csv

File extension: csv format

```
[Filetype: ENR]           [1]
[Version: 1.0.0.0]       [2]
1000000,15                [3]
100000000,15.0002
1000000000,15.0111
```

- [1] File Type: Describe the file type.  
Describe ENR for Cal Table.
- [2] Describe the version of the file format.
- [3] Describe Frequency and ENR Value in each single line,  
separating with a comma.

The setting range of Cal Table is as follows:

Frequency: 0 to 100 GHz  
Loss Value: -17 to 50 dB

## 3.4.5.4 Spot

This section describes how to configure the Spot mode. For description of function keys, refer to Table 3.4.5.4-1.

Table 3.4.5.4-1 Spot Function Menu

Function Key	Menu Display	Function
F1	Spot Mode	Switches Spot Mode to ENR/T hot. Default: ENR
F2	Spot ENR	Sets Spot ENR Value. This is available only when Spot Mode is ENR. Setting range: -17 dB to 50 dB Resolution: 0.001 dB Default: 15.200 dB
F3	Spot T hot	Sets Spot T hot Value. This is available only when Spot Mode is T hot. Setting Range: 0 to 29650000 K Unit: K, °C, °F Resolution: 0.01 Default: 9982.80 K

### 3.4.6 Cal Setup

This section describes how to configure the various settings related NF Calibration. Press **F8** on the Common Setting function menu or **F8** on the Measure function menu to display the Cal Setup function menu.

**Note:**

Do not execute the CAL function of the main unit after NF Calibration is executed.  
If it is executed, correct measurement results cannot be obtained.

**Table 3.4.6-1 Cal Setup Function Menu**

Function Key	Menu Display	Function
F1	Min ATT	Sets the attenuator value to start NF Calibration. Changing Min ATT value clears NF Calibration data. Setting Range: 0 to 40 dB Resolution: [MS269xA] 2 dB [MS2830A] 2 dB (Other than Option045) 10 dB (Option045) Default: 0 dB
F2	Max ATT	Sets the attenuator value to Stop NF Calibration. Changing Max ATT value clears NF Calibration data. Setting Range: 0 to 40 dB Resolution: [MS269xA] 2 dB [MS2830A] 2 dB (Other than Option045) 10 dB (Option045) Default: [MS269xA] 2 dB [MS2830A] 2 dB (Other than Option045) 10 dB (Option045)
F4	Apply Calibration	Switches whether the NF Calibration result is enabled or disabled. On: Enabled. Off: Disabled. Default: On
F6	Clear Cal Data	Clears the NF Calibration data and saved file. If the NF Calibration data does not exist, it cannot be measured correctly.



Table 3.4.6-2 Cal Setup Function Menu (continued)

Function Key	Menu Display	Function
F8	Calibration Now	<p>Executes NF Calibration. The NF Calibration menu (Refer to Table 3.4.6-2.) is displayed during Calibration is being executed.</p> <p><b>Note:</b> When the below settings are changed, Cal Status becomes Uncal. The measurement cannot be performed properly in Uncal state. Make sure to execute NF Calibration.</p> <ul style="list-style-type: none"> <li>• Frequency List Table</li> <li>• LO Mode</li> <li>• IF Freq</li> <li>• Noise Source Select</li> <li>• Min ATT</li> <li>• DUT Mode</li> <li>• Local Freq</li> <li>• Sideband Mode</li> <li>• ENR</li> <li>• Max ATT</li> </ul>





Table 3.4.6-3 NF Calibration Function Menu

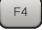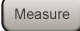Function Key	Menu Display	Function
F8	Cancel	Stops NF Calibration and returns to the Cal Setup menu. In this case, the previous NF Calibration data is not cleared but held.

## 3.5 Setting the Measure Function

This section describes how to set the Measure menu settings. Press  (Measure) on the main function menu or  to display the Measure function menu.

**Table 3.5-1 Measure Function Menu**

Function Key	Menu Display	Function
F1	Trace	Opens the Trace menu.  3.5.1 Trace
F2	Storage	Opens the Storage menu.  3.5.2 Storage
F3	Layout	Switches the screen layout mode between Table and Graph. Graph: Graph display Table: Table display Default: Graph  3.8 Measurement Results
F5	BW	Sets the filter bandwidth when a Gauss filter is applied. This is the same function as Gauss, the filter setting of the Signal Analyzer main unit function. For details, refer to the Operation Manual (Mainframe Operation). (In this application, the maximum is 8 MHz and the minimum is 100 kHz.)
F6	Analysis Time Mode	Switches Analysis Time automatic setting ON/OFF. Auto: Performs the automatic setting. Manual: Sets manually. Default: Auto The analysis time length necessary for NF measurement errors to converge into $2\sigma$ ( $\pm 0.034$ dB) is set automatically according to the BW setting when Auto is set.
F7	Analysis Time (Ave. Time)	Sets the Analysis time. Setting range: 2 $\mu$ s to 200 s (The range is limited by BW.) Setting unit: s, ms, $\mu$ s, ns Resolution: 1 $\mu$ s to 500 $\mu$ s (The resolution is limited by BW.) Default: 16.19 ms
F8	Cal Setup	Opens the Cal Setup menu.  3.4.6 Cal Setup



### 3.5.1 Trace

This section describes the Trace Function Menu.

**Table 3.5.1-1 Description of Trace Functions Menu**

Function Key	Menu Display	Function
F1	Trace Select	Switches the active trace between Trace1 and Trace2. 1: Sets the Trace to 1. 2: Sets the Trace to 2. Default: 1
F2	Result Type	Select the measurement result to be displayed for each trace. For details, refer to Table 3.5.1-2.
F7	Reference	Sets the median of the vertical axis of the graph for each Result Type. For the setting parameters by Result Type, refer to Table 3.5.1-3.
F8	Scale / Div	Sets the scale of the vertical axis of the graph for each Result Type. For the setting parameters by Result Type, refer to Table 3.5.1-4.

**Table 3.5.1-2 Description of Result Type Menu Functions**

Function Key	Menu Display	Function
F1	Noise Figure (dB)	Displays the noise figure (NF).
F2	Noise Factor (Linear)	Displays the noise factor.
F3	Gain	Displays the gain.
F4	Y - Factor	Displays Y-factor (noise power ratio when Noise Source is turned ON/OFF)
F5	T effective	Displays the effective noise temperature.
F6	P Hot	Displays the Power value measured when Noise Source is On.
F7	P Cold	Displays the Power value measured when Noise Source is Off.

**Table 3.5.1-3 Reference Setting Parameter List**

Result Type	Noise Figure	Noise Factor	Gain	Y-Factor	T effective	P hot	P cold
Maximum	100 dB	1E9	100 dB	100 dB	100 000 000 K	100 dB	100 dB
Minimum	-100 dB	0	-100 dB	-100 dB	-100 000 000 K	-100 dB	-100 dB
Setting unit	dB	None	dB	dB	K, °C, °F	dB	dB
Resolution	0.01	0.01	0.01	0.01	0.01	0.01	0.01
Default	4.0 dB	2.5	15.0 dB	5.0 dB	1000.0 K	5.0 dB	0 dB

**Table 3.5.1-4 Scale/Div Setting Parameter List**

Result Type	Noise Figure	Noise Factor	Gain	Y-Factor	T effective	P hot	P cold
Maximum	20 dB	100	20 dB	20 dB	20 000 000 K	20 dB	20 dB
Minimum	0.001 dB	0.001	0.001 dB	0.001 dB	0.1 K	0.001 dB	0.001 dB
Setting unit	dB	None	dB	dB	K, °C, °F	dB	dB
Resolution	0.001	0.001	0.001	0.001	0.001	0.001	0.001
Default	1.0 dB	0.715	5.0 dB	1.0 dB	200.0 K	1.0 dB	1.0 dB


### 3.5.2 Storage

This section describes the Storage Function Menu.

**Table 3.5.2-1 Description of Storage Function Menu**

Function Key	Menu Display	Function
F1	Storage Mode	Switches Storage to off/Average. Off: Does not perform storage. Average: Turns on the averaging function. (Storage is performed for the measurement results.) Default: Off
F2	Storage Count	Sets the count when Storage Mode is Average. Maximum: 999 Minimum: 2 Resolution: 1 Default: 2

### 3.6 Setting the Marker Function


Press  in the main function menu to display the Marker function menu.

**Table 3.6-1 Description of Marker Function Menus**

Function Key	Menu Display	Function
Page 1	Marker	—
F1	Active Marker	Sets the Active Marker. Setting range: 1 to 4 (This software does not support Marker 5 and later.)
F2	Normal	Displays the frequency (time) and level.
F3	Delta	The Marker frequency and level display are values relative to the reference point (Marker set with Relative To)
F4	Off	Turns Off the Marker display.
F7	Relative To	Sets the reference marker when Active Marker is Delta.
Page 2	Marker	—
F8	All Marker Off	Turns Off all the markers.

Marker is intended for both Trace1 and Trace2. Additionally, Marker is valid only to the measurement point.

## 3.7 Setting the Peak Search Function

Press  in the main function menu to display the Peak Search function menu.

**Table 3.7-1 Description of Peak Search Function Menu**

Function Key	Menu Display	Function
F1	Peak Search	Performs a peak search on the active trace according to the type specified by Peak Criteria.
F2	Next Peak	Performs a next search on the active trace according to the type specified by Peak Criteria.
F5	Min Search	Performs a minimum level search on the active trace, and then moves the marker to it.
F6	Next Min	Performs a level search on the active trace, and then moves the marker to a minimum level point larger than the current position.

Table 3.7-1 Description of Peak Search Function Menu (Continued)

Function Key	Menu Display	Function												
F8	Peak Criteria	<p>Search performed by Peak Search and Next Peak depends on the Peak Criteria setting as shown in the table below.</p> <table border="1" data-bbox="922 577 1406 920"> <thead> <tr> <th data-bbox="922 577 1062 663">Peak Criteria</th> <th data-bbox="1062 577 1235 663">Peak Search</th> <th data-bbox="1235 577 1406 663">Next Peak</th> </tr> </thead> <tbody> <tr> <td data-bbox="922 663 1062 734">Max</td> <td data-bbox="1062 663 1235 734">Max Search</td> <td data-bbox="1235 663 1406 734">Next Max</td> </tr> <tr> <td data-bbox="922 734 1062 806">Min</td> <td data-bbox="1062 734 1235 806">Min Search</td> <td data-bbox="1235 734 1406 806">Next Min</td> </tr> <tr> <td data-bbox="922 806 1062 920">Peak to Peak</td> <td data-bbox="1062 806 1235 920">Peak to Peak</td> <td data-bbox="1235 806 1406 920">Does not perform a search.</td> </tr> </tbody> </table> <p>Default Max The detail of Search types are as follows.</p> <ul style="list-style-type: none"> <li>•Max Search Searches the maximum level point of the active trace and moves the Marker.</li> <li>•Next Max Searches the level of the active trace and moves the marker to the maximum level point which level is lower than the current position.</li> <li>•Min Search Searches the minimum level point of the active trace and moves the marker.</li> <li>•Next Min Searches the level of the active trace and moves the marker to the minimum level point which level is higher than the current position.</li> <li>•Peak to Peak Search Searches the level of the active trace, moves the active marker to the maximum level point, and moves the maker set with Relative to of the active marker to the minimum level point.</li> </ul>	Peak Criteria	Peak Search	Next Peak	Max	Max Search	Next Max	Min	Min Search	Next Min	Peak to Peak	Peak to Peak	Does not perform a search.
		Peak Criteria	Peak Search	Next Peak										
Max	Max Search	Next Max												
Min	Min Search	Next Min												
Peak to Peak	Peak to Peak	Does not perform a search.												

## 3.8 Measurement Results

Measurement results are displayed. The measurement result display depends on the settings of Frequency Mode (Refer to Section 3.2.1 “Frequency Mode”) and Layout (Refer to Section 3.5 “Setting Measurement Function”).

### 3.8.1 List display

The measurement result is displayed with List display when Frequency Mode and Layout are as follows:

Frequency Mode: List or Sweep  
 Layout: Table

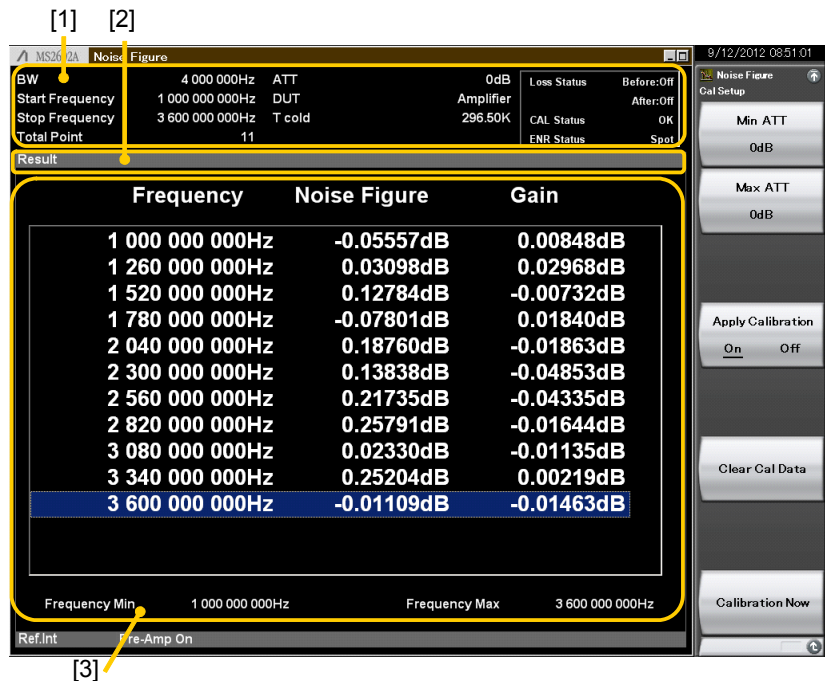



Figure 3.8.1-1 Appearance of the Screen in the List Display Mode

[1] Parameter Area  3.8.1.1 Parameter Area

[2] Measurement Status Area  3.8.1.2 Measurement Status Area

[3] List Area  3.8.1.3 List Area

3.8.1.1 Parameter Area

This section describes the detail of the parameter area. The parameter area is common for all of List display, Graph display, and Spot display.

BW [1]	4 000 000Hz	ATT [5]	0dB	Loss Status [8]	Before:Off
Start Frequency [2]	40 000 000Hz	DUT [6]	Down Converter		After:Off
Stop Frequency [3]	3 600 000 000Hz	T cold [7]	296.50K	CAL Status [9]	OK
Total Point [4]	11	LO Freq [11]	10 000 000 000Hz	ENR Status [10]	Table

Figure 3.8.1.1-1 Close Up of the Parameter Area

- [1] BW: Displays the BW value.
- [2] Start Frequency: Displays the value of Start Frequency only when the Frequency mode is set to Sweep.
- [3] Stop Frequency: Displays the Stop Frequency value only when the Frequency mode is set to Sweep.
- [4] Total Point: Displays the value of Total Point only when the Storage Mode is set to Fixed.
- [5] ATT: Displays the Attenuator value.
- [6] DUT: Displays the DUT mode.
- [7] T Cold: Displays the T Cold value.
- [8] Loss Status: Displays the value of Loss Status, depending on the Before DUT and After DUT settings.

Table 3.8.1.1-1 Loss Status Display List

Loss Status Display		Before DUT	After DUT
Before: Off	After: Off	Off	Off
Before: Fixed	After: Off	Fixed	Off
Before: Off	After: Fixed	Off	Fixed
Before: Fixed	After: Fixed	Fixed	Fixed
Before: Table	After:Off	Table	Off
Before: Off	After: Table	Off	Table
Before: Table	After: Table	Table	Table



**Note**

When Before DUT or After DUT is set to Table, if Table loading fails, Loss Status is displayed in red. Performing measurements as it is does not provide correct measurement results. After Table loading is completed, perform the measurement.

[9] Cal Status                      Displays the Cal Status.

**Table 3.8.1.1-2 Cal Status Display List**

Cal Status Display	Apply Calibration
OK or Uncal	On
Off	Off

**Note:**

Even when Apply Calibration is On, NF Calibration data is disabled if Cal Status becomes Uncal. When Uncal is displayed, correct measurement results cannot be obtained. Re-execute NF Calibration.

[10] ENR Status                      Displays the ENR Status.

**Table 3.8.1.1-3 ENR Status Display List**

ENR Status	ENR Mode
Spot	Spot
Table	Table

**Note:**

When ENR Mode is Table, ENR Status may be displayed in red. This occurs because Meas Table is not set.

Check the setting of Meas Table when ENR Status is displayed in red.

[11] Lo Freq / IF Freq              Displays local frequency or IF frequency that is fixed according to LO Mode when DUT Mode is not Amplifier.

**Table 3.8.1.1-4 Displayed fixed frequency**

LO Mode	Displayed fixed frequency	
Fixed	LO Freq:	Local Frequency
Variable	IF Freq:	IF Frequency

### 3.8.1.2 Measurement Status Area

The measurement status is displayed. For details, refer to Table 3.8.1.2-1.



Figure 3.8.1.2-1 Measurement Status Area

Table 3.8.1.2-1 List of displays the Measurement Status Area

No.	Parameter	Description
[1]	Warm Up	Indicates that the level and frequency are not stable when the power is turned on.
[2]	Level Over	Displayed when the input signal level exceeds the input range.
[3]	Measure	“Measure” display blinks while the measurement is being executed.
[4]	Storage	Displays Storage Mode off/Average and Count for Average.

## 3.8.1.3 List Area

This section describes the details of the List Area.

[1]	Frequency	Noise Figure	Gain
[2]	1 000 000 000Hz	-0.05557dB	0.00848dB
[2]	1 260 000 000Hz	0.03098dB	0.02968dB
[2]	1 520 000 000Hz	0.12784dB	-0.00732dB
[2]	1 780 000 000Hz	-0.07801dB	0.01840dB
[2]	2 040 000 000Hz	0.18760dB	-0.01863dB
[2]	2 300 000 000Hz	0.13838dB	-0.04853dB
[2]	2 560 000 000Hz	0.21735dB	-0.04335dB
[2]	2 820 000 000Hz	0.25791dB	-0.01644dB
[2]	3 080 000 000Hz	0.02330dB	-0.01135dB
[2]	3 340 000 000Hz	0.25204dB	0.00219dB
[2]	3 600 000 000Hz	-0.01109dB	-0.01463dB
[3]	Frequency Min	1 000 000 000Hz	Frequency Max 3 600 000 000Hz

Figure 3.8.1.3-1 Close Up of the List Area

[1] Result Type display area:

Displays Frequency, Result Types of Trace1 and Trace2.

(Result Type: Refer to Section 3.5.1 “Trace menu”.)

**Note:**

Frequency display changes to IF Frequency or RF Frequency according to LO Mode setting (Fixed / Variable) when DUT Mode is not Amplifier.

[2] Measurement result display area:

Displays frequencies and measurement results corresponding to the Result Type of Trace1 and Trace2 each.

[3] Minimum/maximum frequency display area:

Displays the minimum/maximum frequencies of the measurement range.

### 3.8.2 Graph Display

The measurement results are displayed as a graph when Frequency Mode and Layout are set as follows:

Frequency Mode: Sweep or List  
 Layout: Graph



Figure 3.8.2-1 Appearance of the Screen in the Graph Display Mode

- [1] Parameter Area      3.8.2.1 Parameter Area
- [2] Measurement Status Area      3.8.2.2 Parameter Area
- [3] Graph Area      Upper: Trace1, Lower: Trace2  
                                  3.8.2.3 Graph Area
- [4] Marker List Area      3.8.2.4 Marker List Area

#### 3.8.2.1 Parameter Area

The parameter area is common for all of List display, Graph display, and Spot display. Refer to Section 3.8.1.1.

#### 3.8.2.2 Measurement Status Area

The measurement status area is the same for List display, Graph display, and Spot display. Refer to 3.8.1.2.

## 3.8.2.3 Graph Area

This paragraph describes the Graph Area.

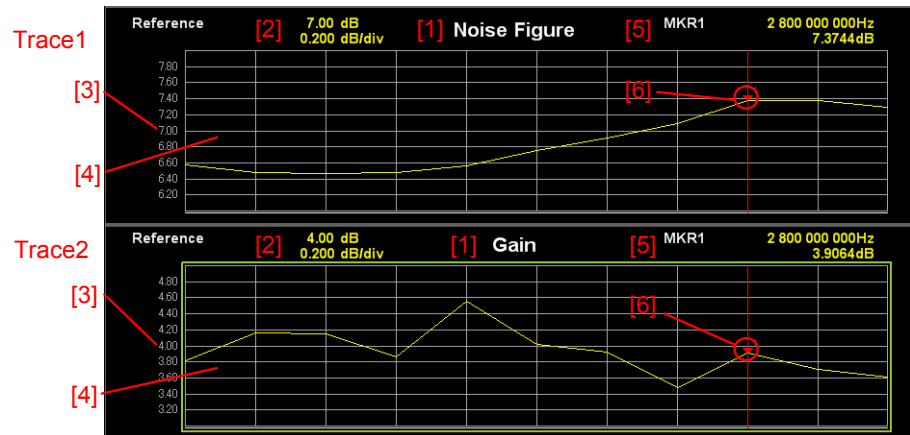


Figure 3.8.2.3-1 Detail of Graph Area

The graph is divided into two. Trace1 result is shown in the upper field and Trace2 result in the lower field.

[1] Result Type display area:

Displays Result Types of Trace1 and Trace2.  
(Result Type: Refer to Section 3.5.1 “Trace menu”.)

[2] Scale/ DIV, Reference display area:

Displays the value of Scale/Div and Reference.

[3] Scale display area: Displays the scale where the Reference value is in the center.

[4] Graph display area: Consists of the following items.

Vertical axis maximum value:

$$\text{Reference} + (\text{Scale} / \text{div}) \times 5$$

Vertical axis minimum value:

$$\text{Reference} - (\text{Scale} / \text{div}) \times 5$$

Horizontal axis maximum value:

Maximum value of Measure List Parameter  
“Frequency” in the Measurement List Table

Horizontal axis minimum value:

Minimum value of Measure List Parameter  
“Frequency” in the Measurement List Table

[5] Active Marker Information display area:

Displays the frequency and level of the marker  
specified with Active Marker.

[6] Marker: Displays the marker icon at the frequency and level position of the marker specified with Active Marker.

### 3.8.2.4 Marker List Area

This paragraph describes the Marker List Area.

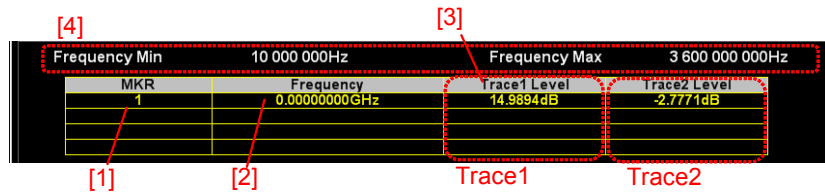


Figure 3.8.2.4-1 Detail of Marker List Area

[1] Marker Mode display area:

The display changes according to Marker Mode.

Marker Mode: Normal Displays the Marker number as it is.

Marker Mode: Delta Displays with the marker number form specified with Marker number  $\Delta$  Relative to.

Marker Mode: Off Deletes all displays of corresponding rows.

[2] Marker Frequency display area:

Displays the frequency of the Marker position.

[3] Level display area:

Displays the level at the Marker position of Trace1 (left side) and Trace2 (right side) each.

[4] Minimum/Maximum Frequency display area:

Displays the minimum/maximum frequencies of the measurement range.

### 3.8.3 Spot Display

The measurement results are displayed with Spot display when Frequency Mode is Fixed.

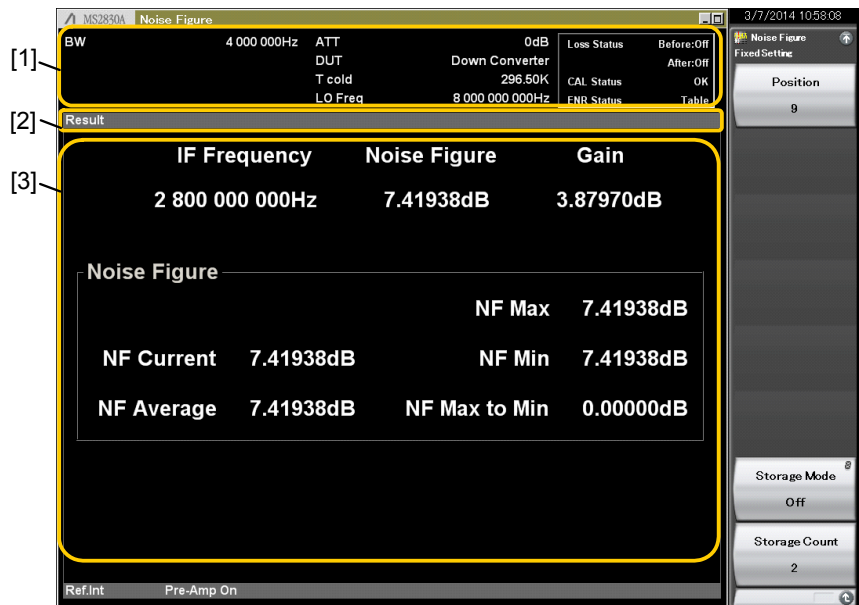


Figure 3.8.3-1 Appearance of the Screen in the Spot Display Mode

- [1] Parameter Area 3.8.3.1 Parameter Area
- [2] Measurement Status Area 3.8.3.2 Measurement Status Area
- [3] Spot Area 3.8.3.3 Spot Area

#### 3.8.3.1 Parameter Area

The parameter area is the same for List display, Graph display, and Spot display. Refer to 3.8.1.1.

#### 3.8.3.2 Measurement Status Area

The measurement status area is the same for List display, Graph display, and Spot display. Refer to 3.8.2.1.

### 3.8.3.3 Spot Area

This paragraph describes the Spot Area.

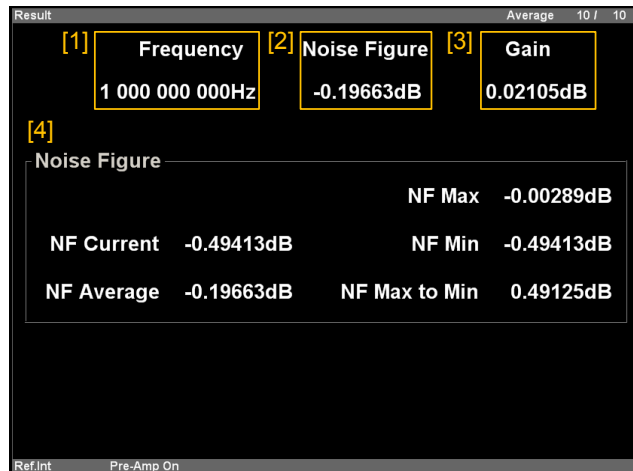



Figure 3.8.3.3-1 Close Up of the Spot Area

- [1] Measurement Frequency: Displays the Measurement Frequency. Switches between IF Frequency and RF Frequency according to LO Mode (Fixed / Variable) when DUT Mode is not Amplifier.
- [2] Trace Level (Trace1): Displays the trace level (measurement result) according to the Result Type of Trace1.
- [3] Trace Level (Trace2): Displays the trace level (measurement result) according to the Result Type of Trace2. (Result Type: Refer to Section 3.5.1 “Trace”)
- [4] Noise Figure: Displays the measurement results of Noise Figure.
  - NF Current: Displays the latest measurement value of Noise Figure.
  - NF Average: Displays the average value of Noise Figure.
  - NF Max: Displays the maximum value of Noise Figure.
  - NF Min: Displays the minimum value of Noise Figure.
  - NF Max to Min: Displays the difference of the maximum and minimum values of Noise Figure.






### 3.8.4 Saving Measurement Results

This section describes how to save the measurement results. Press  in the NF Measurement screen, to display the Save menu.

**Table 3.8.4-1 Description of the Save Function Menu**

Function Key	Menu Display	Function
F1	Device	Specifies a drive for storing the Table file.
F6	Save All Results	Saves all the measurement results as a file.
F7	Save Application	Saves all the Application settings.
F8	Close	Closes the Save menu.

<Procedure>

1. Press  (Device) to change the save destination.
2. When the Setting window is displayed, select the target drive and then press  (Set) to set.
3. With the save destination set, press  (Save ALL Results).

The file format for the measurement results is as follows:

Output/input file path: Anritsu Corporation\Signal Analyzer\  
User Data\NF Data\MeasureResult\

Default file name for saving: NFYYYYMMDD\_n.csv

File extension: csv format

[Filetype: Measurement Results]	(1)
[Version: 1.00.00]	(2)
DUT Setup Parameters	
DUT Mode,Down Converter	(3)
Measurement Parameters	
Tcold,296.5	(4)
ENR Mode,Table	(5)
Frequency Mode,Sweep	(6)
Start Frequency,1000000000	(7)
Stop Frequency,3000000000	(8)
BW,4000000	(9)
Total Point,11	(10)
Spot Mode,Spot ENR	(11)
Spot ENR,15.200	(12)
Spot Thot,9982.80	(13)
Storage Mode,Average	(14)
Storage Count,10	(15)
Pre Amp,On	(16)
Attenuator,8	(17)
LO Mode,Fixed	(18)
Local Freq,10000000000	(19)
IF Freq,30000000	(20)
LO Power,0.00	(21)
Sideband Mode,LSB	(22)
Use Table for Cal,Meas Tabl	(23)
Corrected Measurement Results	(24)
Frequency (Hz),Noise Figure (dB),Noise Factor (lin),Gain (dB),T effective (K),Phot (dB),Pcold (dB)	
1000000000,-1.79548060894012,0.661381363868713,0.0900244042277336,-98.19	
94094848633,15.378791809082,-1.56080520153046	
2000000000,2.70877408981323,1.86585295200348,-0.0779658108949661,251.097	
351074219,15.3628845214844,2.68265271186829	
3000000000,-4.26647281646729,0.374414533376694,0.0959626361727715,-181.4	
19784545898,15.3476991653442,-3.91802644729614	

## Uncorrected Measurement Results (25)

Frequency (Hz),Noise Figure (dB),Noise Factor (lin),Y-Factor (dB),T effective (K),Phot (dB),Pcold (dB)

1000000000,20.8624134063721,121.96671295166,1.04296946525574,35080.347656

25,22.3747253417969,21.3317565917969

2000000000,20.2151432037354,105.078628540039,1.18945503234863,30182.80078

125,22.2022094726563,21.0127563476563

- (1) File Type: Describe the file type. Describe Measurement Results for Measurement Results Table.
- (2) Describe the version of the file format.
- (3) Describe the DUT mode.
- (4) Describe the T cold value.
- (5) Describe the ENR Mode value.
- (6) Describe the Frequency Mode value.
- (7) Describe the Start Frequency value.
- (8) Describe the Stop Frequency value.
- (9) Describe the BW value.
- (10) Describe the Total Point value.
- (11) Describe the Spot Mode.
- (12) Describe the Spot ENR value.
- (13) Describe the Spot T hot value.
- (14) Describe the Storage Mode.
- (15) Describe the Storage Count value.
- (16) Describe the Pre-Amp value.
- (17) Describe the Attenuator value.
- (18) Describe the LO Mode\* value.
- (19) Describe the LO Freq\* value.
- (20) Describe the IF Freq\* value.
- (21) Describe the LO Power\* value.
- (22) Describe the Sideband Mode\* value.
- (23) Describe the Use Table for Cal\* value.
- (24) Describe the corrected values among the measurement results in the following order, separating with commas:  
Frequency, Noise Figure, Noise Factor, Gain, T effective, Phot, and Pcold

- (25) Describe the uncorrected values among the measurement results in the following order, separating with commas: Frequency, Noise Figure, Noise Factor, Y-Factor, T effective, Phot, and Pcold

\*: No value is described when DUT Mode is Amplifier.


## *Chapter 4 Other Functions*

---

This chapter describes other functions of this application.

4.1	Selecting Other Functions .....	4-2
4.2	Setting Title .....	4-2
4.3	Erasing Warmup Message .....	4-2

## 4.1 Selecting Other Functions

Pressing  (Accessory) on the main function menu displays the Accessory function menu.






**Table 4.1-1 Accessory function menu**

Function Keys	Menu Display	Function
F1	Title	Sets the title character string.
F2	Title (On/Off)	Displays (On) or hides (Off) the title character string.
F4	Erase Warm Up Message	Erases the warmup message display.


## 4.2 Setting Title

A title of up to 32 characters can be displayed on the screen. (Character strings of up to 17 characters can be displayed on a function menu. The maximum number of characters to be displayed on the top of the function menu varies according to character string.)



<Procedure>

1. Press  (Accessory) on the main function menu.
2. Press  (Title) to display the character string input screen. Select a character using the rotary knob, and enter it by pressing . Enter the title by repeating this operation. When the title is entered, press  (Set).
3. Press  (Title) and then select "Off" to hide the title.

## 4.3 Erasing Warmup Message

The warmup message , which is displayed upon power-on and indicates that the level and frequency are not stable, can be deleted.

<Procedure>

1. Press  (Accessory) on the main function menu.
2. Press  (Erase Warm Up Message) to erase the warmup message.

# Chapter 5 Performance Test

---

This chapter describes measurement devices, setup methods, and performance test procedures required for performing performance tests as preventive maintenance.

5.1	Overview of Performance Test .....	5-2
5.1.1	Performance test .....	5-2
5.1.2	Performance test items and instruments used ..	5-3
5.2	Power Port Operation Check .....	5-4

## 5.1 Overview of Performance Test

### 5.1.1 Performance test

Performance tests are performed as part of preventive maintenance in order to prevent the performance degradation before it occurs.

Use performance tests when required for acceptance inspection, routine inspection and performance verification after repairs.

If items that do not meet the required level are detected during performance testing, contact an Anritsu Service and Sales office.

---

 **CAUTION**

---

**Warm up the subject testing device and measuring instruments for at least 30 minutes, in order to stabilize them sufficiently before running performance tests. Demonstrating maximum measurement accuracy requires, in addition to the above, conducting performance tests under ambient temperatures, little AC power supply voltage fluctuations (100 to 120 VAC, 200 to 240 VAC), as well as the absence of noise, vibrations, dust, humidity or other problems.**

---



### 5.1.2 Performance test items and instruments used

Table 5.1.2-1 lists the performance test items and measuring instruments used for testing each of these test items.

**Table 5.1.2-1 List of performance test items and measuring instruments**

Test Items		Summary	Main Instruments Used (Anritsu Model Name)
Supply Voltage	Power port operation check	Voltage check on operation (On/Off)/non-operation and measurement of rising/falling time of the power port for the Noise Figure Measurement Function	Oscilloscope

Perform items deemed critical at regular intervals as preventive maintenance. A recommended cycle for routine tests of once or twice a year is desirable.

## 5.2 Power Port Operation Check

Perform voltage check on operation/non-operation and measurement of rising/falling time of the power port for the Noise Figure Measurement Function.

### Test specifications

Supply Voltage    Operating On: 28 V±0.5 V  
                           Operating Off: 0 V±0.5 V  
                           Not Operating: 0 V±0.5 V  
                           Turn On Time: ≤1 ms  
                           Turn Off Time: ≤1 ms

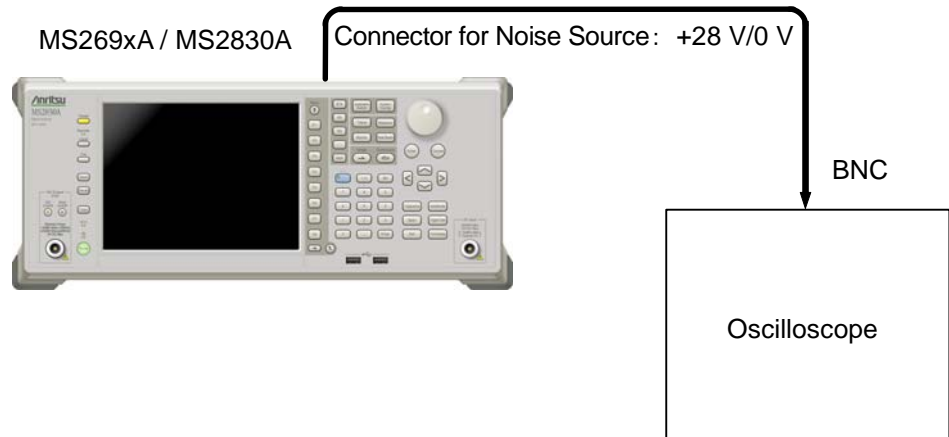


Figure 5.2-1 Power Port Operation Check

Table 5.2-1 Test Conditions and Common Parameters List

MS269xA / MS2830A	Oscilloscope
Application = Noise Figure Measurement Function	X scale: 1 ms/div
Frequency Mode = Fixed	Y scale: 5 V/div
Fixed Frequency = 1000 MHz	Input Impedance: 1 MΩ
RBW = 4 MHz(Default)	Trigger: Positive
ENR Mode = Spot	Trigger Level: 10 V
Spot ENR = 15 dB	

## Test procedure

1. Execute common parameters (Table 5.2-1) setting for the oscilloscope.
2. After preset, execute common parameters setting (Table 5.2-1) for the Noise Figure Measurement Function of the MS269xA and MS2830A.
3. Execute Single measurement and monitor the voltage (voltage for On-state and voltage for Off-state) that arises in a terminal for the Noise Source with the oscilloscope.
4. Check the voltage rising time.
5. Change Trigger of the oscilloscope to Negative.
6. Execute Single measurement and monitor the voltage (voltage for On-state and voltage for Off-state) that arises in a terminal for the Noise Source with the oscilloscope.
7. Check the voltage falling time.
8. Confirm that the rising time, falling time, voltage for On-state, voltage for Off-state, and voltage (voltage on non-operation) after Single measurement execution satisfy the specifications.

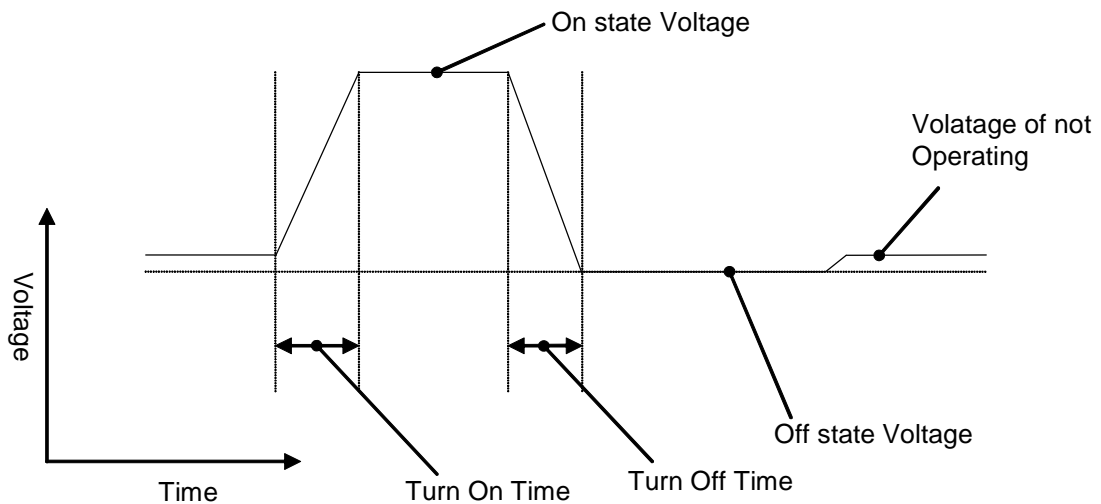


Figure 5.2-2 Power Port Operation Check Reference Figure



## Appendix A Error Message

**Table A-1 Message Processing and Status**

Message	Description
Out of range	The settable range is exceeded.
Not available when Frequency Mode is not Fixed	You can set only when the Frequency Mode is set to Fixed.
Not available when Frequency Mode is not List	You can set only when the Frequency Mode is set to List.
Not available when Frequency Mode is not Sweep	You can set only when the Frequency Mode is set to Sweep.
Not available when Frequency Mode is Fixed	You cannot set when the Frequency Mode is set to Fixed.
Not available when DUT Mode is Amplifier	You cannot set when the DUT Mode is set to Amplifier.
Not available when LO Control is Off	You cannot set when the LO Control is set to Off.
Not available when LO Mode is Variable	You cannot set when the LO Mode is set to Variable.
Not available when LO Mode is Fixed	You cannot set when the LO Mode is set to Fixed.
Remote search result : No device	Local Oscillator is not found.
Not available when LO Select is Vector SG	You cannot set when the LO Select is set to Vector SG.
VISA driver is not installed	VISA driver is not installed.
The local oscillator is not connected	The local oscillator is not externally connected.
Local Frequency Error Noise Source Maximum Frequency	Error when LO Mode is Fixed The setting exceeds the maximum frequency of Noise Source.
Local Frequency Error Noise Source Minimum Frequency	Error when LO Mode is Fixed The setting falls below the minimum frequency of Noise Source.
Local Frequency Error SA Maximum Frequency	Error when LO Mode is Fixed The setting exceeds the maximum frequency of the main unit.
IF Frequency Error Noise Source Maximum Frequency	Error when LO Mode is Variable The setting exceeds the maximum frequency of Noise Source.
IF Frequency Error Noise Source Minimum Frequency	Error when LO Mode is Variable The setting falls below the minimum frequency of Noise Source.
IF Frequency Error SA Maximum Frequency	Error when LO Mode is Variable The setting exceeds the maximum frequency of the main unit.
Not available when Loss Comp before DUT is not Fixed	You can set only when the Loss Comp before DUT is set to Fixed.

**Table A-1 Message Processing and Status (Cont'd)**

<b>Message</b>	<b>Description</b>
Not available when Loss Comp before DUT is not Table	You can set only when the Loss Comp before DUT is set to Table.
Not available when Loss Comp after DUT is not Fixed	You can set only when the Loss Comp after DUT is set to Fixed.
Not available when Loss Comp after DUT is not Table	You can set only when the Loss Comp after DUT is set to Table.
Not available when ENR Mode is not Table	You can set only when the ENR Mode is set to Table.
Not available when ENR Mode is not Spot	You can set only when the ENR Mode is set to Spot.
Not available when Use Table for Cal is not Cal Table	You can set only when the Use Table for Cal is set to Cal Table.
Not available when Spot Mode is not ENR	You can set only when the Spot Mode is set to ENR.
Not available when Spot Mode is not T hot	You can set only when the Spot Mode is set to T hot.
Not available when Peak Criteria is Peak to Peak	You cannot set when the Peak Criteria is set to Peak to Peak.
Measurement disable	The measurement does not start unless the frequency is set correctly.
Calibration disable	The calibration does not start unless the frequency is set correctly.
Not available during Calibration	The operation is unavailable during NF Calibration.
No file to read	No file to read is found.
File read error	File read error occurred.
File format error	File format error occurred.
Empty Title Name	The title name field is empty.
Empty File Name	The file name field is empty.
Invalid character	Invalid characters are input.

## Appendix B Default Value List

---

### <Frequency>

Frequency Mode	Sweep
Sweep Setting	
Center Frequency	1.805 GHz
Start Frequency	10 MHz
Stop Frequency	3.6 GHz
Span	3.59 GHz
Sweep Point	11
Measurement List Table	
Index0	10 MHz
Index1	369 MHz
Index2	728 MHz
Index3	1.087 GHz
Index4	1.446 GHz
Index5	1.805 GHz
Index6	2.164 GHz
Index7	2.523 GHz
Index8	2.882 GHz
Index9	3.241 GHz
Index10	3.600 GHz

### <Amplitude>

Amplitude	
Attenuator	0 dB
Pre-Amp	On

### <Common Setting>

DUT Mode	Amplifier
Convert Setup	
LO Mode	Fixed
Local Freq	10.00 GHz
IF Freq	30.00 MHz
LO Power	0.00 dBm
Sideband Mode	LSB
External LO Setup	
LO Control	Off
GPIB Address	18
LO Select	Vector SG (with built-in option SG installed)
Command Select	SCPI
Settling Time	0.000 s

*Appendix B Default Value List*

---

	Loss Comp	
	Before DUT	Off
	Before DUT Fixed	0 dB
	After DUT	Off
	After DUT Fixed	0 dB
	ENR	
	Noise Source Select	User
	Noise Source Settling Time	0 ms
	ENR Mode	Table
	Meas Table	15.200 dB
	Use Table for Cal	Meas Table
	Cal Table	15.200 dB
	T cold	296.50 K
	Spot	
	Spot Mode	ENR
	Spot ENR	15.200 dB
	Spot T Hot	9892.80 K
	Cal Setup	
	Min ATT	0 dB
	Max ATT	2 dB (MS269xA)
		2 dB (MS2830A Option045 is not installed)
		10 dB (MS2830A Option045 is installed)
	Apply Calibration	On
<Measure>		
	Trace	
	Trace Select	Trace1
	Result Type	Noise Figure
	Reference	4.00 dB
	Scale/Div	1.000 dB
	Storage	
	Storage Mode	Off
	Storage Count	2
	Layout	Graph
	BW	4.000 MHz
	Analysis Time Mode	Auto
	Analysis Time Mode (Ave. Time)	16.189 ms
<Peak Search>		
	Peak Criteria	Max



References are to page numbers.

## Symbol and Numbers

### 1

1st Local Output connector..... 2-7

### A

AC inlet ..... 2-10

Accessory..... 4-2

AF Input connector (balanced) ..... 2-11

AF Input connector (unbalanced) ..... 2-11

AF Output connector (balanced) ..... 2-12

AF Output connector (unbalanced) ..... 2-12

After DUT Table ..... 3-23

Amplifier ..... 3-14

Application key ..... 2-7

Application Switch ..... 2-14

AUX connector..... 2-9

### B

Before DUT Table..... 3-20

Buffer Out Connector..... 2-9

### C

Cal key ..... 2-3

Cal Setup ..... 3-30

Cal Table ..... 3-28

Calibration ..... 2-3

Cancel key..... 2-6

Center ..... 3-10

Command..... 3-17

Convert Setup..... 3-15

Copy key..... 2-3

Cursor key..... 2-6

### D

Demodulation Output connector ..... 2-12

Down Converter ..... 3-14

DUT Mode..... 3-14

### E

ENR..... 3-24

Enter key ..... 2-6

Erase Warm Up Message..... 4-2

Ethernet connector..... 2-10

Ethernet..... 2-4

External Lo Setup ..... 3-16

### F

Fixed ..... 3-6

Frequency ..... 3-22, 3-27

Front panel ..... 2-2

Function keys ..... 2-4

### G

General Input/Output (Audio Function)

connector..... 2-11

GPIB ..... 2-4, 2-9

GPIB connector ..... 2-9

Graph Area ..... 3-45

Graph Display ..... 3-44

### H

Hard disk access lamp ..... 2-3

HDD slot ..... 2-11

Headphone Output connector..... 2-12

### I

IF Out connector ..... 2-9

IF output connector..... 2-11

### L

List ..... 3-6

List Area ..... 3-43

List display ..... 3-39

LO Mode ..... 3-15

Load Application Select ..... 2-14

Local key ..... 2-4

Loss Comp ..... 3-18

**M**

Main function keys..... 2-5  
Marker ..... 3-36  
Marker List Area..... 3-46  
Meas Table..... 3-26  
Measurement Status Area..... 3-42  
Modulation control key ..... 2-7  
Monitor Out connector ..... 2-10

**N**

Noise Source ..... 1-3  
Numeric keypad ..... 2-6

**P**

Parameter Area ..... 3-40, 3-44, 3-47  
Performance test ..... 5-2  
Position ..... 3-6, 3-22, 3-27  
Power Switch ..... 2-3  
Preset key ..... 2-4  
PTT Control connector ..... 2-11

**R**

Rear panel..... 2-8  
Recall key..... 2-3  
Ref Input connector..... 2-9  
reference frequency signal..... 2-9  
Remote lamp..... 2-4  
RF Input connector ..... 2-6  
RF Output connector..... 2-7  
RF Output Control key ..... 2-6  
Rotary knob ..... 2-6

**S**

SA Trigger Input connector..... 2-10  
Save key ..... 2-3  
Saving Measurement Results..... 3-49  
Setting the Measure Function..... 3-32  
SG Trigger Input connector ..... 2-10  
Shift key..... 2-6  
Sideband Mode ..... 3-15  
Specifications..... 1-5  
Spot ..... 3-29

Spot Area ..... 3-48  
Spot Display ..... 3-47  
Start ..... 3-10  
Sweep ..... 3-6  
Sweep Status Out connector ..... 2-9

**T**

Title ..... 4-2  
Title (On/Off) ..... 4-2  
Trace..... 3-33  
Trigger Input connector ..... 2-9  
trigger signal ..... 2-9

**U**

Up Converter ..... 3-14  
USB connector ..... 2-7  
Type A ..... 2-10  
Type B ..... 2-10