

# PSD signal processing circuits, PSD modules

## Contents

### 1. PSD signal processing circuits

- p.01
- 1-1 Features
  - 1-2 Structure
  - 1-3 How to use

### 2. PSD modules

- p.03
- 2-1 Features
  - 2-2 Structure
  - 2-3 How to use (C10443-01/-02)

### 3. Applications

p.04

These are easy-to-use circuits and modules specifically designed for Hamamatsu PSDs (position sensitive detectors). PSD signal processing circuits are “circuit board” types on which a PSD (sold separately) can be mounted. PSD modules contain a PSD. By using the PSD module together with the signal processing unit for PSD module (sold separately), a position signal can be acquired with two systems: analog output and digital output.

## 1. PSD signal processing circuits

PSD signal processing circuits have a current-to-voltage converter that converts photocurrent from a PSD into voltage. The signal is then processed (position conversion) and output as an analog voltage (analog output type) or converted into digital data (RS-232C) by an A/D converter and output (digital output type).

### 1 - 1 Features


- ▶ No complicated adjustments required
- ▶ Output voltage value shows position information as it is.
- ▶ Stable detection capability
- ▶ Compact design

### 1 - 2 Structure

#### (1) Analog output type

The analog output type C3683-02 is configured as shown in Figure 1-1. The current-to-voltage converter converts photocurrent from a PSD into voltage which is then processed by the signal processing circuit and is output as an analog voltage matching a corresponding position.

[Figure 1-1] Block diagram (C3683-02)

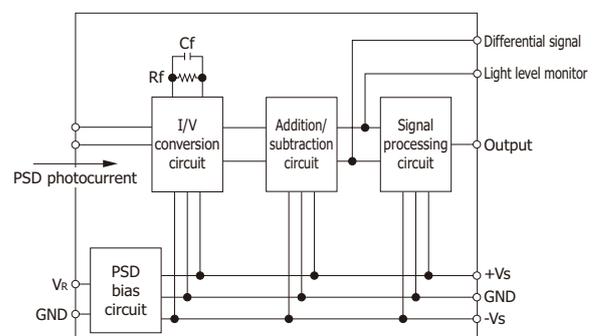


[Table 1-1] Hamamatsu PSD signal processing circuits

Type no.	Applicable PSD	Compatible signal	Output	Conversion impedance (V/A)	Response speed	Supply voltage (V)
C3683-02	1D	DC	Analog	1 × 10 <sup>4</sup>	16 kHz (cutoff frequency)	±15
C4674-01	2D			1 × 10 <sup>5</sup>		
C9068-01	1D		Digital	1 × 10 <sup>5</sup>	5 ms min. (signal conversion time)	+12
C9069-01	2D					

Note: The output voltage (unit: V) values indicate the light spot position (unit: mm) from the center of the photosensitive area.

[Table 1-2] Connection example

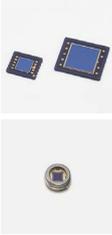
PSD	PSD signal processing circuit	Power supply, measuring instrument, and PC
 <p>One-dimensional PSDs</p>	<p>Analog output</p>  <p>C3683-02</p>	 <p>9-conductor unterminated cable</p>  <p>Probe for voltmeter or oscilloscope (× 1)</p>  <p>Power supply (±15 V)</p>  <p>Voltmeter, oscilloscope, etc.</p>  <p>PC (with A/D conversion board)</p>
	<p>Digital output (RS-232C)</p>  <p>C9068-01</p>	 <p>Cable with DC plug*</p>  <p>Power supply +12 V</p>
 <p>Two-dimensional PSDs</p>	<p>Digital output (RS-232C)</p>  <p>C9069-01</p>	 <p>RS-232C cable</p>  <p>PC</p>
	<p>Analog output</p>  <p>C4674-01</p>	 <p>9-conductor unterminated cable</p>  <p>Probe for voltmeter or oscilloscope (× 2)</p>  <p>Power supply (±15 V)</p>  <p>Voltmeter, oscilloscope, etc.</p>  <p>PC (with A/D conversion board)</p>

\* Accessory for PSD signal processing circuit

## (2) Digital output type

The digital output type C9068-01 is configured as shown in Figure 1-3. The photocurrent from the PSD is converted to voltage by the I/V conversion circuit and converted to digital signal by the A/D converter, then the position is calculated and output by the microcontroller.

[Figure 1-2] Block diagram (C9068-01)

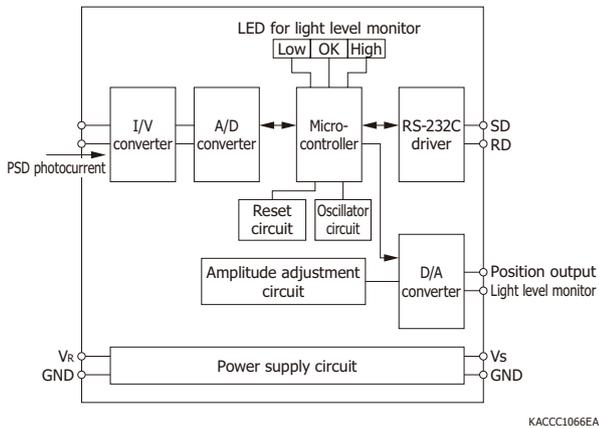

## 1 - 3 How to use

### (1) Analog output type

The analog output type comes with a connector for wiring to the D-sub connector. Solder this wiring connector to a cable that connects to an oscilloscope (or voltmeter) and power supply (cable is not supplied).

### (2) Digital output type

Use the digital output type by connecting the supplied cable with DC plug to the power supply. Connect the output connector to a PC with an RS-232C cable (cable not included).

[Table 2-1] Hamamatsu PSD modules

Type no.	Photosensor	Photosensitive area (mm)	Compatible signal	Output	Cutoff frequency (kHz)	Supply voltage
C10443-01	Two-dimensional PSD	4 × 4	AC, DC	Analog	16	External power supply (±5 to ±12 V)
C10443-02		9 × 9				
C10443-06	4-segment photodiode	10 × 10				

Note: When PSD module is used with PSD module controller (sold separately).

· Output can be changed to digital output.

· Output can be set so that the output voltage (unit: V) value indicates the light spot position (unit: mm) from the center of the photosensitive area (excluding the C10443-06).

## 2. PSD modules


PSD modules are position detection modules that integrate a PSD (or 4-segment Si photodiode) and current-to-voltage converter into a compact case.

### 2 - 1 Features

- ▶ Easy handling
- ▶ High precision analog voltage output
- ▶ Compact : only half size of a business card:  
34 × 40 × 44 (W × D × H) mm

### 2 - 2 Structure


[Figure 2-1] Block diagram (C10443-01/-02)

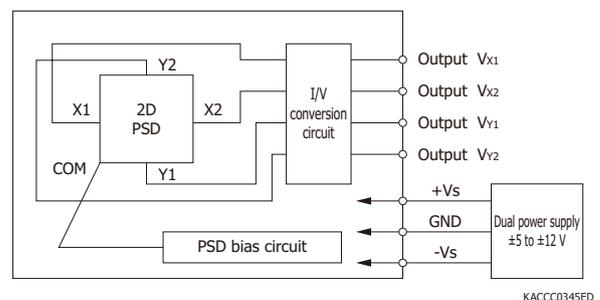

### 2 - 3 How to use (C10443-01/-02)

Position information can be obtained by putting output voltage from the PSD module into equations (2-1) and (2-2).

[Figure 2-2] Connection example (PSD module)

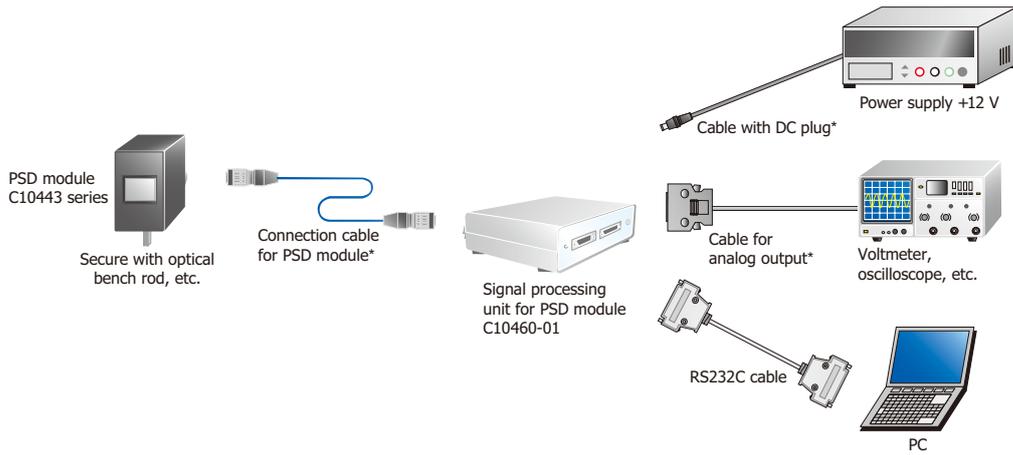

\* Accessories of C10460-01

KACCC1179EA


$$x = \frac{(V_{X2} + V_{Y1}) - (V_{X1} + V_{Y2})}{V_{X1} + V_{X2} + V_{Y1} + V_{Y2}} \times \frac{L}{2} \dots\dots\dots (2-1)$$

$$y = \frac{(V_{X2} + V_{Y2}) - (V_{X1} + V_{Y1})}{V_{X1} + V_{X2} + V_{Y1} + V_{Y2}} \times \frac{L}{2} \dots\dots\dots (2-2)$$

x, y: position (mm) of light spot relative to center of PSD photosensitive area  
 L: 4.5 mm (C10443-01)  
 10 mm (C10443-02)

When the PSD module is connected to signal processing unit for PSD module, position signals from the signal processing unit are available from the two connectors for analog and digital outputs. When using the analog output, connect an oscilloscope or voltmeter to the analog output connector on the controller. The output voltage (unit: V) values indicate the light spot position (unit: mm) from the center of the photosensitive area. When using the digital output, connect a PC to the digital output connector on the controller by serial connection (RS-232C). Position information can be easily loaded into the PC by using the sample software that comes with the controller.

[Figure 2-3] Example of sample software displayed on PC screen

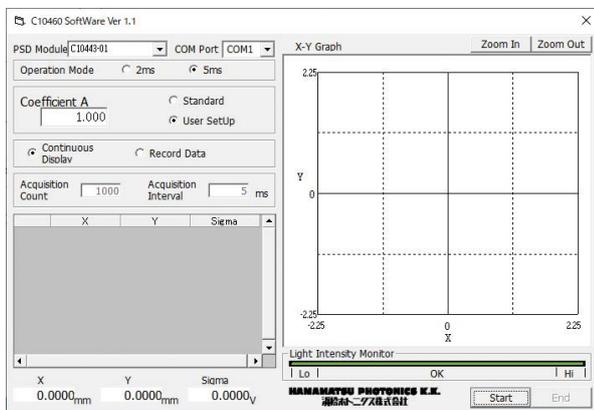

## 3. Applications

- ▶ Laser optical axis alignment
- ▶ Distance sensors
- ▶ Liquid level sensors
- ▶ Distortion measurement

Information described in this material is current as of February 2023.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

# HAMAMATSU

[www.hamamatsu.com](http://www.hamamatsu.com)

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: HAMAMATSU CORPORATION: 360 Foothill Road, Bridgewater, NJ 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: HAMAMATSU PHOTONICS DEUTSCHLAND GMBH: Arzbergerstr. 10, 82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8 E-mail: [info@hamamatsu.de](mailto:info@hamamatsu.de)

France: HAMAMATSU PHOTONICS FRANCE S.A.R.L.: 19 Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: [infos@hamamatsu.fr](mailto:infos@hamamatsu.fr)

United Kingdom: HAMAMATSU PHOTONICS UK LIMITED: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire, AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: [info@hamamatsu.co.uk](mailto:info@hamamatsu.co.uk)

North Europe: HAMAMATSU PHOTONICS NORDEN AB: Torshamnsgatan 35, 16440 Kista, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01 E-mail: [info@hamamatsu.se](mailto:info@hamamatsu.se)

Italy: HAMAMATSU PHOTONICS ITALIA S.R.L.: Strada della Moia, 1 int. 6 20044 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41 E-mail: [info@hamamatsu.it](mailto:info@hamamatsu.it)

China: HAMAMATSU PHOTONICS (CHINA) CO., LTD.: 1201, Tower B, Jiaming Center, 27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R. China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: [hpc@hamamatsu.com.cn](mailto:hpc@hamamatsu.com.cn)

Taiwan: HAMAMATSU PHOTONICS TAIWAN CO., LTD.: 8F-3, No.158, Section 2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081 E-mail: [info@hamamatsu.com.tw](mailto:info@hamamatsu.com.tw)

Cat. No. KACC9014E03 Feb. 2023 DN