



**Agilent**

## Modern Connectivity — Using USB and LAN I/O Converters

What is the best input/output interconnect for your application?

Application Note



**Agilent Technologies**

## Introduction

GPIB has been a primary instrument Input/Output interface for over 30 years due to its proven reliability. New standard computer bus systems, USB and Ethernet (LAN), are gradually being built into modern instruments and test systems. Instrument interconnects are typically GPIB, although, using USB/GPIB and LAN/GPIB converters may be useful in updating your test systems and taking advantage of new bus features such as easy connections, remote instrument access, and higher speed data transfers. The following document compares the USB to GPIB converter (82357B), the Agilent GPIB PC card (82350B), and the LAN to GPIB converter (E5810A) and will help determine which I/O interconnect is best for your application needs.



First, here is a brief description of the three I/O interfaces that will be compared.

### **82350B PCI GPIB interface card**

This card provides an IEEE-488 interface with software and installs into the backplane of your computer. The 82350B makes it easy to access and control instruments and exchange data.

### **82357B USB/GPIB interface**

This interface provides a direct connection from the USB port on your laptop or desktop computer to GPIB instruments. It is a standard Plug and Play device and is automatically detected and configured when connected to the computer USB port.

### **E5810A LAN/GPIB gateway**

This product provides a gateway between network-equipped computer systems and GPIB and/or RS-232 based instruments. The E5810A allows I/O applications to obtain measurement data either locally or remotely from GPIB and/or RS-232 instrumentation.

There are a few factors you want to consider when determining the best I/O connectivity for your test system.

- Controller and operating system
- Steps required for setup
- Data transfer rates
- Number of instruments connected
- Additional software, cables, connections
- Distance from controller to instruments
- Advantages/disadvantages

You want the I/O product to integrate easily with your current test system or you may have the opportunity to build a new system taking advantage of a newer I/O interface. In either case, having details for these topics will be helpful in making the best I/O interconnect decision for your application needs.

## Controller and operating system

In order to take advantage of the new computer bus systems, your test system PC (controller) must meet the following minimal requirements: Pentium® 450 MHz, 128 MB RAM, and 280 MB free disk space to effectively use the GPIB USB, and LAN I/O interfaces. For the best results you may want to use a faster computer with more memory. The I/O products referred to here have been designed to work with the many different PC operating systems being used today. See Table 1 to verify that the operating system of your controller supports the I/O you plan to use.

## Steps required for set-up

The GPIB card, USB/GPIB converter, and LAN/GPIB converter require initial setup to integrate them into your test system. Before you select an I/O interface, you may want to consider the steps for installing and configuring the interface. Here is a brief description of the steps you will need to follow to install your selected I/O interface.

**Table 1.** Operating system support for I/O solutions

<b>Supported operating systems</b>			
<b>Operating system</b>	<b>82350B PCI GPIB interface card</b>	<b>82357B USB/GPIB interface</b>	<b>E5810A LAN/GPIB gateway</b>
Windows Vista™	•	•	•
Windows® XP	•	•	•
Windows® Me	•	•	•
Windows® 2000	•	•	•
Windows® 98	•	•	•
Windows® NT	•		•
HPUX 11i			•*
Linux			•*

\* Provided by Test & Measurement Systems Inc (TAMs) [www.Tamsinc.com](http://www.Tamsinc.com)

### 82357B USB/GPIB

If keeping the set-up time to a minimum is your goal, the 82357B USB/GPIB converter is the I/O interface you are looking for. In just three steps you can be up and running without installing cards or connecting to the LAN. The steps include loading the Agilent I/O libraries on the controller, and plugging the USB connector into the computer. The Agilent I/O Config will run automatically and asks if the default settings are sufficient. I/O Config is a utility used by the Agilent I/O Libraries to automatically configure instrument I/O hardware interface. In most situations, the default settings are selected. The USB/GPIB converter is hot-swappable which means it is easy to connect, disconnect, and reconnect any time. The USB/GPIB converter is very convenient for use with laptops since it provides an I/O interface without having to install a GPIB interface in the backplane of your computer.

### E5810A LAN/GPIB


The setup for the E5810A LAN/GPIB converter takes a little more work although the advantages of connecting to a LAN are well worth the extra effort. You first need a LAN, either global or private, to connect to. You may need help from your local IT group to do this. For initial setup and configuration of the E5810A, your controller needs to have a web browser such as Netscape Navigator 4.7, or Internet Explorer 4.0 and higher. If you plan to use the E5810A for programmed control of instruments, you will install and configure the Agilent I/O libraries on the controller. Connect the hardware, your LAN cable, power plug, and either GPIB or RS-232 cables to instruments. From the controller, you can enter the IP address in your web browser window to setup and communicate with the E5810A LAN/GPIB converter and any connected instruments.

### 82350B PCI GPIB card

The PCI GPIB interconnect is an easy to install computer PCI card. Once the card is installed in a controller's PCI slot, you can install the Agilent I/O libraries, run Agilent's I/O Config, and connect the GPIB cable(s) to the instruments.

## Data transfer rates

Benchmark test results were acquired to determine the difference in data transfer rates for these I/O interfaces with varying data sizes. Time required to transfer data from an instrument to a PC depends on a few factors including the I/O interface. Other factors that affect data transfer rates are the instrument's processing speed, the format and size of data being transferred, the instrument commands and overhead, and the computer's processing speed and memory size. Two instruments were selected to participate; one for its ability to make very fast individual measurements, and the other for its ability to transfer large blocks of data. Each of the three I/O interfaces was tested with both instruments. The intention for the results was to determine which of the three I/O interfaces offers a faster data transfer rate for individual readings and for large data blocks.

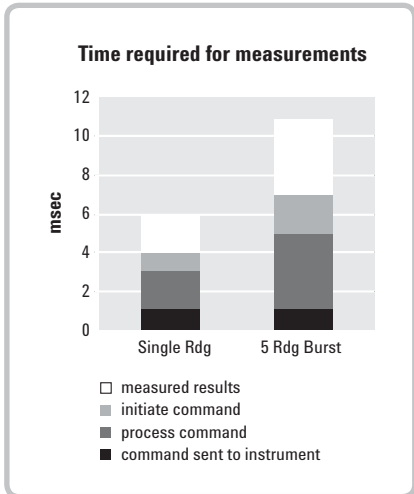


**Figure 3.** Total instrument measurement time for single vs. burst readings

## Individual reading results


A digital multimeter (Agilent 34401A) was selected for testing individual and burst<sup>1</sup> readings. Figures 1 & 2 below show the difference between the data transfer times of the three I/O interfaces. For a single reading, the GPIB interface can transfer data 2 milliseconds faster than the USB/GPIB interface and nearly 1 millisecond faster than the LAN/GPIB interface. That is 16% to 33% faster single readings using the standard GPIB PCI card. However, when taking multiple readings the difference in time per reading is reduced significantly. This is because the instrument's total time required for the measurement is divided between the specified number of readings as shown in Figure 3. The instrument's total measurement time includes the:

- Measurement commands to be sent to the instrument
- Instrument to process the commands
- Instrument to initiate the commands
- Instrument to send a measured result(s)

When using a 'burst' of measurements the instrument configures and initiates only once for multiple readings.

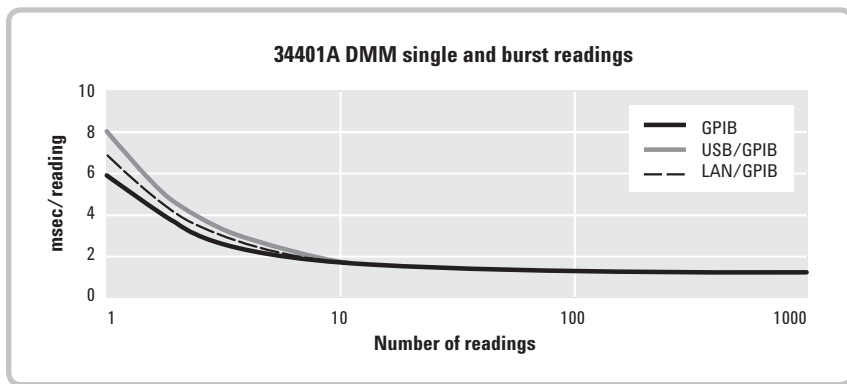

**Figure 1.** Data transfer times for single and 'burst' readings with 34401A

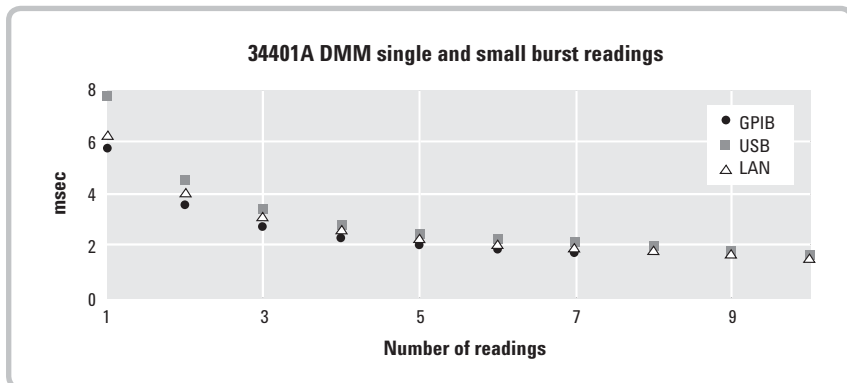

**Figure 2.** Data transfer times for a small range of readings

1. A single trigger will execute a specified number of consecutive measurements of the same kind.

## Large data block results

An Oscilloscope (Agilent 54622D) was selected for testing large data block transfers. The 54622D is able to transfer up to 1 megabyte files for a single waveform. Figures 4 & 5 below show the data transfer times for different size files comparing the three I/O interfaces. As you can see, there is very little difference in transfer time between the I/O interfaces. GPIB is able to transfer the largest 1 megabyte file more quickly than LAN/GPIB or USB/GPIB, although there is less than 6% difference in the transfer times of all three interfaces.

## Data transfer rates summary

The computer standard interfaces USB and LAN offer high-speed data transfers for devices that transfer data at or above 200kB/second. In most cases, the instruments within the test system determine the highest achievable transfer rates. For GPIB based instruments, you will experience nearly the same data transfer rates whether using GPIB, USB/GPIB or LAN/GPIB interfaces. Instruments that have integrated USB and LAN I/O connections are able to achieve much faster data transfer rates than GPIB, the USB/GPIB converter, and the LAN/GPIB converter.

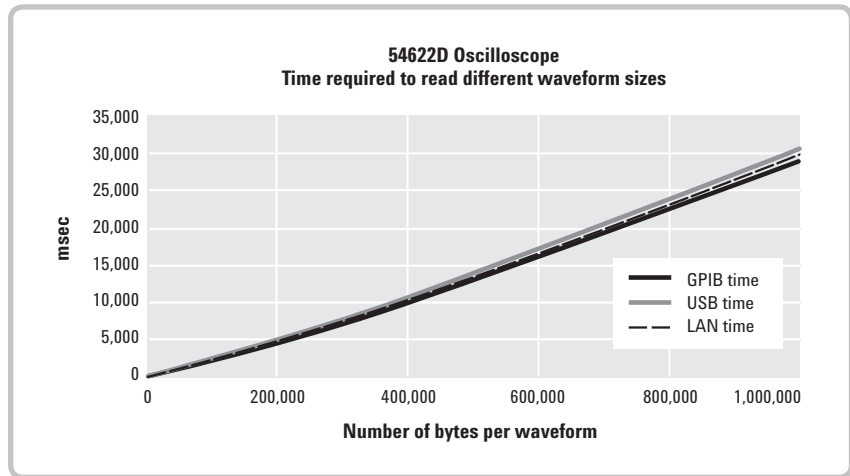


Figure 4. Data transfer time for large data files with 54622D

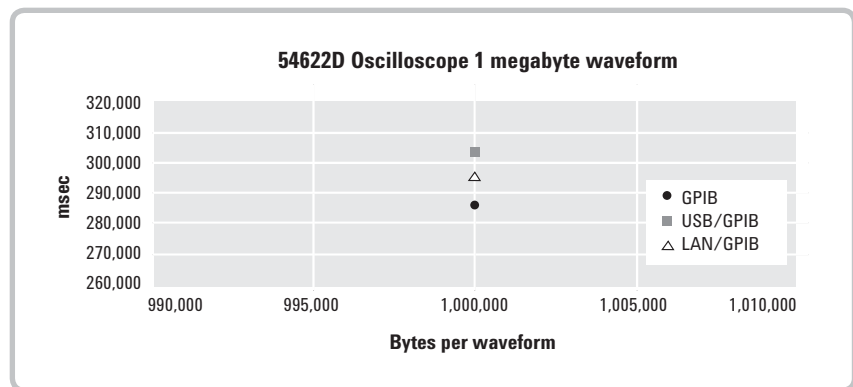


Figure 5. Data transfer time for 1 megabyte waveform

## Number of instruments that can be connected

The I/O products we are comparing all use or convert to the GPIB bus. The number of instruments that can be connected to each I/O interface is determined by the GPIB specification, which supports connecting up to 15 GPIB devices, 14 instruments, and 1 controller.

### 82357B USB/GPIB

Each USB/GPIB converter attached to the controller can support up to 14 instruments. With just two USB ports, two USB/GPIB converters, and GPIB instrument cables, the controller can easily control up to 28 instruments.

### E5810A LAN/GPIB

There is no limit to how many LAN/ GPIB converters are attached to the LAN or, how many LAN/GPIB converters are controlled with one PC. Each LAN/GPIB converter connected to the LAN can support up to 14 instruments.

### 82350B PCI GPIB

Each GPIB PC card installed in the controller's PCI slot(s) can support up to 14 instruments using additional GPIB cables.

## Additional software, cables, and connections

All of the Agilent I/O connectivity products come with a CD with the required Agilent I/O VISA/SICL libraries. Loading the libraries is easy and takes just a few minutes.

The 82350B GPIB and 82357B USB/GPIB I/O products come with everything you need to establish your controller I/O. You will need GPIB cables to connect to each of the instruments you plan to use.

The 82357B USB/GPIB can connect directly to one instrument with no additional GPIB cables required.

The E5810A LAN/GPIB requires a LAN, LAN connection, and a web browser installed on the controller in addition to the GPIB and/or RS232 cables to the instruments.

## Distances from the controller to instrument(s)

Test systems vary from a few instruments on a bench to many instruments at various locations. The distance from the PC to the test system instruments is most often determined by the I/O product(s) used. Details of the maximum allowable distance from the controller to the instruments, for each I/O product, are listed here.

### 82357B USB/GPIB

The distance from the PC to one device can be up to 20 meters or, the distance between each device connected can be up to 2 meters, whichever is less. USB hubs can also be used to extend the distances between instruments and/or the controller. The length of the supplied cable for the 82357B is 2.5 meters. The 82357B can be connected directly to an instrument that is 2.5 meters or less away from the controller or to a GPIB cable which would extend this distance.

### E5810A LAN/GPIB

The distance from the E5810A and the controller depends on the location of the devices and their connections to the LAN. The E5810A and controller can be at any two locations as long as they are connected to the same LAN. The instruments that are connected to the E5810A should be within 2 meters of each other since regular GPIB cables connect them.

### 82350B PCI GPIB

The distance from the controller to one device can be up to 20 meters or the distance between each device connected can be up to 2 meters, whichever is less.

## Advantages/disadvantages of each connectivity product

There are advantages and disadvantages other than cost that may contribute to your decision of which I/O interface would be beneficial to your test application. Here is some additional information that will help you make the decision of what is the best I/O interface for your test system.

I/O Interface	Advantages	Disadvantages
82357B USB/GPIB Converter	<ul style="list-style-type: none"> <li>• Easy to connect – no boards to install, no internet connection</li> <li>• Great for Laptops</li> <li>• Plug &amp; Play – automatically detected and configured</li> <li>• Hot-swappable (plug-in or unplug anytime)</li> </ul>	<ul style="list-style-type: none"> <li>• WINNT does not support USB connections</li> <li>• Slightly slower transfer rates for single read/writes</li> </ul>
E5810A LAN/GPIB Converter	<ul style="list-style-type: none"> <li>• Remote access to instruments/systems</li> <li>• Longer distances between instruments and/or PC</li> <li>• One PC can access many instruments and/or systems</li> <li>• On-board instrument web server makes it easy to connect to and control instruments</li> <li>• If LAN switches and/or routers are used with the instruments communication can be very fast (Transmit &amp; receive at the same time)</li> </ul>	<ul style="list-style-type: none"> <li>• Data throughput can be limited by the amount of traffic on the network</li> <li>• May require a dedicated LAN</li> <li>• Internet firewalls may be required</li> <li>• Instruments must be where they can connect to LAN</li> </ul>
82350B GPIB PCI Card	<ul style="list-style-type: none"> <li>• 30+ years of proven reliability</li> <li>• Nearly all test instruments have a GPIB interface</li> </ul>	<ul style="list-style-type: none"> <li>• The PC must be opened to install the GPIB card in a PCI slot</li> <li>• The number of installed GPIB cards is limited by the number of controller PCI slots available</li> </ul>

## Cost

The cost of the GPIB and USB/GPIB converter are comparable and fairly inexpensive. The LAN/GPIB converter is more expensive but worth the ability to integrate instruments onto a LAN.

		U.S. List
82357B	USB/GPIB Interface	\$526
E5810A	LAN/GPIB Gateway	\$1061
82350B	PCI GPIB Interface Card	\$511

*\*Prices are subject to change without notice*

## Glossary

**I/O Config** — a Utility used by the Agilent I/O Libraries to configure instrument I/O hardware interfaces. I/O Config is an interactive program that searches your system for installed interfaces that VISA and SICL support. You select the interface(s) you want to configure and I/O Config selects default parameters required to configure the interface(s).

## References

### Other Agilent literature

#### Data sheets

- *82357B USB/GPIB Interface*  
<http://www.agilent.com/find/82357b>
- *E5810A LAN/GPIB Gateway*  
<http://www.agilent.com/find/e5810a>
- *82350B PCI GPIB Card*  
<http://www.agilent.com/find/82350b>

#### Manuals

- *USB/LAN/GPIB Interface Connectivity Guide* (available at [http://we.home.agilent.com/upload/cmc\\_upload/connectivity\\_guide.pdf](http://we.home.agilent.com/upload/cmc_upload/connectivity_guide.pdf))

## Conclusion

As computers, test instruments and I/O interconnects evolve, it is important to be knowledgeable of what is new and how it may make test system development or upgrades more efficient. Test instruments are gradually becoming available with the standard computer busses, USB and/or LAN. The I/O converters 82357B USB/GPIB, and E5810A LAN/GPIB enables you to migrate your current GPIB instrument to the modern bus systems USB & LAN and benefit from their advantages today.







### Agilent Email Updates

[www.agilent.com/find/emailupdates](http://www.agilent.com/find/emailupdates)

Get the latest information on the products and applications you select.

### Agilent Channel Partners

[www.agilent.com/find/channelpartners](http://www.agilent.com/find/channelpartners)

Get the best of both worlds: Agilent's measurement expertise and product breadth, combined with channel partner convenience.

## Remove all doubt

Our repair and calibration services will get your equipment back to you, performing like new, when promised. You will get full value out of your Agilent equipment throughout its lifetime. Your equipment will be serviced by Agilent-trained technicians using the latest factory calibration procedures, automated repair diagnostics and genuine parts. You will always have the utmost confidence in your measurements. For information regarding self maintenance of this product, please contact your Agilent office.

Agilent offers a wide range of additional expert test and measurement services for your equipment, including initial start-up assistance, onsite education and training, as well as design, system integration, and project management.

For more information on repair and calibration services, go to:

[www.agilent.com/find/removealldoubt](http://www.agilent.com/find/removealldoubt)

For more information on Agilent Technologies' products, applications or services, please contact your local Agilent office. The complete list is available at:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

#### Americas

Canada	(877) 894 4414
Latin America	305 269 7500
United States	(800) 829 4444

#### Asia Pacific

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Thailand	1 800 226 008

#### Europe & Middle East

Austria	43 (0) 1 360 277 1571
Belgium	32 (0) 2 404 93 40
Denmark	45 70 13 15 15
Finland	358 (0) 10 855 2100
France	0825 010 700*
Germany	49 (0) 7031 464 6333
Ireland	1890 924 204
Israel	972-3-9288-504/544
Italy	39 02 92 60 8484
Netherlands	31 (0) 20 547 2111
Spain	34 (91) 631 3300
Sweden	0200-88 22 55
Switzerland	0800 80 53 53
United Kingdom	44 (0) 118 9276201

Other European Countries:

[www.agilent.com/find/contactus](http://www.agilent.com/find/contactus)

Revised: October 1, 2009

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2006-2009  
Printed in USA, November 9, 2009  
5989-0123EN

