


Pirani Gauge Display

PGD400

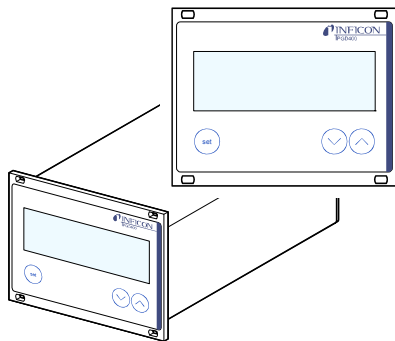


CE

Operating Manual
Incl. EC Declaration of Conformity

Product Identification

In all communications with INFICON, please specify the information on the product nameplate. For convenient reference copy that information into the space provided below:

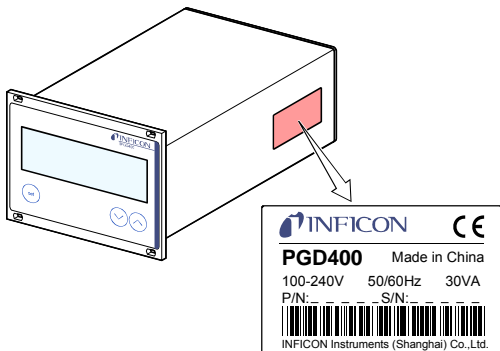

Validity

This document applies to products with part number 398-800.
The part number (PN) can be taken from the product nameplate.

This document is based on firmware number F-3.00.

If your unit does not work as described in this document, please check that it is equipped with the above firmware version (→ 25).

We reserve the right to make technical changes without prior notice.

All dimensions are indicated in mm.

Intended Use

The PGD400 is used together with INFICON gauges for total pressure measurement. All products must be operated in accordance with their respective Operating Manuals.



Scope of Delivery

- 1× Pirani Gauge Display
- 1× Power cord
- 1× Operating Manual

Contents

Product Identification	2
Validity	2
Intended Use	3
Scope of Delivery	3
1 Safety	6
1.1 Symbols Used	6
1.2 Personnel Qualifications	7
1.3 General Safety Instructions	7
1.4 Liability and Warranty	8
2 Technical Data	9
3 Installation	12
3.1 Rack Installation	12
3.2 Installation in a Control Panel	18
3.3 Use as Desk-Top Unit	19
3.4 Mains Power Connector	20
3.5 SENSOR Connector	21
3.6 OUTPUT Connector	22
4 Operation	24
4.1 Front Panel	24
4.2 Turning the PGD400 On and Off	25
4.3 Operating Modes	26
4.4 Gauge Identification	26
4.5 Measurement Mode	27
4.6 Parameter Mode	28
4.6.1 Parameters	30
5 Maintenance, Repair	32
6 Troubleshooting	33
7 Repair	35
8 Accessories	35
9 Storage	35
10 Disposal	36

Appendix	37
A: Default Parameters	37
B: Literature	38
EC Declaration of Conformity	39

For cross-references within this document, the symbol (→  XY) is used, for cross-references to further documents, listed under "Further Information", the symbol (→  [Z]).

1 Safety

1.1 Symbols Used



DANGER

Information on preventing any kind of physical injury.



WARNING

Information on preventing extensive equipment and environmental damage.



Caution

Information on correct handling or use. Disregard can lead to malfunctions or minor equipment damage.

Further symbols



The lamp/display is lit.



The lamp/display is dark.



Press the key (example: 'set' key).



Do not press any key

1.2 Personnel Qualifications



Skilled personnel

All work described in this document may only be carried out by persons who have suitable technical training and the necessary experience or who have been instructed by the end-user of the product.

1.3 General Safety Instructions

Adhere to the applicable regulations and take the necessary precautions for all work you are going to do and consider the safety instructions in this document.




DANGER



DANGER: mains voltage

Contact with live parts is extremely hazardous when any liquids penetrate into the unit.


Make sure no liquids penetrate into the equipment.

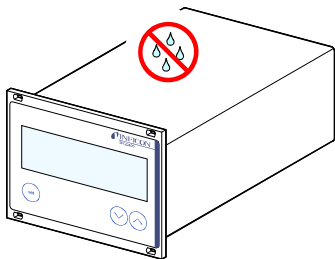

Disconnecting device

The disconnecting device must be readily identifiable and easily reached by the user.

To disconnect the controller from mains, you must unplug the mains cable.

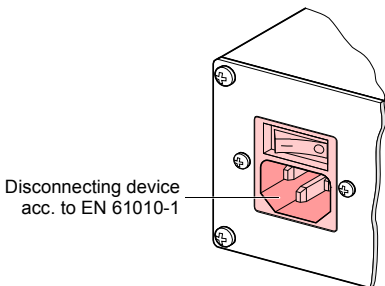

Communicate the safety instructions to all other users.

1.4 Liability and Warranty

INFICON assumes no liability and the warranty becomes null and void if the end-user or third parties

- disregard the information in this document
- use the product in a non-conforming manner
- make any kind of interventions (modifications, alterations etc.) on the product
- use the product with accessories not listed in the product documentation.

2 Technical Data

Mains specifications

Voltage	90 ... 250 VAC
Frequency	50 ... 60 Hz
Power consumption	≤30 VA
Overvoltage category	II
Protection class	1
Connection	European appliance connector IEC 320 C14

Ambiance

Temperature	
Storage	-20 ... +60 °C
Operation	+ 5 ... +50 °C
Relative humidity	≤80% up to +31 °C, decreasing to 50% at +40 °C
Use	indoors only max. altitude 2000 m NN
Pollution degree	II
Degree of protection	IP20 (EN 60529)

Compatible gauges

Number	1
Compatible types	
Pirani	PSG (PSG500, PSG500-S, PSG502-S, PSG510-S, PSG512-S), (PSG550, PSG552, PSG554)
Pirani/Capacitive	PCG (PCG550, PCG552, PCG554)
Cold cathode/Pirani	MPG (MPG400, MPG401, MPG500, MPG504)

Gauge connection

SENSOR connector	RJ45 (FCC68), female (pin assignment →  22)
------------------	---

Operation

Front panel via 3 keys

Measurement values

Display range PGD400

PSG	5×10^{-4} ... 1000 mbar
PCG	5×10^{-5} ... 1500 mbar
MPG	5×10^{-9} ... 1000 mbar

Measurement error

Gain error	$\leq 0.02\%$ FSr
Offset error	$\leq 0.05\%$ FSr

Measurement rate

30 / s

Display rate

50 / s

Filter time constant

150 ms ($f_g = 1$ Hz)

Pressure units

mbar, Pa, Torr

Gauge supply

Voltage

+24 VDC $\pm 5\%$

Current

750 mA

Power consumption

18 W

Fuse protection

900 mA with PTC element, self-resetting after turning the PGD400 off or disconnecting the gauge

Switching function

Number

1

Reaction delay

≤ 10 ms if switching threshold close to measurement value (for larger differences consider filter time constant).



Adjustment range

PSG	1×10^{-3} ... 500 mbar
PCG	1×10^{-4} ... 500 mbar
MPG	1×10^{-8} ... 500 mbar



Hysteresis

$\geq 10\%$ of measurement value


Switching function relay

Contact type	floating changeover contact
Load max.	60 VDC, 1 A (ohmic) 50 VAC, 5 A (ohmic)
Service life	
Mechanic	10 ⁸ cycles
Electric	10 ⁵ cycles (at maximum load)
Contact positions	→  23
OUTPUT connector	9-pin D-Sub, male (pin assignment →  23)

Analog output

Number	1
Voltage range	0 ... +10.3 V
Internal resistance	660 Ω
Measurement signal vs. pressure	depending on gauge (→  [1] ... [5])
OUTPUT connector	9-pin D-Sub, male (pin assignment →  23)

Dimensions [mm]

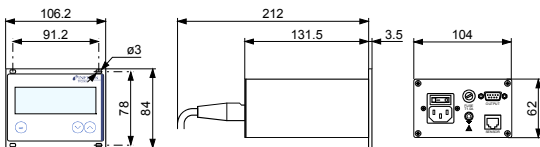

Use	For incorporation into a rack or control panel or as desk-top unit
Weight	0.85 kg

3 Installation



DANGER

DANGER: damaged product

Putting a damaged product into operation can be extremely hazardous.

In case of visible damages, make sure the product is not put into operation.

3.1 Rack Installation

The PGD400 is designed for installation into a 19" rack chassis adapter according to DIN 41 494. For this purpose, four collar screws and plastic sleeves are needed.



DANGER


DANGER: protection class of the rack

If the product is installed in a rack, it is likely to lower the protection class of the rack (protection against foreign bodies and water) e.g. the EN 60204-1 regulations for switching cabinets.

Take appropriate measures for the rack to meet the specifications of the protection class.


Guide rail

In order to reduce the mechanical strain on the front panel of the PGD400, preferably equip the rack chassis adapter with a guide rail.

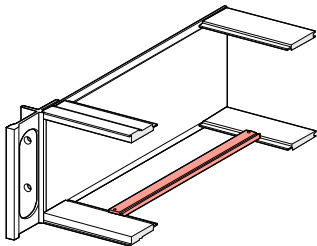


Slide rails

For safe and easy installation of heavy rack chassis adapters, preferably equip the rack frame with slide rails.

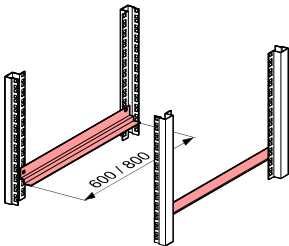

Mounting height

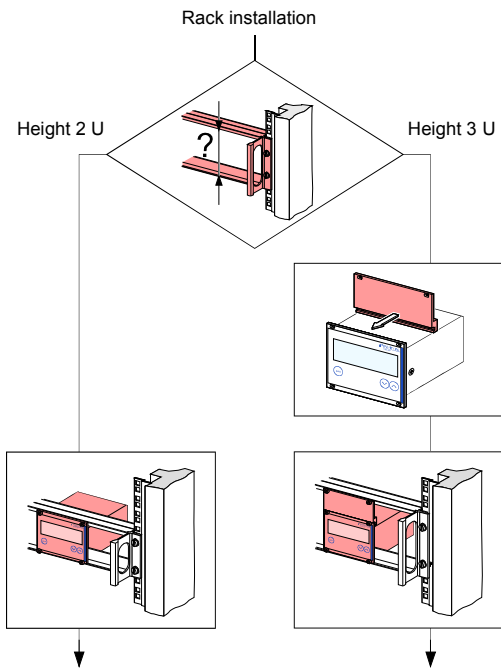


Height 2 U rack chassis adapter


- 1 Secure the rack chassis adapter in the rack frame.



The admissible maximum ambient temperature (→ 9) must not be exceeded neither the air circulation obstructed.

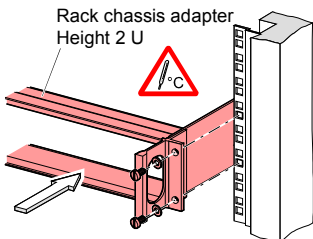


- 2 Slide the PGD400 into the adapter ...

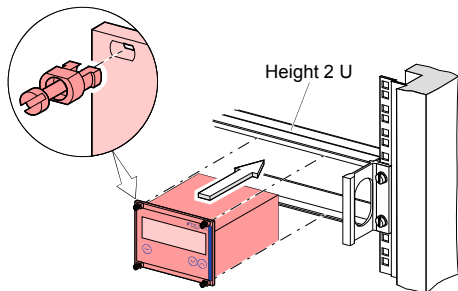


... and fasten the PGD400 to the rack chassis adapter using collar screws and plastic sleeves.


Height 3 U rack chassis adapter

For incorporation into a 19" rack chassis adapter, height 3, an adapter panel (incl. two collar screws and plastic sleeves) is available (→  35).


- 1 Secure the rack adapter in the rack frame.




The admissible maximum ambient temperature (→  9) must not be exceeded neither the air circulation obstructed.

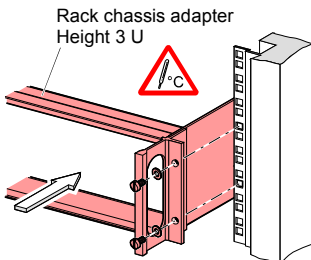

- 2** Mount the adapter panel as upper extension to the front panel of the PGD400 using collar screws and plastic sleeves.

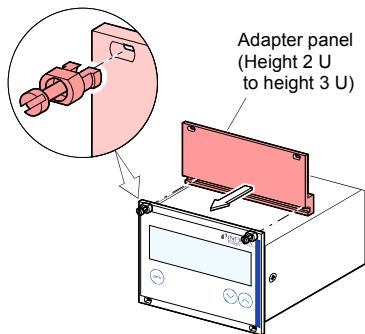

- 3** Slide the PGD400 into the rack chassis adapter ...

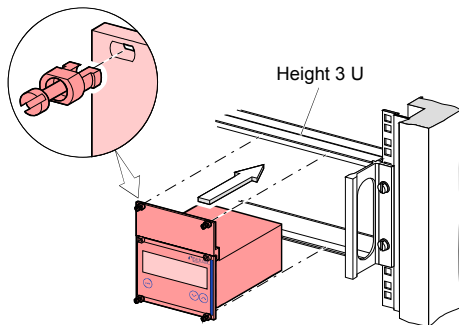

...and fasten the adapter panel to the rack chassis adapter using collar screws and plastic sleeves.

3.2 Installation in a Control Panel

The PGD400 is suited for incorporation into a control panel.


DANGER

DANGER: protection class of the control panel

If the product is installed in a rack, it is likely to lower the protection class of the rack (protection against foreign bodies and water) e.g. according to the EN 60204-1 regulations for switching cabinets.

Take appropriate measures for the control panel to meet the specifications of the protection class.


For mounting the PGD400 into a control panel, the following cut-out is required:

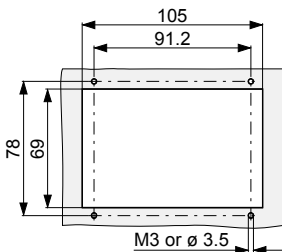

The admissible maximum ambient temperature (→ 9) must not be exceeded neither the air circulation obstructed.

For reducing the mechanical strain on the front panel, preferably support the unit.

Slide the PGD400 into the cut-out of the control panel ...

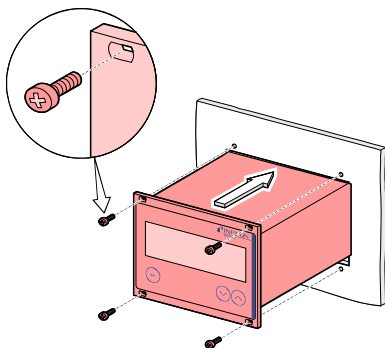


... and secure it with four M3 or equivalent screws.

3.3 Use as Desk-Top Unit

The PGD400 is also suited for use as desk-top unit.



Select a location where the admissible maximum ambient temperature (→  9) is not exceeded (e.g. due to sun irradiation).


3.4 Mains Power Connector

DANGER

DANGER: line voltage
 Incorrectly grounded products can be extremely hazardous in the event of a fault.
 Use only a 3-conductor power cable ($3 \times 1.5 \text{ mm}^2$) with protective ground. The power connector may only be plugged into a socket with a protective ground. The protection must not be nullified by an extension cable without protective ground.

The unit is supplied with a 2 m power cord. If the mains cable is not compatible with your system, use your own, suitable cable with protective ground.


The socket must be fuse-protected with $10 \text{ A}_{\text{max}}$

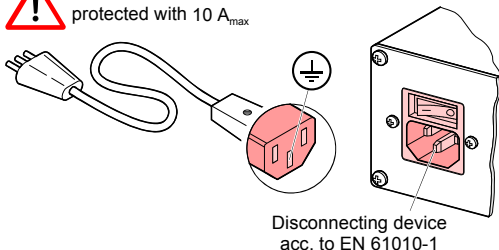


If the unit is installed in a switch cabinet, the mains voltage should be supplied and turned on via a central power distributor.

Grounding

On the rear of the unit, there is a screw which can be used to connect the unit to ground, e.g. using the grounding of the pumping station.

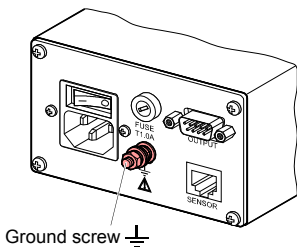

3.5 SENSOR Connector

Connect the gauge to the SENSOR connector on the rear of the unit. Use a screened 1:1 cable (electromagnetic compatibility). Make sure the gauge is compatible (→  9).


 **DANGER**



DANGER: protective low voltage
According to EN 61010, voltages exceeding 30 VAC or 60 VDC are hazardous.
Only connect a protective low voltage (SELV).

Pin assignment SENSOR

Pin assignment of the 8-pin RJ45 appliance connector:

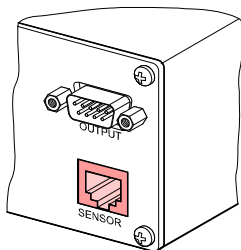

Pin	Signal	
1	Supply	+24 VDC
2	Supply common	GND
3	Signal input	(Measurement signal+)
4	not connected	
5	Signal common	(Measurement signal-)
6	not connected	
7	not connected	
8	not connected	

3.6 OUTPUT Connector

This connector allows to read the measurement signal and to evaluate state of the floating switching function.



Connect the peripheral components to the OUTPUT connector on the rear of the unit. Use a screened cable (electromagnetic compatibility).



STOP DANGER



DANGER: protective low voltage
 According to EN 61010, voltages exceeding 30 VAC or 60 VDC are hazardous.
 Only connect a protective low voltage (SELV).

Pin assignment, Contact positions OUTPUT

Pin assignment of the female 9-pin D-Sub appliance connector:

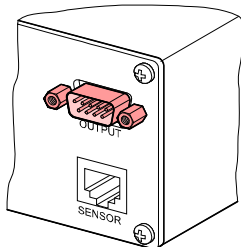


Pin	Signal
1	Analog output 0 ... +10 VDC
2	Chassis = GND
3	Pressure below threshold
4	
5	
9	not connected
8	not connected
6	not connected
7	not connected

4 Operation

4.1 Front Panel

Measurement value in floating point or exponential format or status messages

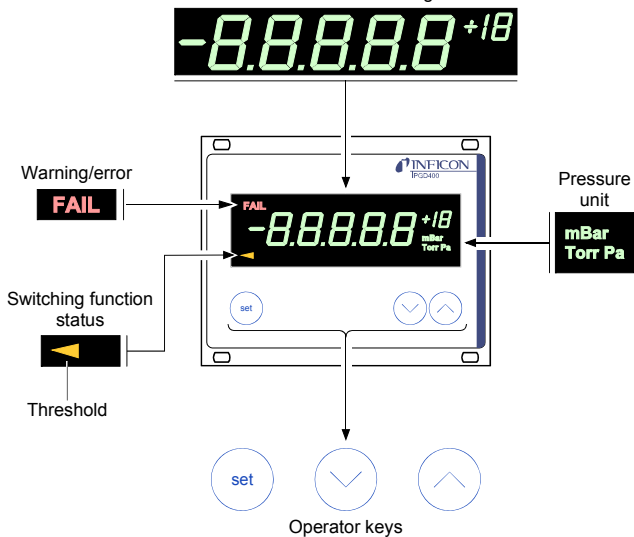


4.2 Turning the PGD400 On and Off

Make sure the PGD400 is correctly installed and the specifications in the Technical Data are met.

Turning the PGD400 on

The power switch is on the rear of the unit.

Turn the PGD400 on with the power switch (or centrally, via a switched power distributor, if the unit is incorporated in a rack).

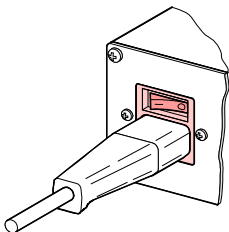

After power on, the PGD400 ...

- automatically performs a self-test
- displays the firmware version F-3.00 for 3 s
- identifies if a gauge is connected
- displays the gauge which was connected before the last power off
- activates the parameters that were in effect before the last power off
- switches to the measurement mode

Turning the PGD400 off



Turn the PGD400 off with the power switch (or centrally, via a switched power distributor, if the unit is incorporated in a rack).






Wait at least 10 s before turning the PGD400 on again in order for it to correctly initialize itself.

4.3 Operating Modes

The PGD400 works in the following operating modes:



- Measurement mode
for displaying measurement values or status messages
(→  27)
- Parameter mode
for entering or displaying parameters (→  28)

4.4 Gauge Identification

Pirani gauge (PSG500, PSG500-S, PSG502-S, PSG510-S, PSG512-S), (PSG550, PSG552, PSG554)	
Pirani/Capacitive gauge (PCG550, PCG552, PCG554)	
Cold cathode/Pirani gauge (MPG400, MPG401, MPG500, MPG504)	


4.5 Measurement Mode

The Measurement mode is the standard operating mode of the PGD400. Measurement values as well as status messages (→ 33) are displayed in this mode.

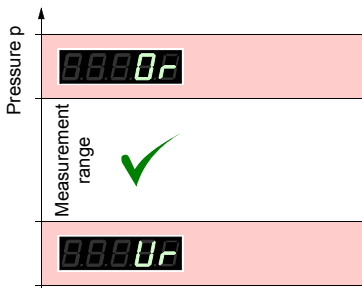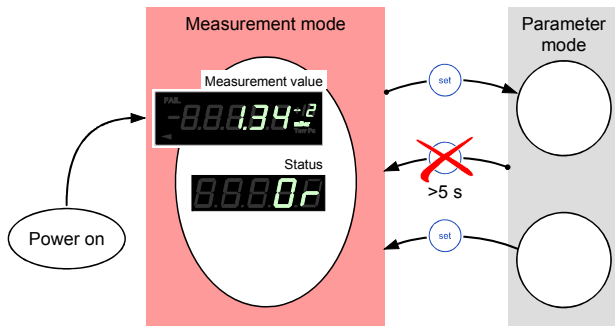

4.6 Parameter Mode

The Parameter mode is used for displaying, editing and entering parameter values.

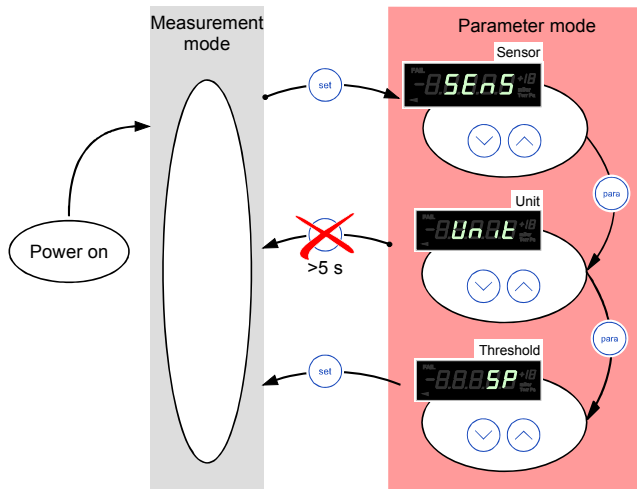

Selecting a parameter






⇒ The name of the parameter

e.g.: **5SENS**
Sensor

is displayed as long as the key is pressed or at least for 1 s.

Afterwards, the currently valid parameter value is displayed.

Editing the parameter value

- 
 ⇒ Press key <1 s:
 The value is increased / decreased by 1 increment.
- 
 Press key >1 s:
 The value is increased / decreased continuously.
- 
 ⇒ Save the modified parameter value.







Modifications of parameters come into effect immediately and are stored automatically.

4.6.1 Parameters






Gauge

Type of the connected gauge.

	Value
	<ul style="list-style-type: none"> ⇒ Pirani gauge (default) (PSG500, PSG500-S, PSG502-S, PSG510-S, PSG512-S), (PSG550, PSG552, PSG554) ⇒ Pirani/Capacitive gauge (PCG550, PCG552, PCG554) ⇒ Cold cathode/Pirani gauge (MPG400, MPG401, MPG500, MPG504)
	
	
	


Pressure unit

Unit of measured values, thresholds etc.

	Value
	<div style="display: flex; align-items: center; justify-content: center;">   </div> <ul style="list-style-type: none"> ⇒ mbar (default) ⇒ Torr ⇒ Pascal
	<div style="display: flex; align-items: center; justify-content: center;">  </div>
	<div style="display: flex; align-items: center; justify-content: center;">  </div>

Switching threshold

The PGD400 has a switching function with one adjustable threshold. The status of the switching function is displayed on the front panel (→ [24](#)) and can be evaluated via the floating contact at the CONTROL connector (→ [22](#)).

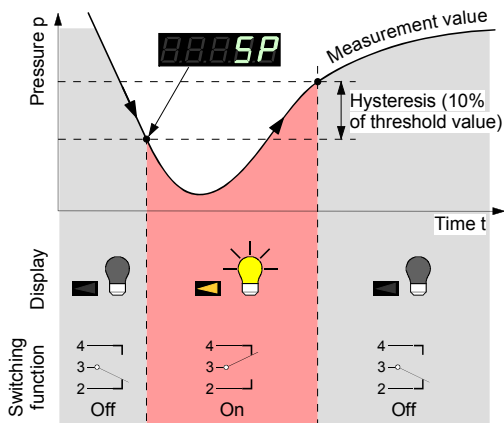


	Value
	The switching threshold defines the pressure at which the switching function is activated when the pressure is dropping.
e.g.:	default PSG gauges
e.g.:	default PCG gauges
e.g.:	default MPG gauges

5 Maintenance, Repair

The product requires no maintenance.

Cleaning the PGD400

For cleaning the outside of the PGD400, a slightly moist cloth will usually do. Do not use any aggressive or scouring cleaning agents.

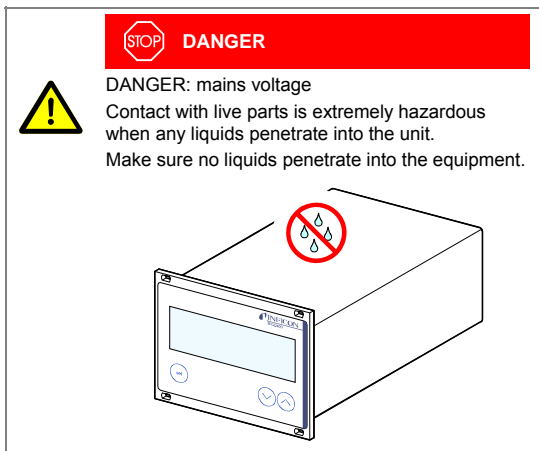



6 Troubleshooting







Signalization of errors



Error messages

	Possible cause and remedy / acknowledgement
	Interruption or instability in sensor line or connector (Sensor error).
	Pirani error (sensor defective). ⇒ Replace the sensor

Status messages

	Possible cause and remedy / acknowledgement
	The output signal of the gauge is outside the measurement range (depending on gauge, →  [1] ... [5]). ⇒ Adjust the gauge (→  [1] ... [5]).
	The output signal of the gauge is outside the measurement range (depending on gauge, →  [1] ... [5]). ⇒ Adjust the gauge (→  [1] ... [5]).

Technical support



If the problem persists after the message has been acknowledged for several times and/or the gauge has been exchanged, please contact your local INFICON service center.

7 Repair



Please contact your local INFICON service center.

INFICON assumes no liability and the warranty becomes null and void if repair work is carried out by the end-user or third parties.

8 Accessories

	Ordering number
Adapter panel for installation into a 19" rack chassis adapter, height 3 U	398-499

9 Storage




Caution



Caution: electronic component

Inappropriate storage (static electricity, humidity etc.) can damage electronic components.

Store the product in a bag or container. Observe the corresponding specifications in the technical data (→  9).

10 Disposal



DANGER



DANGER: contaminated parts

Contaminated parts can be detrimental to health and environment.

Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.



WARNING



WARNING: substances detrimental to the environment

Products or parts thereof (mechanical and electric components, operating fluids etc.) can be detrimental to the environment.

Dispose of such substances in accordance with the relevant local regulations.

Separating the components

After disassembling the product, separate its components according to the following criteria:

- Contaminated components




Contaminated components (radioactive, toxic, caustic or biological hazard etc.) must be decontaminated in accordance with the relevant national regulations, separated according to their materials, and disposed of.

- Other components

Such components must be separated according to their materials and recycled.






Appendix

A: Default Parameters

	Default	User	
	PSG		
	1.0 ⁻³ mbar *)		
	mbar		

*) PCG: 1.0⁻⁴ mbar
 MPG: 1.0⁻⁸ mbar

B: Literature

-  [1] www.inficon.com
 Operating Manual
 Pirani Standard Gauge
 PSG500, PSG500-S, PSG502-S,
 PSG510-S, PSG512-S
 tina44d1 (German)
 tina44e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
-  [2] www.inficon.com
 Operating Manual
 Pirani Standard Gauge
 PSG550, PSG552, PSG554
 tina60d1 (German)
 tina60e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
-  [3] www.inficon.com
 Operating Manual
 Pirani Capacitance Diaphragm Gauge
 PCG550, PCG552, PCG554
 tina56d1 (German)
 tina56e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
-  [4] www.inficon.com
 Operating Manual
 Inverted Magnetron Pirani Gauge
 MPG400, MPG401
 tina48d1 (German)
 tina48e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein
-  [5] www.inficon.com
 Operating Manual
 Cold Cathode Pirani Gauge
 MPG500, MPG504
 tina83d1 (German)
 tina83e1 (English)
 INFICON AG, LI-9496 Balzers, Liechtenstein

EC Declaration of Conformity



We, INFICON, hereby declare that the equipment mentioned below complies with the provisions of the Directive relating to electrical equipment designed for use within certain voltage limits 2006/95/EC, the Directive relating to electromagnetic compatibility 2004/108/EC and the Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment 2011/65/EU.

Pirani Gauge Display

PGD400

Standards

Harmonized and international/national standards and specifications:

- EN 61010-1:2010 (Safety requirements for electrical equipment for measurement, control and laboratory use)
- EN 61326-1:2006 (Electrical equipment for measurement, control and laboratory use; general EMC requirements)
- EN 61326-2-2:2006 (Electrical equipment for measurement, control and laboratory use; particular EMC requirements)

Signatures

INFICON AG, Balzers

11 December 2013



Dr. Urs Wälchli
Managing Director

11 December 2013



Markus Truniger
Product Manager

Original: English tinb14e1-a (2013-12)



tinb14e1-a



LI-9496 Balzers
Liechtenstein
Tel +423 / 388 3111
Fax +423 / 388 3700
reachus@inficon.com

www.inficon.com